
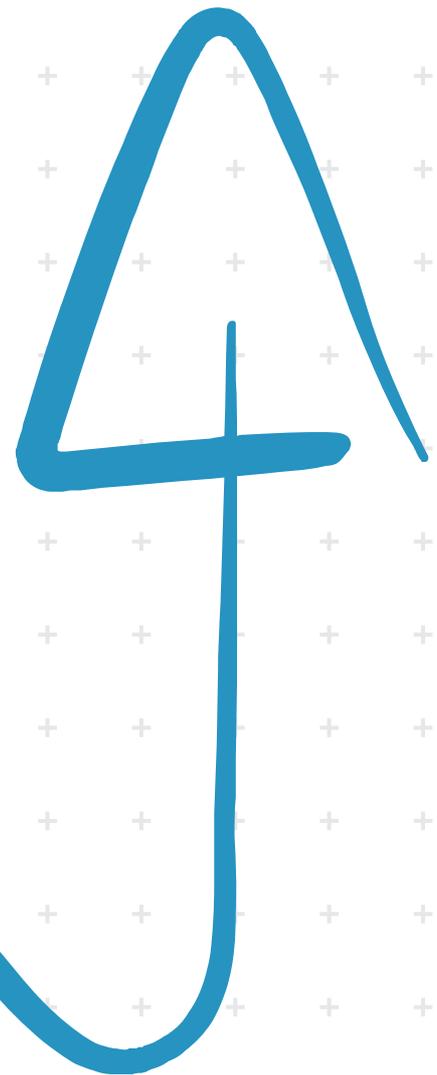


Operation Guide

TASKalfa 2321 TASKalfa 2021

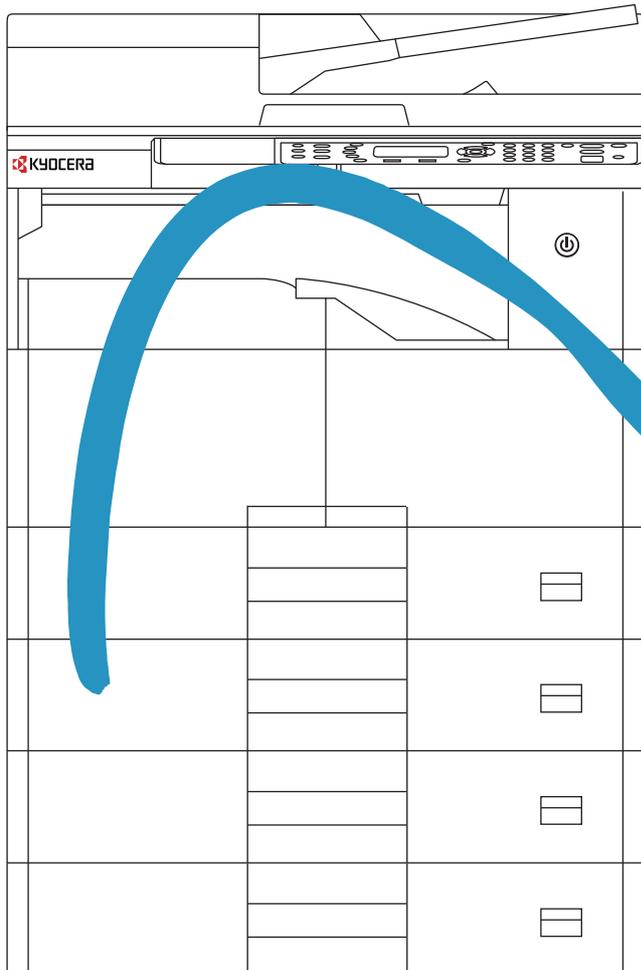

Preface

This Operation Guide is intended to help you operate the machine correctly, perform routine maintenance, and take simple troubleshooting measures as needed so that the machine can always be used in the optimum condition.

Please read this Operation Guide before using the machine.


We recommend the use of our own brand supplies.

Please use our genuine toner containers, which have passed rigorous quality control testing.

The use of non-genuine toner containers may cause failure.

We will not be liable for any damages caused by the use of third party supplies in this machine.

A label is affixed to our genuine supplies as shown below.

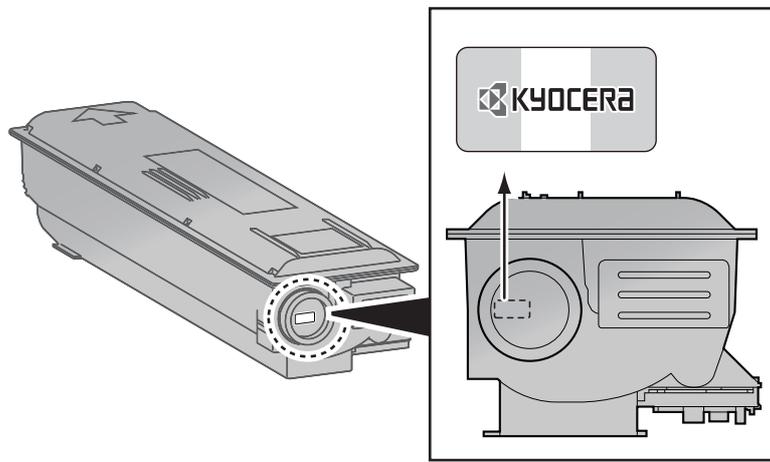

Contents

Preface	i
Overview	vi
Machine Features	vii
Guides Provided with the Machine	xi
About the Operation Guide (this Guide)	xii
Structure of the guide	xii
Conventions Used in This Guide	xiii
Menu Map	xvi

1 Legal and Safety Information 1-1

Notice	1-2
Safety Conventions in This Guide	1-2
Environment	1-3
Precautions for Use	1-3
Laser Safety (Europe)	1-4
Safety Instructions Regarding the Disconnection of Power	1-5
Legal Restriction on Copying/Scanning	1-5
EN ISO 7779	1-5
EK1-ITB 2000	1-5
Legal Information	1-6
Energy Saving Control Function	1-7
Automatic 2-Sided Copy Function	1-7
Resource Saving - Paper	1-7
Environmental benefits of "Power Management"	1-7

2 Installing and Setting up the Machine 2-1

Part Names	2-2
Machine Exterior	2-2
Connectors/Interior	2-4
With Optional Equipments Attached	2-5
Connecting the Machine and Other Devices	2-6
Connecting Cables	2-7
Connecting USB Cable	2-7
Connecting LAN Cable	2-8
Connecting the Power Cable	2-8
Power On/Off	2-9
Power On	2-9
Power Off	2-9
Administrator User Name and Password	2-10
Administrator Setting	2-11
Default Settings of the Machine	2-13
Setting Date and Time	2-13
Network Setup	2-15
Setting Energy Saver Function	2-20
Installing Software	2-25
Software on Product Library Disc (Windows)	2-26
Installing Software in Windows	2-27
Uninstalling the Software	2-32
Setting the Shared Printer and FAX	2-33
Installing Software in Mac Computer	2-34
Setting KYOCERA Client Tool	2-36
Setting WIA Driver	2-43
Checking the Counter	2-44
Command Center RX	2-45
Accessing Command Center RX	2-46


3	Preparation before Use	3-1
	Using the Operation Panel	3-2
	Operation Panel Keys	3-2
	Operation Method	3-3
	Display for Originals and Paper	3-4
	Help Screen	3-4
	Loading Paper	3-5
	Precaution for Loading Paper	3-6
	Loading in the Cassettes	3-7
	Loading Paper in the Multi Purpose Tray	3-10
	Specifying Paper Size and Media Type	3-13
4	Printing from PC	4-1
	Printing from PC	4-2
	Printer Driver Print Settings	4-5
	Printer Driver Help	4-6
	Changing the Default Printer Driver Settings (Windows 10)	4-6
	Canceling Jobs	4-6
	Using Print Box	4-8
	Flow of Operations of Print Box	4-8
	Saving Document to a Print Box	4-12
	Printing Document from Print Box	4-13
5	Operation on the Machine	5-1
	Loading Originals	5-2
	Placing Originals on the Platen	5-2
	Loading Originals in the Document Processor (Option)	5-3
	Checking the Equipment's Serial Number	5-5
	Copying	5-6
	Basic Operation	5-6
	Interrupt Copy	5-8
	ID Card Copy	5-9
	Using Various Functions	5-12
	Program	5-27
	Select Key Settings	5-31
	Canceling Jobs	5-31
	Scanning	5-33
	Flow of Scan Operations	5-33
	Scan the Image to the Specified Destination	5-38
	Scan the Image by Selecting the Destination (Quick Scan)	5-41
	Scanning using TWAIN	5-42
	Canceling Jobs	5-43
	How to use the FAX Function	5-44
6	Checking the Status	6-1
	Checking Job Status	6-2
	Checking Job History	6-6
	Pause and Resumption of Jobs	6-9
	Canceling the Jobs in Printing/Waiting	6-10
	Checking Device Status	6-12
	Checking the Remaining Amount of Toner and Paper	6-13
	Checking from KYOCERA Client Tool	6-14

7	System Menu and KYOCERA Client Tool	7-1
	Default Settings on the Machine (System Menu)	7-2
	System Menu Settings	7-3
	Report	7-5
	System	7-6
	Admin/Accounting	7-10
	Common Settings	7-10
	Copy	7-20
	Printer	7-20
	FAX	7-20
	Edit Destination	7-21
	Adjust/Maint. (Adjustment/Maintenance)	7-21
	Default Settings on the PC (KYOCERA Client Tool)	7-22
	Operation Method	7-22
	Screen Overview	7-23
	Configuring the Administrative Settings	7-25
	Scan Destination Settings	7-26
	Quick Scan/TWAIN Settings	7-29
	Print Box Settings	7-32
8	Job Accounting	8-1
	Overview of Job Accounting	8-2
	To manage the job account from PC	8-2
	Enabling Job Accounting	8-4
	Setting an Account	8-5
	Adding an Account	8-5
	Restricting the Use of the Machine	8-7
	Editing an Account	8-8
	Deleting an Account	8-9
	Job Accounting when Sharing the Printer	8-10
	Job Accounting for Network Printing	8-12
	Job Accounting for Scan Using Quick Scan/TWAIN	8-13
	Job Accounting for Scan Using WIA	8-14
	Job Accounting for the FAX Transmitted from a PC	8-15
	Unknown ID Job	8-16
	Configuring Job Accounting	8-17
	Default Setting	8-17
	Counting the Number of Pages Printed	8-19
	Account. Report (Accounting Report)	8-20
	Using Job Accounting	8-22
	Login/Logout	8-22
	Password Protect Administrator Settings	8-22
9	Troubleshooting	9-1
	Regular Maintenance	9-2
	Cleaning	9-2
	Toner Container Replacement	9-3
	Waste Toner Box Replacement	9-6
	Troubleshooting	9-8
	Solving Malfunctions	9-8
	Responding to Messages	9-11
	Clearing Paper Jams	9-16
10	Appendix	10-1
	Optional Equipment	10-2
	Overview of Optional Equipment	10-2

Character Entry Method	10-4
Using the Keys	10-4
Selecting Type of Characters	10-5
Characters That Can be Entered Using the Numeric Keys	10-5
Entering Symbols	10-6
Entering Characters	10-6
Paper	10-8
Basic Paper Specifications	10-8
Choosing the Appropriate Paper	10-9
Special Paper	10-12
Specifications	10-16
Common Functions	10-16
Copy Functions	10-17
Printer Functions	10-18
Scanner Functions	10-18
Document Processor (Reverse Automatic) (Option)	10-18
Paper Feeder (300-sheet) (Option)	10-19
Duplex Unit (Option)	10-19
Network Interface Kit (Option)	10-19
Glossary	10-20
Index	Index-1

Overview

This machine has copy and print functions equipped as standard and can save scanned images on your computer. A fax function is available as an option.

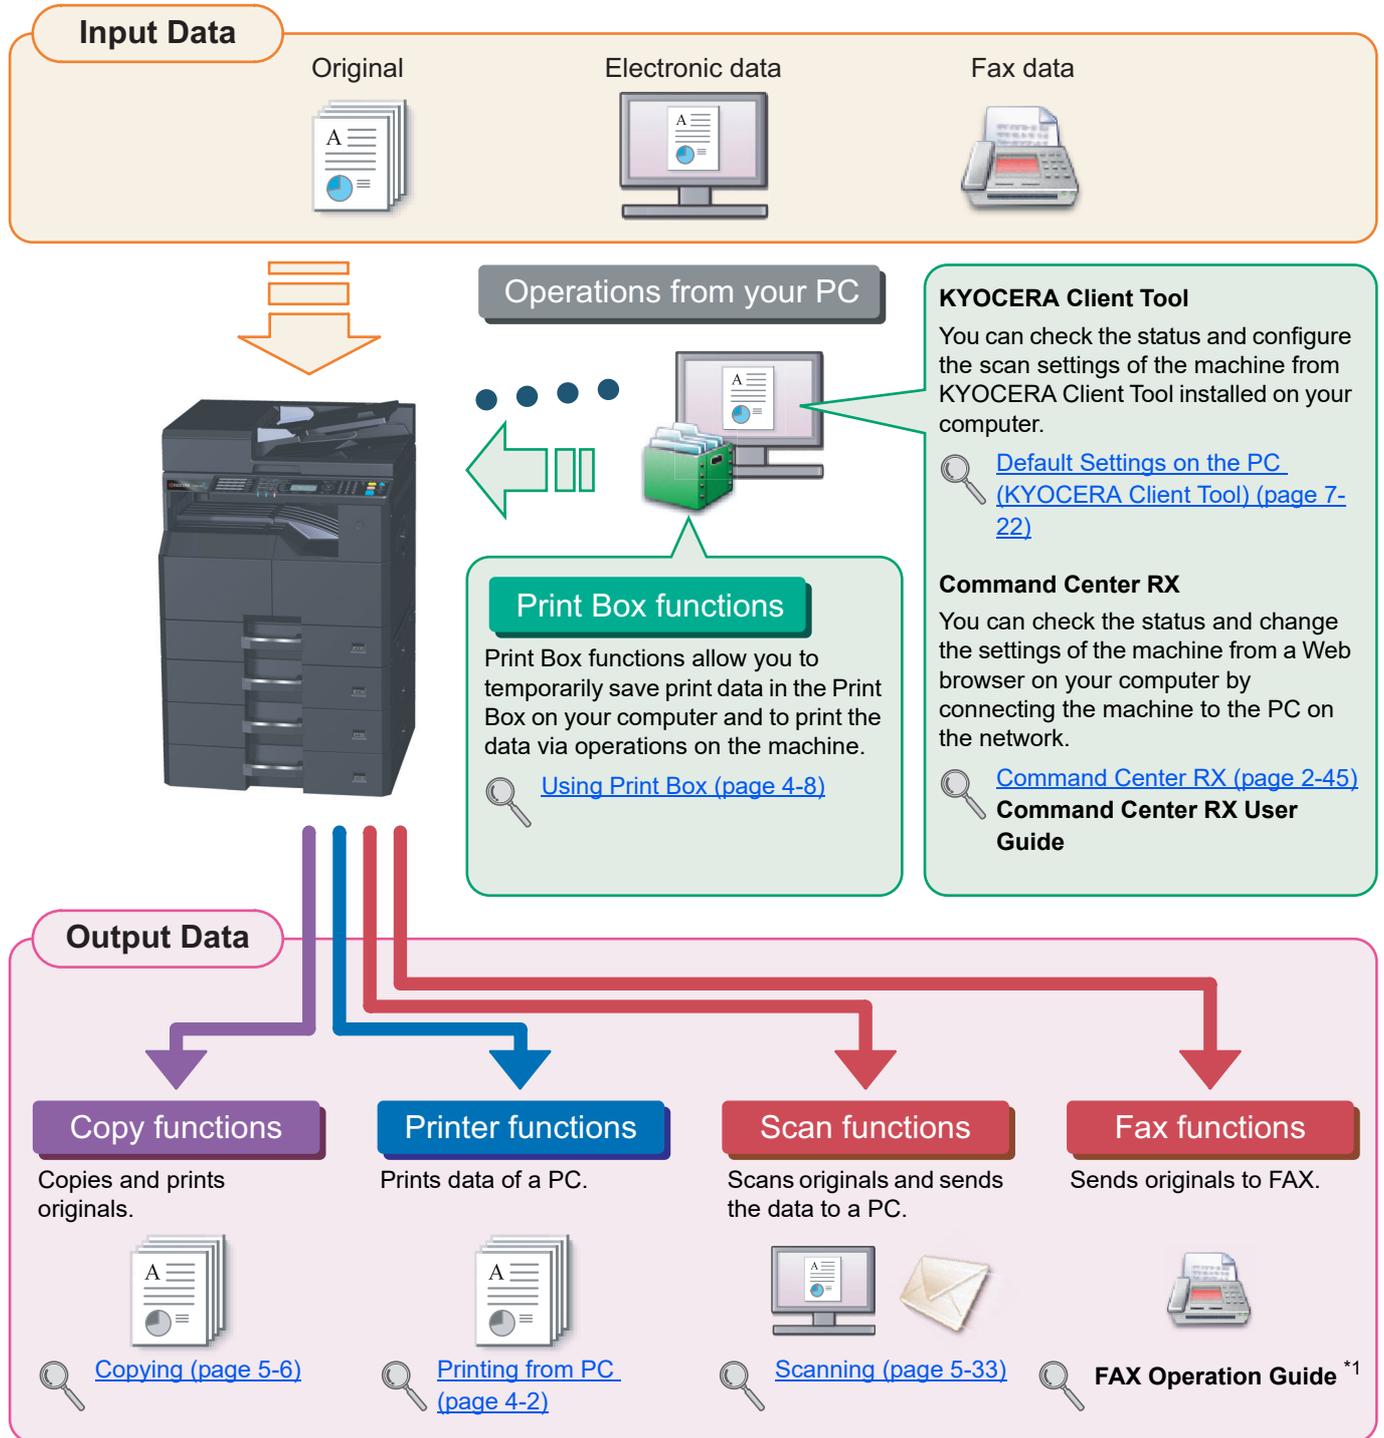




*1 FAX is an option.



NOTE



- Before using the machine, be sure to read [Legal and Safety Information on page 1-1](#).
- For preparations for use of the machine such as cable connections and software installation, refer to [Installing and Setting up the Machine on page 2-1](#).
- For information on how to use the operation panel, and load paper, refer to [Preparation before Use on page 3-1](#).




Machine Features




The machine is equipped with many useful functions. Here are some examples. For details, refer to [Operation on the Machine on page 5-1](#).


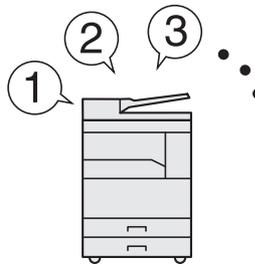
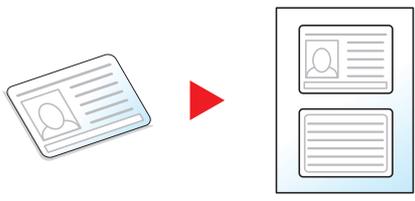
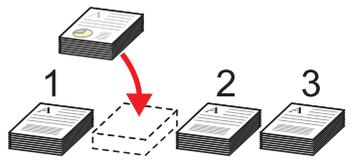
Optimize your office workflow		
<p>Access to frequently used functions with just one touch (Program)</p>  <p>You can preset frequently used functions. Once you set the functions as a preset program, all you need to do is press the program number to call up the functions. Using this program brings the same results even if operated by another person.</p> <p> Program (page 5-27)</p>	<p>Copy both sides of an ID card on a single sheet (ID Card Copy)</p>  <p>You can copy the front and back sides of an ID card on a single sheet of paper.</p> <p> ID Card Copy (page 5-9)</p>	<p>Interrupt other running jobs and execute your copy job immediately (Interrupt Copy)</p>  <p>You can interrupt other running jobs and execute your copy job immediately.</p> <p>When other users are copying a large number of sheets, this function allows you to interrupt those jobs and make your copies immediately.</p> <p>When the interruption copy ends, the machine resumes the paused print jobs.</p> <p> Interrupt Copy (page 5-8)</p>


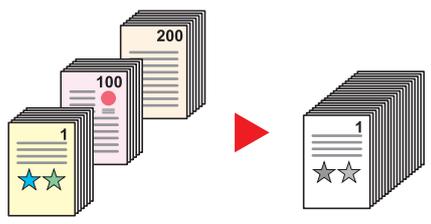
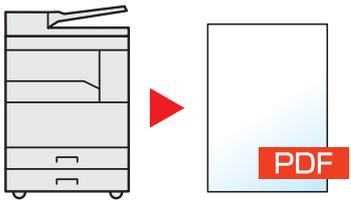
Optimize your office workflow		
<p>Scan originals of different sizes at a time (Mixed Size Originals)</p>  <p>It is useful when preparing conference materials.</p> <p>You can set the different sized originals at one time so you don't need to reset the originals regardless of size.</p> <p> Mixed Size Orig. (Mixed Size Originals) (page 5-23)</p>	<p>Scan a large number of originals in separate batches and produce as one job (Continuous Scan)</p>  <p>It is useful when preparing many-page handouts.</p> <p>When a large number of originals cannot be placed in the document processor at one time, the originals can be scanned in separate batches and then copied as one job.</p> <p> Continuous Scan (page 5-26)</p>	<p>Scan documents into high-compression PDF files (High-Compression PDF)</p>  <p>You can create documents in high-quality color PDF format with file capacities as small as black-and-white documents.</p> <p>This function allows you to scan documents into high-compression PDF files while maintaining the legibility.</p> <p>As full-color documents can be compressed to files as small as black-and-white documents, they are suitable for mail attachments.</p> <p> Quick Scan/TWAIN Settings (page 7-29)</p>

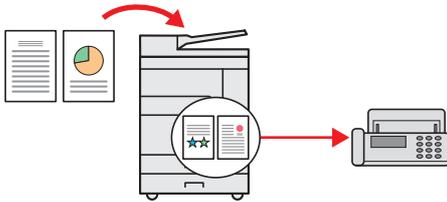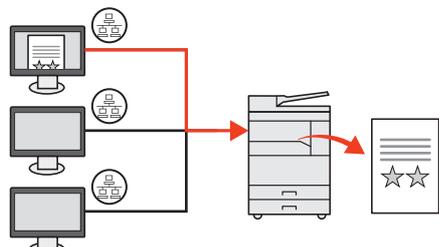
Optimize your office workflow		
<p>Separate each page of a scanned document into a single file (File separation)</p>  <p>You can create a single file for each page of a document.</p> <p>A single file is created and saved for each page of the original that was scanned.</p> <p>A three-digit serial number such as abc_001.pdf or abc_002.pdf is attached to the end of the file name.</p> <p> Quick Scan/TWAIN Settings (page 7-29)</p>	<p>Reserve FAX transmission (Standby Transmission)</p>  <p>You can reserve the next transmission by scanning an original during communication. When communication is finished, the reserved transmission automatically starts.</p> <p> FAX Operation Guide^{*1}</p> <p>^{*1} FAX is an option.</p>	<p>Use the machine by connecting the machine to the network (Network Printing)</p>  <p>The machine can be used as a network printer by connecting the machine to the network.</p> <p> Connecting the Machine and Other Devices (page 2-6)</p> <p>Also, the administrator can effectively check the machine settings and status by remotely accessing the machine from the computer.</p> <p> Command Center RX User Guide</p>

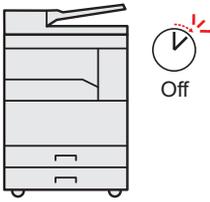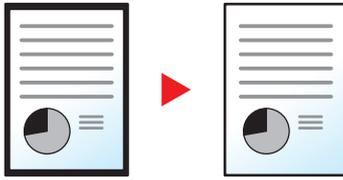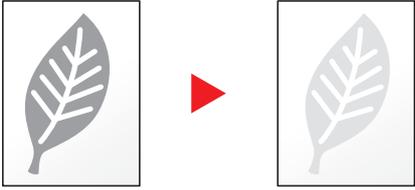Save energy and cost		
<p>Save energy as needed (Sleep / Power Off)</p>  <p>The machine is equipped with the Energy Saver function that automatically turns off the power or puts the machine into Sleep Mode.</p> <p> Setting Energy Saver Function (page 2-20)</p>	<p>Erase black shadows that appear at the edges of a copy (Border Erase)</p>  <p>This function allows you to print documents without copying unnecessary portions so that you can save toner consumption.</p> <p>You can remove the shadows that appear around the border of a copy when the original is scanned. You can also remove the shadows that appear at the border and at the center of the copy when a book is scanned. This creates a more attractive document.</p> <p> Border Erase (page 5-25)</p>	<p>Use less toner for printing (EcoPrint)</p>  <p>You can save toner consumption with this function.</p> <p>When you only need to check the printed content, such as a trial print run or documents for internal confirmation, use this function to save toner.</p> <p>Use this function when a high-quality print is not required.</p> <p> EcoPrint (page 5-23)</p>

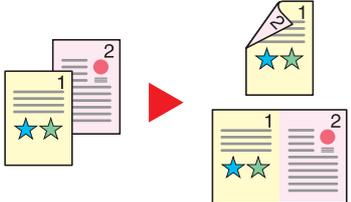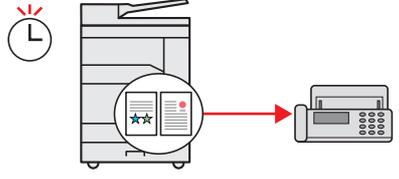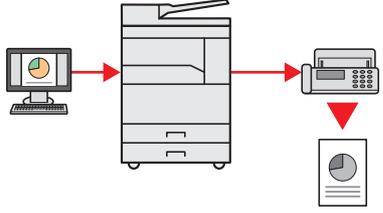Save energy and cost		
<p>Print multiple originals onto one sheet (Duplex / Combine)</p>  <p>You can print originals on both sides of the paper. You can also print multiple originals onto one sheet.</p> <p> Combine (page 5-17) Duplex (page 5-14)</p>	<p>Send a FAX to reduce the communication cost (FAX Delayed Transmission)</p>  <p>You can reduce the communication cost with this function.</p> <p>The communication cost can be reduced by setting the timer to the time period during which the communication cost is low.</p> <p> FAX Operation Guide^{*1}</p> <p>^{*1} FAX is an option.</p>	<p>Send a FAX from a PC (Sending FAX from PC)</p>  <p>You can save the paper used for sending a FAX with this function.</p> <p>You can send a file to be faxed from the PC without printing the file, so that you can reduce the number of pieces of paper and perform sending jobs efficiently.</p> <p> FAX Operation Guide^{*1}</p> <p>^{*1} FAX is an option.</p>

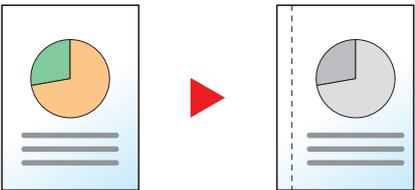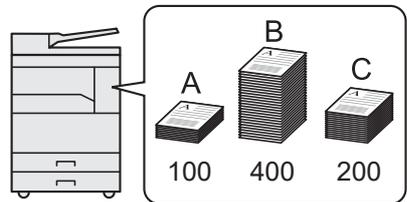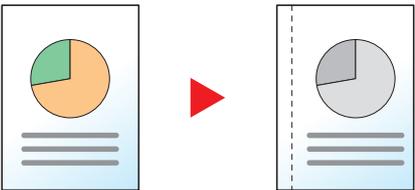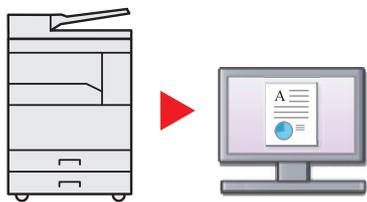Create attractive documents	Strengthen security
<p>Add margins for stapling (Margin)</p>  <p>This is convenient when preparing materials to be filed.</p> <p>The copy image can be shifted to add a margin for binding the copies.</p> <p>When the copies are two-sided, the margins on the front and back sides can be aligned to the same position.</p> <p> Margin (page 5-24)</p>	<p>Manage the copy/print count by account (Job Accounting)</p>  <p>You can check and restrict the copy/print count by account by assigning an account ID to each account.</p> <p> Overview of Job Accounting (page 8-2)</p>
<p>Add margins for stapling (Margin)</p>  <p>This is convenient when preparing materials to be filed.</p> <p>The copy image can be shifted to add a margin for binding the copies.</p> <p>When the copies are two-sided, the margins on the front and back sides can be aligned to the same position.</p> <p> Margin (page 5-24)</p>	<p>Scan originals in color and send them to a PC (Scan)</p>  <p>You can scan originals and convert them into electronic data, such as a color PDF.</p> <p> Scanning (page 5-33)</p>

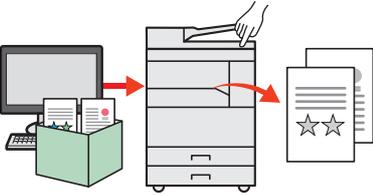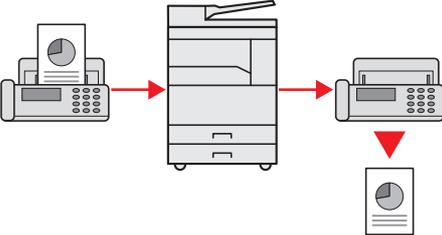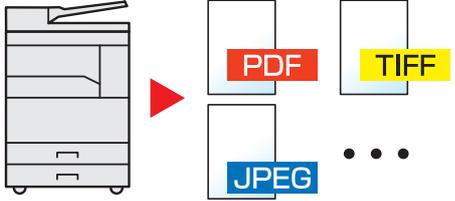Strengthen security	Use functions more efficiently	
<p>Print documents while concealing their contents from others (Print Box)</p>  <p>You can temporarily save a printer document in a Print Box of your computer. You can prevent another person from seeing that document by executing the printing at the machine. With a PIN code assigned to the Print Box, you can further strengthen security.</p> <p> Using Print Box (page 4-8)</p>	<p>Forward the received file (Memory Forwarding)</p>  <p>You can automatically forward the received FAX to another FAX. The destination can be specified depending on the time period.</p> <p> FAX Operation Guide *1</p> <p>*1 FAX is an option.</p>	<p>Specify an image file format (File format)</p>  <p>You can select from various file formats when storing images.</p> <p> Quick Scan Settings (page 7-31)</p>

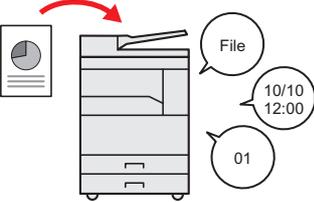Use functions more efficiently
<p>Add a file name (File Name Entry)</p>  <p>This function makes it easier to check the job history and status. You can add a name, date, and job number to a job.</p> <p> File Name Entry (page 5-26)</p>

Guides Provided with the Machine

The following guides are provided with the machine. Refer to each guide as needed. The contents of the guides are subject to change without notice for the purpose of improvement of machine performance.

Printed guides

Start using the machine quickly



Quick Guide

Explains how to use basic functions of the machine.

For safe use of the machine



Safety Guide

Provides safety and cautionary information for installation and use of the machine. Be sure to read this guide before using the machine.

Safety Guide (TASKalfa 2321/TASKalfa 2021)

Indicates the space required for machine installation, and describes the cautionary labels and other safety information. Be sure to read this guide before using the machine.

Guides (PDF) on the Product Library disc

Use the machine thoughtfully



Operation Guide (This Guide)

Explains how to load paper and perform copy, print and scan operations, and indicates default settings and other information.

Print data from a computer



Printer Driver User Guide

Explains how to install the printer driver and use the printer function.

Use KYOCERA Client Tool



KYOCERA Client Tool User Guide

Explains how to use KYOCERA Client Tool.

Use the fax functions



FAX Operation Guide

Explains how to use the fax function.

Send faxes from PC



FAX Driver User Guide

Explains how to install and use the FAX Driver in order to use FAX Driver functionality.

Easily register machine information and configure settings



Command Center RX User Guide

Explains how to access the machine from a Web browser on your computer to check and change settings.

Monitor the machine and printers on the network



KYOCERA Net Viewer User Guide

Explains how to monitor your network printing system (the machine) with KYOCERA Net Viewer.

Install the Adobe Reader (version 8.0 or later) to view the manuals on the Product Library disc.

About the Operation Guide (this Guide)

Structure of the guide

The Operation Guide contains the following chapters.


Chapter		Contents
1	Legal and Safety Information	Provides precautions regarding use of the machine and trademark information.
2	Installing and Setting up the Machine	Explains part names, cable connections, installation of the software, and other matters related to administration of the machine.
3	Preparation before Use	Explains preparations and settings that are required in order to use the machine, such as how to use the operation panel, and load paper.
4	Printing from PC	Explains functions that are available when the machine is used as a printer.
5	Operation on the Machine	Explains the basic procedures for using the machine, such as placing originals, making copies, and scanning.
6	Checking the Status	Explains how to check the status of a job and the job history, and how to cancel jobs being printed or waiting to print. Also explains how to check paper and toner levels, and how to check the device status.
7	System Menu and KYOCERA Client Tool	Explains System Menu related to overall machine operation and utilities.
8	Job Accounting	Explains job accounting.
9	Troubleshooting	Explains what to do when toner runs out, an error is displayed, or a paper jam or other problem occurs.
10	Appendix	Describes convenient options that are available for the machine. Provides information on media types and paper sizes, and gives a glossary of terms. Explains how to enter characters, and lists the specifications of the machine.

Conventions Used in This Guide

Adobe Reader X is used as an example in the explanations below.

Click an item in the Table of Contents to jump to the corresponding page.

Click to move from the current page to the previously displayed page. This is convenient when you want to return to the page from which you jumped to the current page.

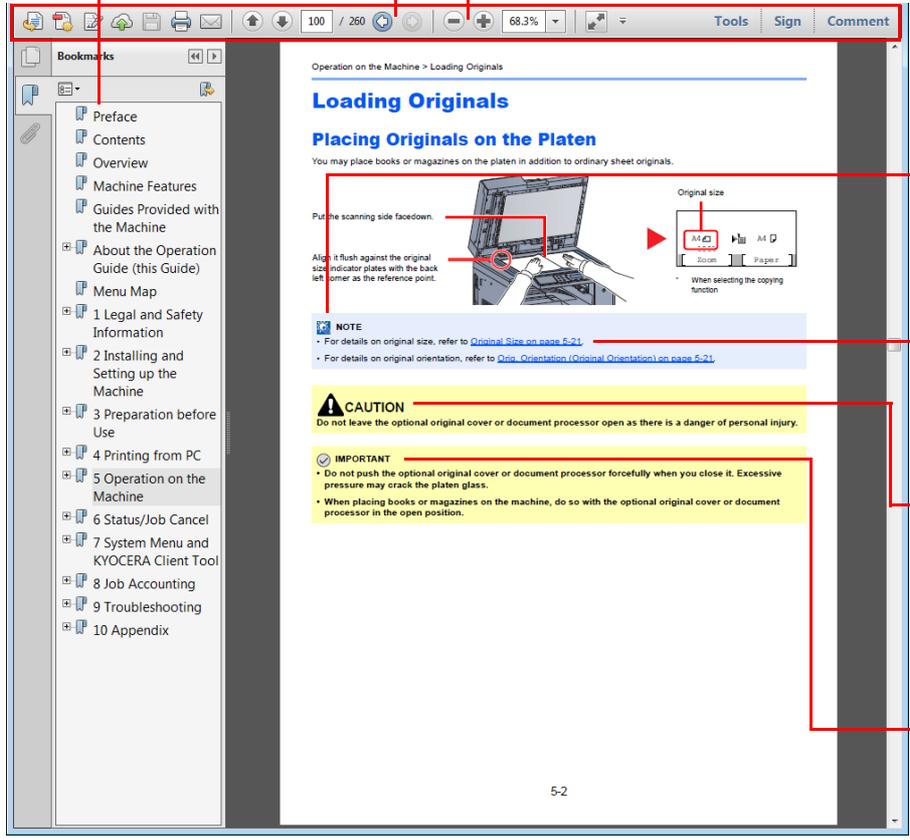

NOTE
Indicates supplemental explanations and reference information for operations.

Refer to
Click the underlined text to jump to the corresponding page.

CAUTION
Indicates that personal injury or mechanical damage may result from insufficient attention to or incorrect compliance with the related points.

IMPORTANT
Indicates operational requirements and restrictions to operate the machine correctly, and avoid damage to the machine or property.

NOTE
The items that appear in Adobe Reader vary depending on how it is used. If the Table of Contents or tools do not appear, refer to Adobe Reader Help.

Certain items are indicated in this guide by the conventions described below.


Convention	Description	Example
[Bold]	Indicates keys on the operation panel and buttons on your computer screen.	Press the [Start] key. Click [OK] .
[Regular]	Indicates a message or setting displayed on the message display.	[Ready to copy.] appears in the message display. Press the [▲] or [▼] key to select [On].
"Regular"	Indicates a message or setting displayed on the computer screen.	You can select from the "Print size" menu.

Conventions used in operation procedures

Operation panel keys that are pressed are outlined in red.







Procedures consisting of a sequence of operation panel actions or computer operations are numbered as shown below.

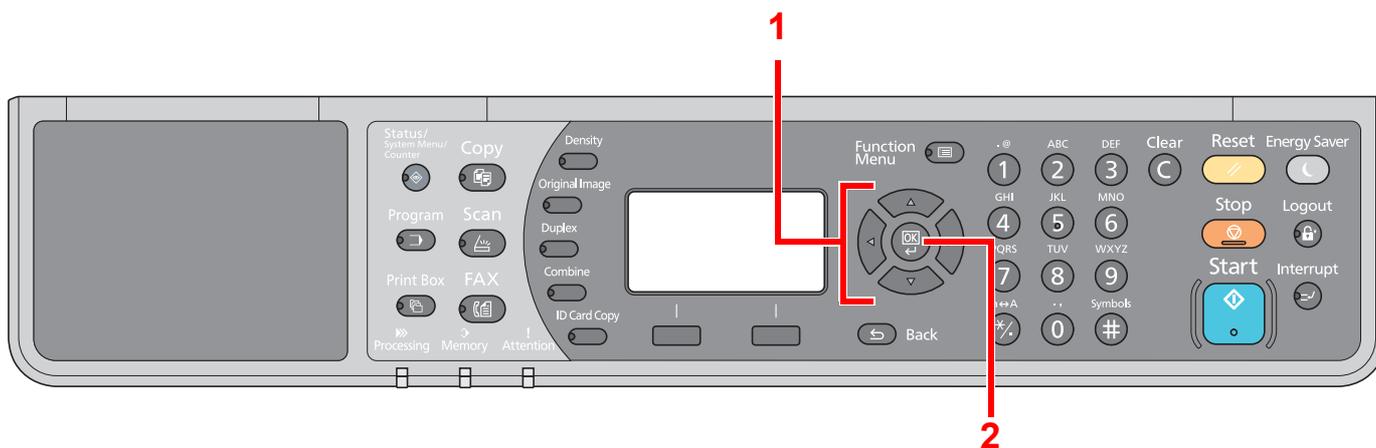

Size and Orientation of Originals and Paper

Original sizes and paper sizes such as A4, B5, and Letter can be used in both the horizontal and vertical orientations. To distinguish the orientations when these sizes are used, "-R" is added to sizes used in the horizontal orientation. The following icons are used to indicate original and paper placement orientations on the message display.

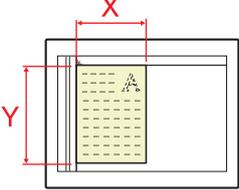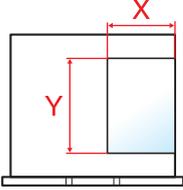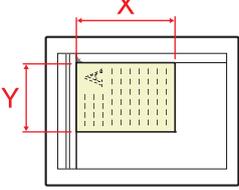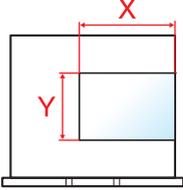Orientation		Setting Position (X: Width, Y: Length)	Display	Indicated Size in this Guide ^{*1}
Vertical	Original	 Original	 Original	A4, B5, Letter, etc.
	Paper	 Paper	 Paper	
Horizontal	Original	 Original	 Original	A4-R, B5-R, Letter-R, etc.
	Paper	 Paper	 Paper	

*1 Original/paper sizes that can be used vary depending on the function and source tray. For details, refer to [Specifications on page 10-16](#).

Menu Map

(The names displayed on the message display are used here. These may differ from the referenced titles.)

Copy



Density



Density ([page 5-14](#))

Original Image



Original Image ([page 5-14](#))

Duplex



Duplex ([page 5-14](#))

Combine



Combine ([page 5-17](#))

ID Card Copy



ID Card Copy ([page 5-9](#))

Copy



Function Menu



Paper Selection ([page 5-19](#))

Collate/Offset ([page 5-20](#))

Zoom ([page 5-21](#))

Original Size ([page 5-22](#))

Orig. Orientation ([page 5-22](#))

Mixed Size Orig. ([page 5-23](#))

EcoPrint ([page 5-23](#))

Backgrnd Density ([page 5-23](#))

Margin ([page 5-24](#))

Border Erase ([page 5-25](#))

Continuous Scan ([page 5-26](#))

Auto Rotation ([page 5-26](#))

File Name Entry ([page 5-26](#))

Scan



Ready to scan. ([page 5-38](#))

FAX



Ready to send. (Refer to **FAX Operation Guide**.^{*1})

*1 FAX is an option.

Program



Select program ([page 5-27](#))

Print Box



Print Box ([page 4-13](#))

Status/
System Menu/
Counter



Status	Print Job Status (page 6-2)		
	Send Job Status (page 6-2)		
	Scheduled Job (page 6-2)		
	Print Job Log (page 6-6)		
	Send Job Log (page 6-6)		
	Scanner (page 6-12)		
	Printer (page 6-12)		
	FAX (refer to FAX Operation Guide ^{*1})		
	Toner Status (page 6-13)		
	Paper Status (page 6-13)		
Report	Report Print	Menu Map (page 7-5)	
		Status Page (page 7-5)	
		Network Status (page 7-5)	
		Service Status (page 7-5)	
	Admin Rpt Set. (refer to FAX Operation Guide ^{*1})		
Result Rpt Set. (refer to FAX Operation Guide ^{*1})			
Counter (page 2-44)			
System	Network Setting	TCP/IP Settings	TCP/IP (page 7-6)
			IPv4 Setting (page 7-6)
			IPv6 Setting (page 7-7)
			Bonjour (page 7-7)
			Protocol Detail (page 7-8)
		Secure Protocol	SSL (page 7-8)
		LAN Interface (page 7-9)	
		Host Name (page 7-9)	
		Restart Network (page 7-9)	
	I/F Block Set.	USB Device (page 7-9)	
		Option I/F (page 7-9)	
		Option I/F-FAX (page 7-9)	

*1 FAX is an option.

Admin/Accounting	Admin. Setting (page 2-11)		
	Job Account. Set.	Job Accounting (page 8-4)	
		Account. Report (page 8-20)	
		Total Accounting (page 8-19)	
		Each Job Account (page 8-19)	
		Account. List (page 8-5)	
		Default Setting (page 8-17)	
Unknown ID Job (page 8-16)			
Common Settings	Language (page 7-10)		
	Default Screen (page 7-9)		
	Sound	Buzzer (page 7-11)	
		FAX Speaker (refer to FAX Operation Guide ^{*1})	
		FAX Monitor (refer to FAX Operation Guide ^{*1})	
	Display Bright. (page 7-11)		
	Quiet Mode (page 7-11)		
	Orig./Paper Set.	Custom Orig.Size (page 7-12)	
		Custom PaperSize (page 7-12)	
		Cassette 1 Set.	Cassette 1 Size (page 7-12)
			Cassette 1 Type (page 7-12)
		Cassette 2 Set.	Cassette 2 Size (page 7-12)
			Cassette 2 Type (page 7-12)
		Cassette 3 Set.	Cassette 3 Size (page 7-12)
			Cassette 3 Type (page 7-12)
		Cassette 4 Set.	Cassette 4 Size (page 7-12)
			Cassette 4 Type (page 7-12)
		MP Tray Set.	MP Tray Size (page 7-14)
			MP Tray Type (page 7-14)
		Media Type Set. (page 7-12)	
		Auto Detect Orig. (page 7-13)	
		Media for Auto (page 7-13)	
	Def. PaperSource (page 7-13)		
	SpacialPaper Act. (page 7-13)		
	Preset Limit (page 7-16)		
	Measurement (page 7-16)		
	Error Handling	DuplexPaperError (page 7-16)	
PaperMismatchErr (page 7-16)			

*1 FAX is an option.

Common Settings	Date Setting	Date/Time (page 7-17)		
		Date Format (page 7-17)		
		Time Zone (page 7-17)		
		Summer Time (page 7-17)		
	Timer Setting	Err. Clear Timer (page 7-17)		
		Sleep Timer (page 7-17)		
		PanelReset Timer (page 7-17)		
		Interrupt Clear (page 7-17)		
		Power Off Rule (page 7-18)		
		Power Off Timer (page 7-18)		
		Auto Err. Clear (page 7-18)		
		Auto Panel Reset (page 7-18)		
		Unusable Time (refer to FAX Operation Guide ^{*1})		
		Function Default	FAX Resolution (page 7-18)	
	Original Image (page 7-18)			
	Zoom (page 7-18)			
	Collate/Offset (page 7-18)			
	Orig. Orientation (page 7-18)			
	Border Erase (page 7-19)			
	Margin (page 7-19)			
	Backgrnd Density (page 7-19)			
	EcoPrint (page 7-19)			
	Auto Rotation (page 7-19)			
	File Name Entry (page 7-19)			
	Continuous Scan (page 7-19)			
	Detail Setting		2 in 1 Layout (page 7-19)	
			4 in 1 Layout (page 7-19)	
Border Line (page 7-19)				
Orig. Binding (page 7-19)				
BookOrg. Binding (page 7-19)				
Finish. Binding (page 7-19)				
Copy	Paper Selection (page 7-20)			
	AutoPaperSelect. (page 7-20)			
	Auto % Priority (page 7-20)			
	Select Key Set. (page 7-20)			
Printer	FormFeed TimeOut (page 7-20)			

*1 FAX is an option.

FAX (refer to FAX Operation Guide ^{*1})	
Edit Destination (refer to FAX Operation Guide ^{*1})	
Adjust/Maint.	Density Adj. (page 7-21)
	Backgrnd Density (page 7-21)
	Print Density (page 7-21)
	Correct. Bk Line (page 7-21)
	Service Setting Drum Refresh (page 7-21)

*1 FAX is an option.

1 Legal and Safety Information

Please read this information before using your machine. This chapter provides information on the following topics.

Notice	1-2
Safety Conventions in This Guide	1-2
Environment	1-3
Precautions for Use	1-3
Laser Safety (Europe)	1-4
Safety Instructions Regarding the Disconnection of Power	1-5
Legal Restriction on Copying/Scanning	1-5
Legal Information	1-6
Energy Saving Control Function	1-7
Automatic 2-Sided Copy Function	1-7
Resource Saving - Paper	1-7
Environmental benefits of "Power Management"	1-7

Notice

Safety Conventions in This Guide

The sections of this guide and parts of the machine marked with symbols are safety warnings meant to protect the user, other individuals and surrounding objects, and ensure correct and safe usage of the machine. The symbols and their meanings are indicated below.

 **WARNING:** Indicates that serious injury or even death may result from insufficient attention to or incorrect compliance with the related points.

 **CAUTION:** Indicates that personal injury or mechanical damage may result from insufficient attention to or incorrect compliance with the related points.

Symbols

The  symbol indicates that the related section includes safety warnings. Specific points of attention are indicated inside the symbol.

 ... [General warning]

 ... [Warning of high temperature]

The  symbol indicates that the related section includes information on prohibited actions. Specifics of the prohibited action are indicated inside the symbol.

 ... [Warning of prohibited action]

 ... [Disassembly prohibited]

The  symbol indicates that the related section includes information on actions which must be performed. Specifics of the required action are indicated inside the symbol.

 ... [Alert of required action]

 ... [Remove the power plug from the outlet]

 ... [Always connect the machine to an outlet with a ground connection]

Please contact your service representative to order a replacement if the safety warnings in this Operation Guide are illegible or if the guide itself is missing (fee required).

Environment

The service environmental conditions are as follows:

Temperature	50 to 90.5 °F (10 to 32.5 °C) (But humidity should be 70% or less when temperature is 90.5 °F (32.5 °C).)
Humidity	10 to 80% (But temperature should be 86 °F (30 °C) or less when humidity is 80%.)

However, adverse environmental conditions may affect the image quality. Avoid the following locations when selecting a site for the machine.

- Avoid locations near a window or with exposure to direct sunlight.
- Avoid locations with vibrations.
- Avoid locations with drastic temperature fluctuations.
- Avoid locations with direct exposure to hot or cold air.
- Avoid poorly ventilated locations.

If the floor is delicate against casters, when this machine is moved after installation, the floor material may be damaged.

During copying, some ozone is released, but the amount does not cause any ill effect to one's health. If, however, the machine is used over a long period of time in a poorly ventilated room or when making an extremely large number of copies, the smell may become unpleasant. To maintain the appropriate environment for copy work, it is suggested that the room be properly ventilated.

Precautions for Use

Cautions when handling consumables



CAUTION

Do not attempt to incinerate parts which contain toner. Dangerous sparks may cause burns.

Keep parts which contain toner out of the reach of children.

If toner happens to spill from parts which contain toner, avoid inhalation and ingestion, as well as contact with your eyes and skin.

- If you do happen to inhale toner, move to a place with fresh air and gargle thoroughly with a large amount of water. If coughing develops, contact a physician.
- If you do happen to ingest toner, rinse your mouth with water and drink 1 or 2 cups of water to dilute the contents of your stomach. If necessary, contact a physician.
- If you do happen to get toner in your eyes, flush them thoroughly with water. If there is any remaining tenderness, contact a physician.
- If toner does happen to get on your skin, wash with soap and water.

Do not attempt to force open or destroy parts which contain toner.

Other precautions

Return the exhausted toner container and waste toner box to your dealer or service representative. The collected toner container and waste toner box will be recycled or disposed in accordance with the relevant regulations.

Store the machine while avoiding exposure to direct sunlight.

Store the machine in a place where the temperature stays below 40 °C while avoiding sharp changes of temperature and humidity.


If the machine will not be used for an extended period of time, remove the paper from the cassette and the Multi Purpose (MP) Tray, return it to its original package and reseal it.

Laser Safety (Europe)

Laser radiation could be hazardous to the human body. For this reason, laser radiation emitted inside this machine is hermetically sealed within the protective housing and external cover. In the normal operation of the product by user, no radiation can leak from the machine.

This machine is classified as Class 1 laser product under IEC/EN 60825-1:2014.

Regarding CLASS 1 laser products, information is provided on the rating label.

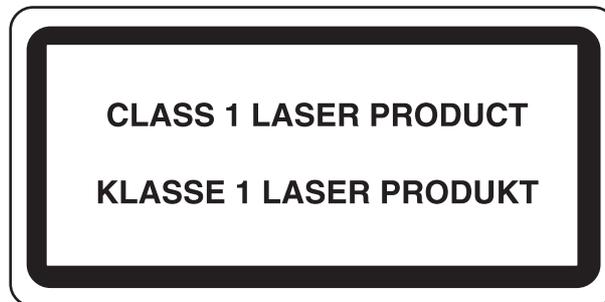

Safety Instructions Regarding the Disconnection of Power

Caution: The power plug is the main isolation device! Other switches on the equipment are only functional switches and are not suitable for isolating the equipment from the power source.

Attention: Le débranchement de la fiche secteur est le seul moyen de mettre l'appareil hors tension. Les interrupteurs sur l'appareil ne sont que des interrupteurs de fonctionnement: ils ne mettent pas l'appareil hors tension.

Legal Restriction on Copying/Scanning

It may be prohibited to copy/scan copyrighted material without permission of the copyright owner.

Copying/Scanning the following items is prohibited and may be penalized by law. It may not be limited to these items. Do not knowingly copy/scan the items that are not to be copied/scanned.

- Paper money
- Bank note
- Securities
- Stamp
- Passport
- Certificate

Local laws and regulations may prohibit or restrict copying/scanning of other items not mentioned above.



NOTE

An original which resembles a bank note closely may not be copied properly in some rare cases.

EN ISO 7779

Maschinenlärminformations-Verordnung 3. GPSGV, 06.01.2004: Der höchste Schalldruckpegel beträgt 70 dB (A) oder weniger gemäß EN ISO 7779.

EK1-ITB 2000

Das Gerät ist nicht für die Benutzung im unmittelbaren Gesichtsfeld am Bildschirmarbeitsplatz vorgesehen. Um störende Reflexionen am Bildschirmarbeitsplatz zu vermeiden, darf dieses Produkt nicht im unmittelbaren Gesichtsfeld platziert werden.

Legal Information

Copying or other reproduction of all or part of this guide without the prior written consent of KYOCERA Document Solutions Inc. is prohibited.

Regarding Trade Names

- TASKalfa is a trademark or registered trademark of KYOCERA Document Solutions Inc.
- Microsoft, Windows, Windows Server and Internet Explorer are registered trademarks or trademarks of Microsoft Corporation in the U.S.A. and/or other countries.
- Adobe Acrobat, and Flash are registered trademarks of Adobe Systems Incorporated.
- IBM and IBM PC/AT are trademarks of International Business Machines Corporation.
- AppleTalk, Bonjour, Macintosh, and Mac OS are trademarks of Apple Inc., registered in the U.S. and other countries.

All other brands and product names are registered trademarks or trademarks of their respective companies. The designations [™] and [®] will not be used in this Operation Guide.

Energy Saving Control Function

To reduce energy consumption while in a waiting state, the device comes equipped with an energy saving control function for switching to **Sleep** as well as **Power Off Mode** where power consumption is automatically reduced to a minimum after a certain amount of time elapses since the device was last used.

Sleep

The device automatically enters Sleep when 1 minute has passed since the copy function was last used. The amount of time of no activity that must pass before Sleep is activated may be lengthened. When printing in Sleep mode, the device returns to Sleep mode after it has finished printing. For more information see [Sleep and Sleep Timer on page 2-20](#).

Power Off Mode

The device automatically turns its power off when 1 hour has passed since the device was last used. The amount of time of no activity that must pass before Power Off Mode is activated may be lengthened by changing the Power Off Timer setting. For more information see [Power Off Timer on page 2-22](#).

Automatic 2-Sided Copy Function

This device includes 2-sided copying function. For example, by copying two 1-sided originals onto a single sheet of paper as a 2-sided copy, it is possible to lower the amount of paper used. For more information refer to [Duplex on page 5-14](#).

Printing in duplex mode reduces paper consumption and contributes to the conservation of forest resources. Duplex mode also reduces the amount of paper that must be purchased, and thereby reduces cost. It is recommended that machines capable of duplex printing be set to use duplex mode by default.

Resource Saving - Paper

For the preservation and sustainable use of forest resources, it is recommended that recycled as well as virgin paper certified under environmental stewardship initiatives or carrying recognised ecolabels, which meet EN 12281:2002* or an equivalent quality standard, be used.

This machine also supports printing on 64 g/m² paper. Using such paper containing less raw materials can lead to further saving of forest resources.

* : EN12281:2002 "Printing and business paper - Requirements for copy paper for dry toner imaging processes"

Your sales or service representative can provide information about recommended paper types.

Environmental benefits of "Power Management"

To reduce power consumption when idle, this machine is equipped with a power management function that automatically activates energy-saving mode when the machine is idle for a certain period of time.

Although it takes the machine a slight amount of time to return to READY mode when in energy-saving mode, a significant reduction in energy consumption is possible. It is recommended that the machine be used with the activation time for energy-saving mode set to the default setting.


2 Installing and Setting up the Machine

This chapter provides information for the administrator of this machine, such as part names, cable connection, and software installation.

Part Names	2-2
Machine Exterior	2-2
Connectors/Interior	2-4
With Optional Equipments Attached	2-5
Connecting the Machine and Other Devices	2-6
Connecting Cables	2-7
Connecting USB Cable	2-7
Connecting LAN Cable	2-8
Connecting the Power Cable	2-8
Power On/Off	2-9
Power On	2-9
Power Off	2-9
Administrator User Name and Password	2-10
Administrator Setting	2-11
Default Settings of the Machine	2-13
Setting Date and Time	2-13
Network Setup	2-15
Setting Energy Saver Function	2-20
Installing Software	2-25
Software on Product Library Disc (Windows)	2-26
Installing Software in Windows	2-27
Uninstalling the Software	2-32
Setting the Shared Printer and FAX	2-33
Installing Software in Mac Computer	2-34
Setting KYOCERA Client Tool	2-36
Setting WIA Driver	2-43
Checking the Counter	2-44
Command Center RX	2-45
Accessing Command Center RX	2-46

Part Names

Machine Exterior

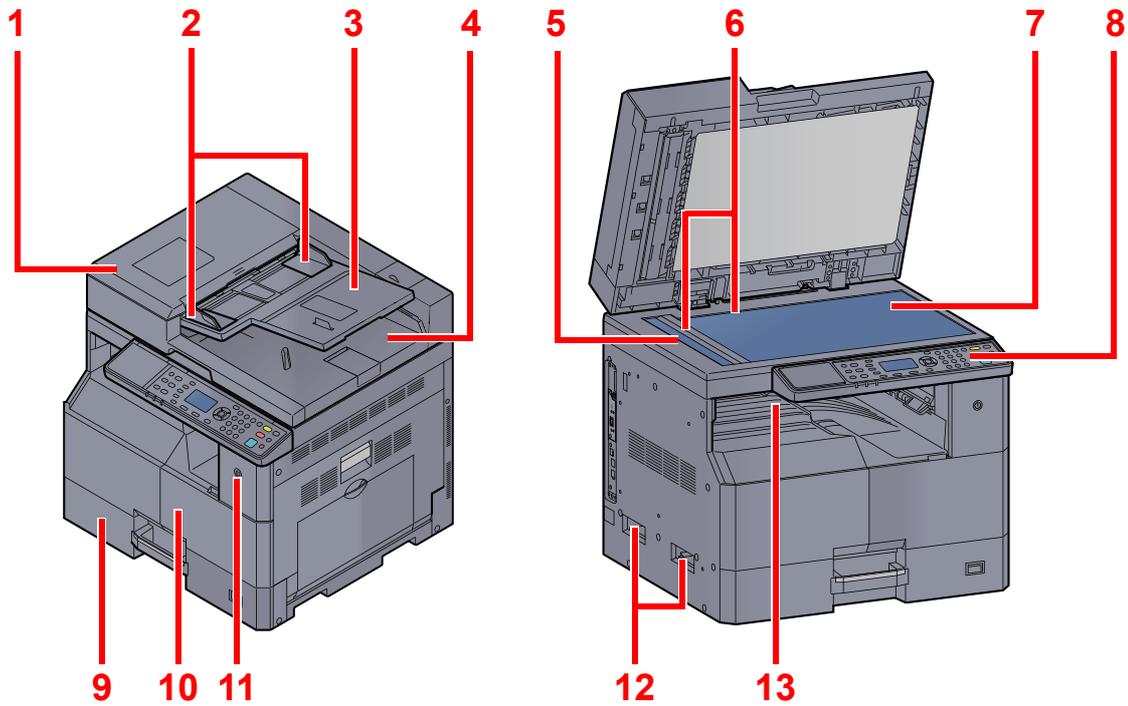

1 Document Processor (DP)

2 Original Width Guides

3 Original Table

4 Original Eject Table

5 Slit Glass

6 Original Size Indicator Plates

7 Platen

8 Operation Panel

9 Cassette 1

10 Front Cover


11 Power Switch

12 Handles

13 Inner Tray




[Optional Equipment \(page 10-2\)](#)

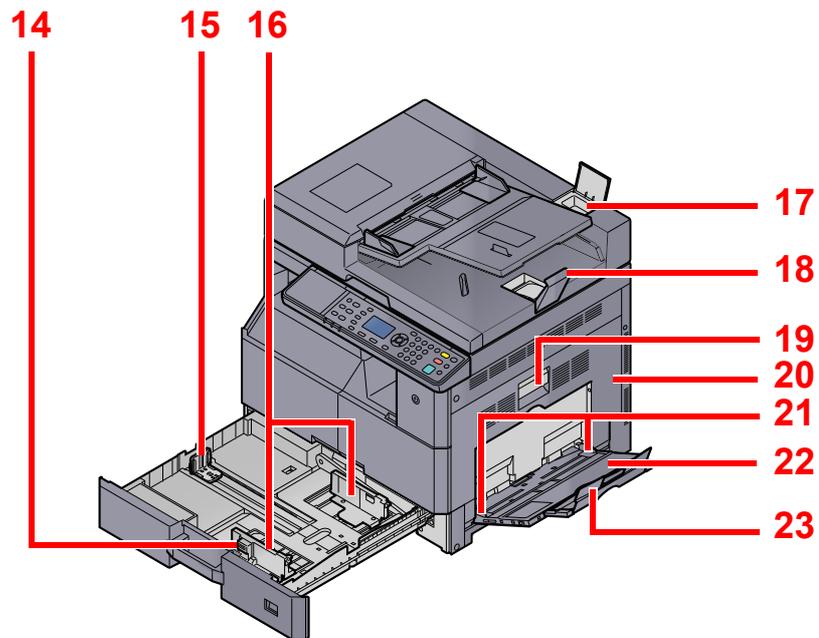


- 14 Paper Width Adjusting Tab
- 15 Paper Length Guide
- 16 Paper Width Guide
- 17 Cleaning Cloth Compartment
- 18 Original Stopper
- 19 Right Cover 1 Lever
- 20 Right Cover 1
- 21 Paper Width Guide
- 22 Multi Purpose Tray
- 23 Support Tray Section of the Multi Purpose Tray

Connectors/Interior

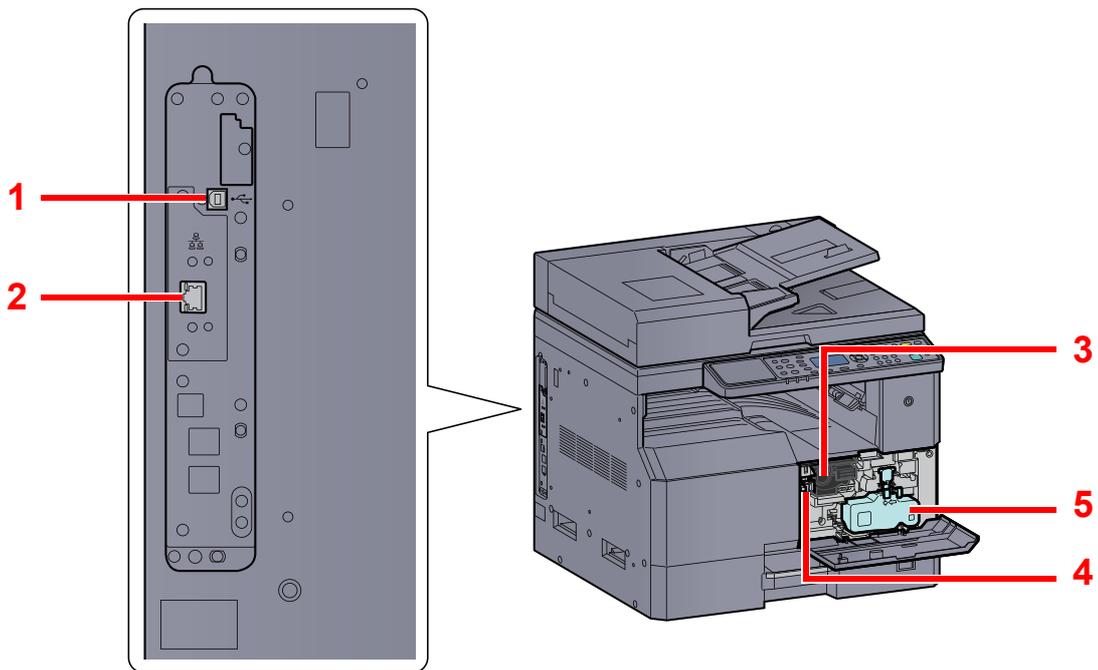

- 1 USB Interface Connector
- 2 Network Interface Connector
- 3 Toner Container
- 4 Toner Container Lever
- 5 Waste Toner Box

With Optional Equipments Attached

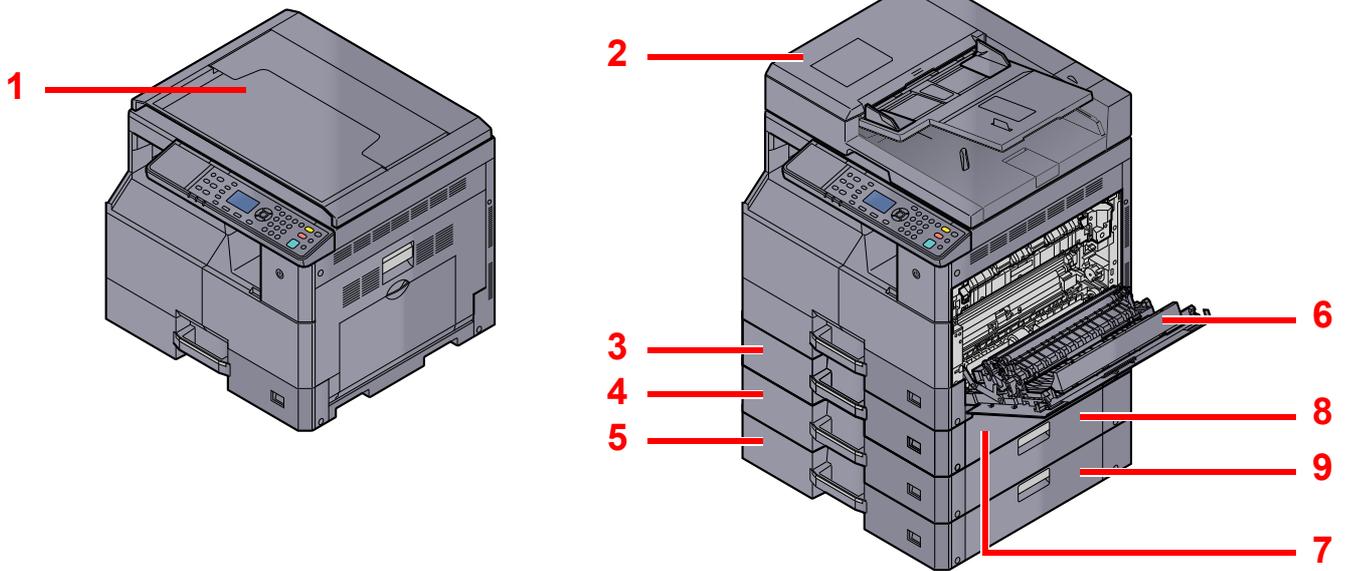


- 1 Original Cover
- 2 Document Processor (DP)
- 3 Cassette 2
- 4 Cassette 3
- 5 Cassette 4
- 6 Duplex Unit
- 7 Right Cover 2
- 8 Right Cover 3
- 9 Right Cover 4

 [Optional Equipment \(page 10-2\)](#)


Connecting the Machine and Other Devices

Prepare the necessary cables for your environment when connecting the machine to other devices including a PC.

When Connecting the Machine to the PC via USB

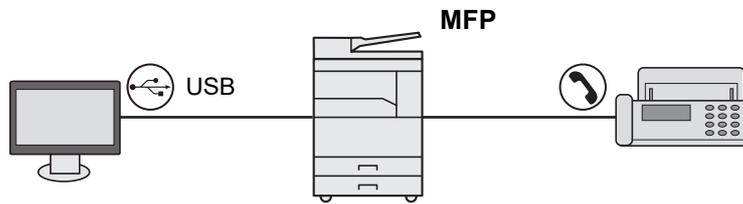

When Connecting the Machine to the PC on the Network*1

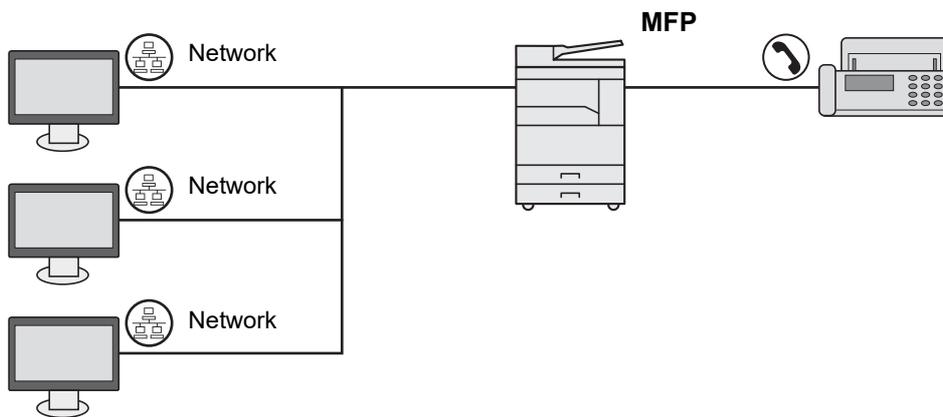

*1 The optional Network Interface Kit is required.

Available Cables

Connection Environment	Function	Necessary Cable	Reference Page
Connect a USB cable to the machine.	Printer/Scanner/Sending FAX from PC*1	USB2.0 compatible cable (Hi-Speed USB compliant, Max. 5.0 m, Shielded)	page 2-7
Connect a LAN cable to the machine.	Printer/Scanner/Sending FAX from PC*1	Network Interface LAN (10BASE-T or 100BASE-TX Shielded)	page 2-8

*1 Function available when using optional FAX Kit.

NOTE

Contact your Service Representative for how to connect FAX.

Connecting Cables

Connecting USB Cable


✔ **IMPORTANT**

If the power is on, turn the power switch off.

🔍 [Power Off \(page 2-9\)](#)

1 Connect the cable to the machine.

- 1 Connect the USB cable to the USB interface connector located on the left side of the body.

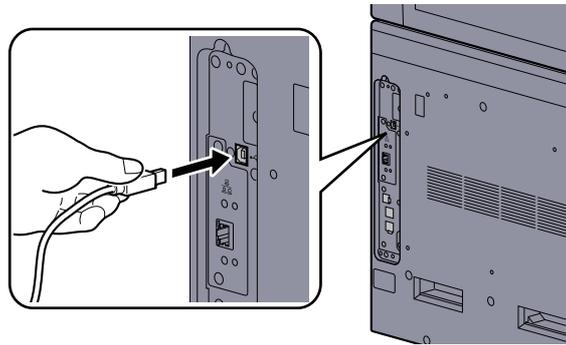

- 2 Connect the other end of the cable to the PC.

2 Power on the machine.

Connecting LAN Cable


✔ **IMPORTANT**

If the power is on, turn the power switch off.

🔍 [Power Off \(page 2-9\)](#)

1 Connect the cable to the machine.

- 1 Connect the LAN cable to the network interface connector.

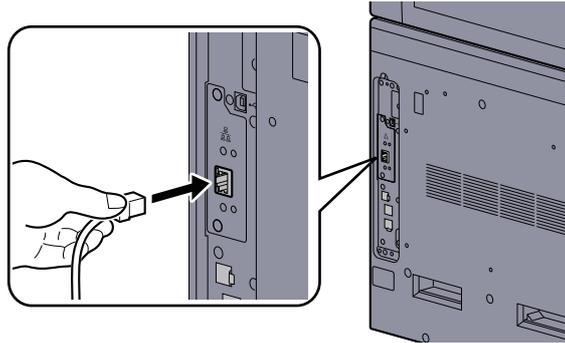

- 2 Connect the other end of the cable to the hub.

2 Power on the machine and configure the network.

🔍 [Network Setup \(page 2-15\)](#)

Connecting the Power Cable

Connect one end of the supplied power cable to the machine and the other end to a power outlet.


✔ **IMPORTANT**

Only use the power cable that comes with the machine.

Power On/Off

Power On

1 Turn the power switch on.

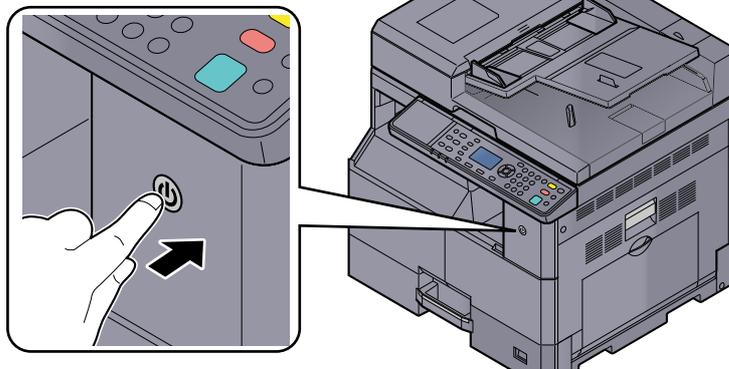

✓ IMPORTANT


When turning off the power switch, do not turn on the power switch again immediately. Wait more than 5 seconds, and then turn on the power switch.

Power Off


✓ IMPORTANT

When the [Processing] indicator or [Memory] indicator is lit up or blinked, the machine is operating. Turning off the power switch while the machine is operating may cause it to malfunction.

1 Turn the power switch off.

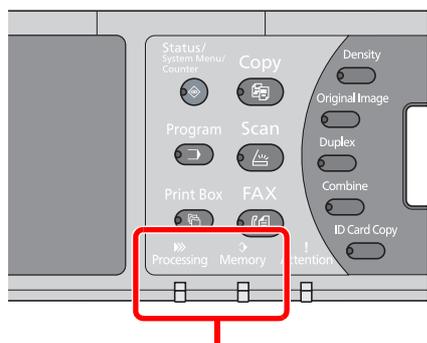

Check that the indicators are off.

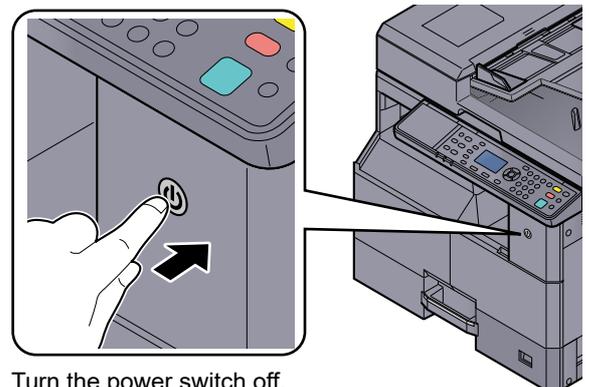

Turn the power switch off.

In case of not using the machine for an extended period of time...

⚠ CAUTION

If this machine will be left unused for an extended period (e.g. overnight), turn it off at the power switch. If the machine will not be used for an even longer period of time (e.g. vacation), remove the power plug from the outlet as a safety precaution.

✓ IMPORTANT

Remove paper from the cassettes and seal it in the paper storage bag to protect it from humidity.

Administrator User Name and Password

If you are setting a function that requires administrator rights, you must enter your login user name and login password. The factory default login user name and login password are set as shown below.

Login User Name	Login Password
Admin*1	Admin*1

*1 Upper case and lower case letters are distinguished (case sensitive).


You can change the default login user name and login password. Refer to [Administrator Setting on page 2-11](#).

You will be unable to log in if you forget your login user name or login password.


If job accounting is enabled, you need to enter an account ID. Refer to [Login/Logout on page 8-22](#).

1 Enter the login user name.

- 1 If this screen is displayed during operations, press the [OK] key while the column for entering a login user name is selected.

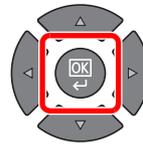


- 2 Enter the login user name using the numeric keys and press the [OK] key.

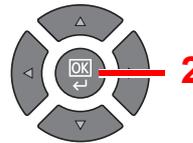


 [Character Entry Method \(page 10-4\)](#)

2 Enter the login password.

- 1 Press the [▼] key to select the column for entering a login password and press the [OK] key.

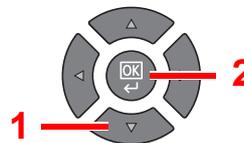

- 2 Enter the login password using the numeric keys and press the [OK] key.

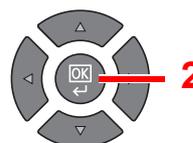

 [Character Entry Method \(page 10-4\)](#)

3 Press [Login].

Administrator Setting

Change the login user name and login password for the administrator.



1 Display the screen.

- 1 Press the [Status/System Menu/Counter] key.

Status/
System Menu/
Counter



- 2 Press the [▲] or [▼] key to select [Admin/Accounting], and press the [OK] key.

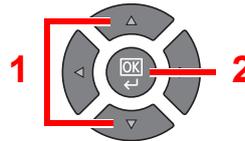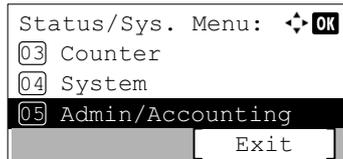

NOTE



If the login user name entry screen appears during operations, log in by referring to [Administrator User Name and Password on page 2-10](#).

The factory default login user name and login password are set as shown below.

Login User Name	Login Password
Admin*1	Admin*1



*1 Upper case and lower case letters are distinguished (case sensitive).

- 3 Press the [▲] or [▼] key to select [Admin. Setting], and press the [OK] key.

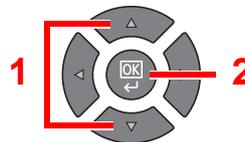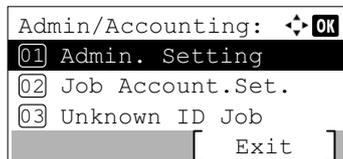


2 Configure the settings.


- 1 Press the [OK] key.

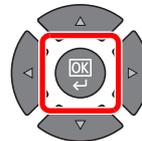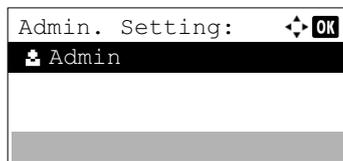

- 2 Press [Edit].

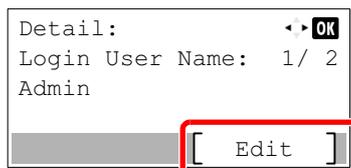

- 3 Enter a new login user name using the numeric keys and press the [OK] key.

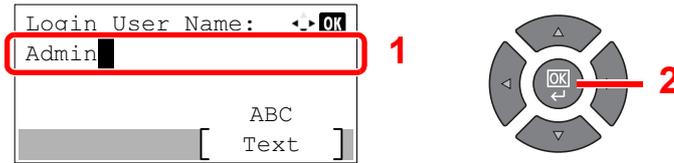


 **NOTE**


Refer to [Entering Characters on page 10-6](#) for details on entering characters.

- 4 Press the [▶] key.

- 5 Press [Edit].

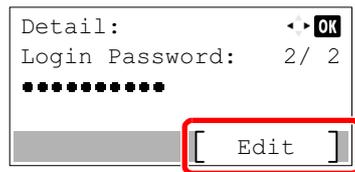

- 6 Enter a new login password using the numeric keys and press the [OK] key.

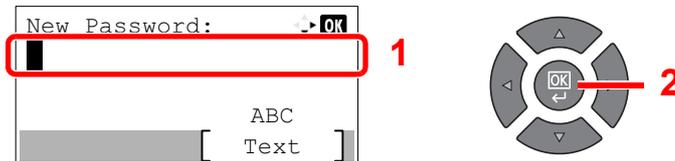

- 7 Reenter the same login password for confirmation and press the [OK] key.

- 8 Press the [OK] key.

- 9 Press [Yes] in confirmation screen.

The login user name and login password for the administrator are changed.

Default Settings of the Machine

The default settings of the machine can be changed in System Menu. Before using this machine, configure such settings as date and time, and energy saving functions as needed.

NOTE

For settings that are configurable from System Menu, refer to [System Menu and KYOCERA Client Tool on page 7-1](#).

Setting Date and Time

Follow the steps below to set the local date and time at the place of installation.

NOTE

Be sure to set the time difference before setting the date and time.



1 Display the screen.

- 1 Press the [**Status/System Menu/Counter**] key.



Status/
System Menu/
Counter



- 2 Press the [**▲**] or [**▼**] key to select [Common Settings], and press the [**OK**] key.

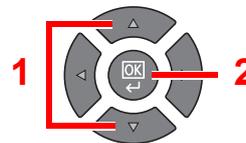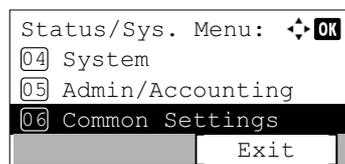

- 3 Press the [**▲**] or [**▼**] key to select [Date Setting], and press the [**OK**] key.

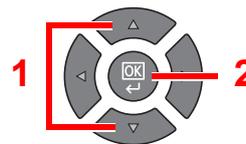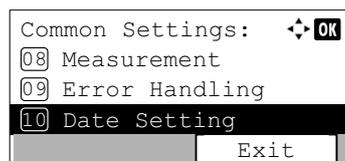

NOTE

If the login user name entry screen appears during operations, log in by referring to [Administrator User Name and Password on page 2-10](#).



The factory default login user name and login password are set as shown below.

Login User Name	Login Password
Admin*1	Admin*1



*1 Upper case and lower case letters are distinguished (case sensitive).

2 Configure the settings.

- 1 Press the [▲] or [▼] key to select [Time Zone], and press the [OK] key.

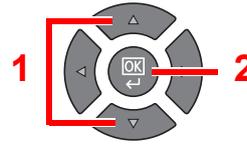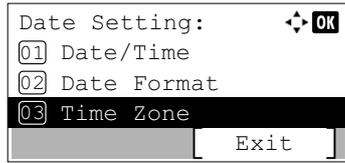



- 2 Press the [▲] or [▼] key to set the time zone, and press the [OK] key.
- 3 Press the [▲] or [▼] key to select [Summer Time], and press the [OK] key.

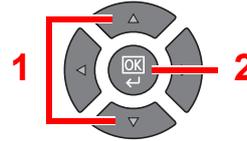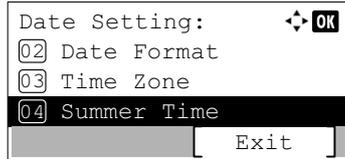



NOTE

If you select a region that does not utilize summer time, the summer time setting screen will not appear.



- 4 Press the [▲] or [▼] key to select [Off] or [On], and press the [OK] key.

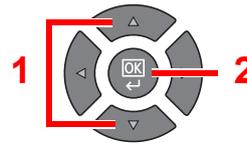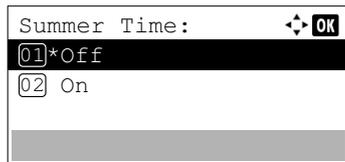

- 5 Press the [▲] or [▼] key to select [Date/Time], and press the [OK] key.

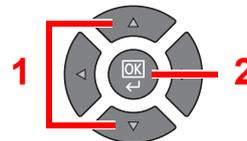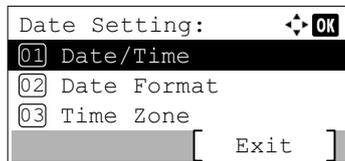


- 6 Press the [▲] or [▼] key to set the year, month, and day.

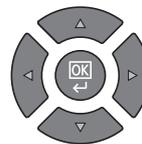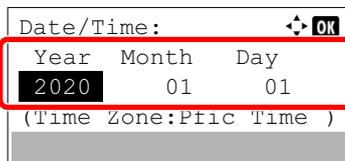

Press the [◀] and [▶] key to move the cursor right and left.

- 7 Press the [OK] key.
- 8 Press the [▲] or [▼] key to set the hour, minute, and second.

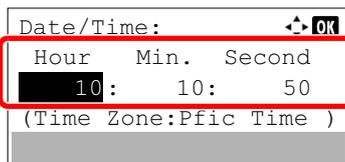

Press the [◀] and [▶] key to move the cursor right and left.

- 9 Press the [OK] key.

Network Setup

The optional Network Interface Kit can be installed on the machine. It enables network printing on the Windows, Macintosh, UNIX and other platforms.

This section explains the procedure of IPv4 and Bonjour settings for TCP/IP settings. For other network settings, refer to the [Network Setting on page 7-6](#).

IPv4 Setting

Set up TCP/IP (IPv4) to connect to the Windows network. The default settings are "TCP/IP Protocol: On, DHCP: On, Auto-IP: On". When using the fixed IP by changing the default settings, contact the system administrator to check the IP address, subnet mask and default gateway.

NOTE

In the following cases, set the IP address of DNS server on the Command Center RX.

- When using the host name with "DHCP" setting set to "Off"
- When using the DNS server with IP address that is not assigned by DHCP automatically.

Refer to the **Command Center RX User Guide**.



1 Display the screen.

- 1 Press the [Status/System Menu/Counter] key.

Status/
System Menu/
Counter



- 2 Press the [▲] or [▼] key to select [System], and press the [OK] key.

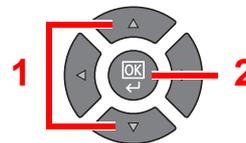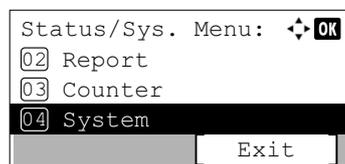

NOTE



If the login user name entry screen appears during operations, log in by referring to [Administrator User Name and Password on page 2-10](#).

The factory default login user name and login password are set as shown below.



Login User Name	Login Password
Admin*1	Admin*1

*1 Upper case and lower case letters are distinguished (case sensitive).



- 3 Press the [▲] or [▼] key to select [Network Setting], and press the [OK] key.

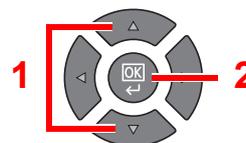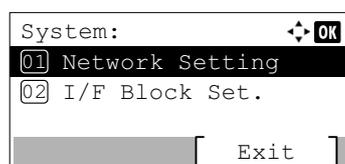

- 4 Press the [▲] or [▼] key to select [TCP/IP Settings], and press the [OK] key.

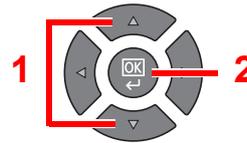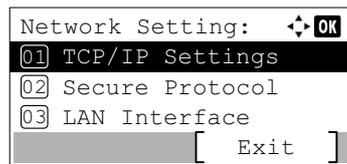



- 5 Press the [▲] or [▼] key to select [IPv4 Setting], and press the [OK] key.

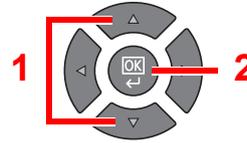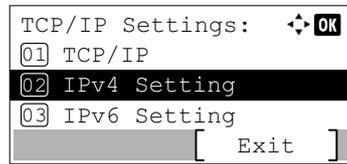



2 Configure the settings.

When setting the static IP address



- 1 Press the [▲] or [▼] key to select [DHCP], and press the [OK] key.

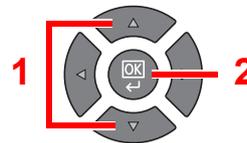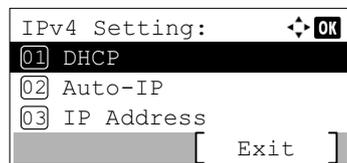


- 2 Press the [▲] or [▼] key to select [Off], and press the [OK] key.

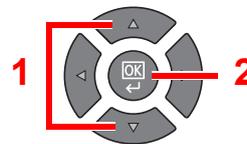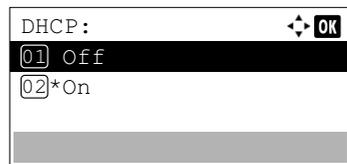

- 3 Press the [▲] or [▼] key to select [IP Address], and press the [OK] key.

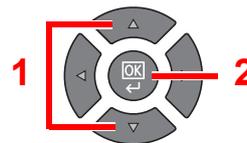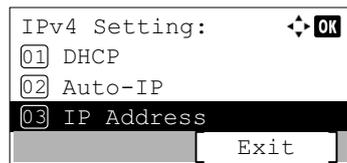

- 4 Use the numeric keys or press the [▲] or [▼] key to set the IP address.


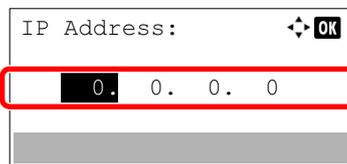


You can set any value between 000 and 255.


Increase or reduce the figures by pressing the [▲] or [▼] key. Use [◀] or [▶] to move the position being entered, which is shown highlighted.

- 5 Press the [OK] key.

- 6 Press the [▲] or [▼] key to select [Subnet Mask], and press the [OK] key.

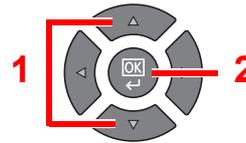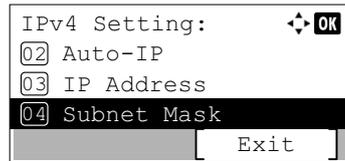



- 7 Use the numeric keys or press the [▲] or [▼] key to set the subnet mask.

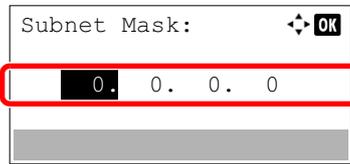


You can set any value between 000 and 255. The entry method is the same method as the IP address.

- 8 Press the [OK] key.

- 9 Press the [▲] or [▼] key to select [Default Gateway], and press the [OK] key.

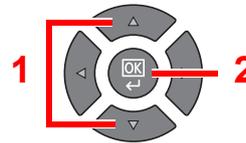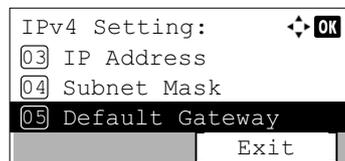

- 10 Use the numeric keys or press the [▲] or [▼] key to set the default gateway.

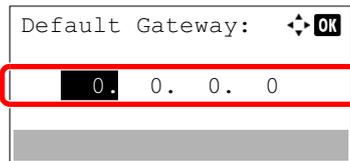

You can set any value between 000 and 255. The entry method is the same method as the IP address.

- 11 Press the [OK] key.

IMPORTANT

After changing the setting, restart the network from System Menu, or turn the machine OFF and then ON.

[Restart Network \(page 7-9\)](#)

NOTE

The network can be configured from the PC by using Command Center RX. Refer to the **Command Center RX User Guide**.

Bonjour Settings

Configure the settings for Bonjour.



1 Display the screen.

- 1 Press the [Status/System Menu/Counter] key.

Status/
System Menu/
Counter



- 2 Press the [▲] or [▼] key to select [System], and press the [OK] key.

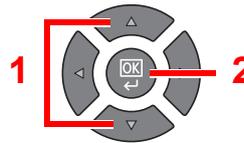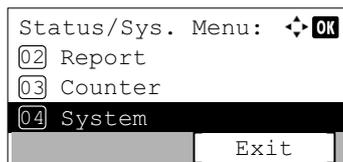

NOTE



If the login user name entry screen appears during operations, log in by referring to [Administrator User Name and Password on page 2-10](#).

The factory default login user name and login password are set as shown below.



Login User Name	Login Password
Admin*1	Admin*1

*1 Upper case and lower case letters are distinguished (case sensitive).

- 3 Press the [▲] or [▼] key to select [Network Setting], and press the [OK] key.

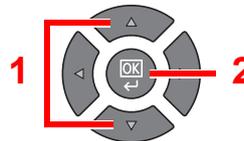
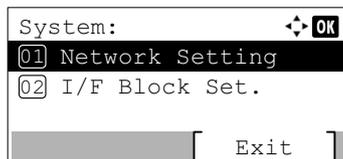


- 4 Press the [▲] or [▼] key to select [TCP/IP Settings], and press the [OK] key.

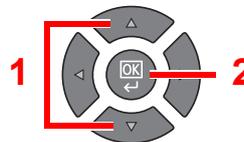
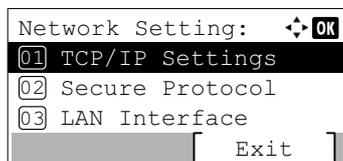


2 Configure the settings.

- 1 Press the [▲] or [▼] key to select [Bonjour], and press the [OK] key.

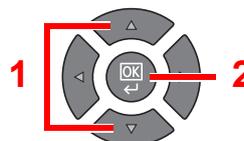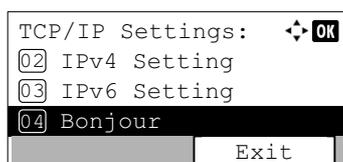

- 2 Press the [▲] or [▼] key to select [Off] or [On], and press the [OK] key.

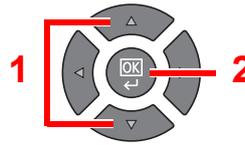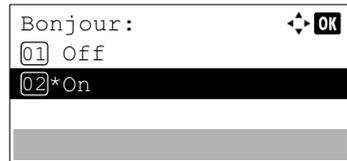

 **IMPORTANT**

After changing the setting, restart the network from System Menu, or turn the machine OFF and then ON.

 [Restart Network \(page 7-9\)](#)

 **NOTE**

The network can be configured from the PC by using Command Center RX. Refer to the **Command Center RX User Guide**.

Setting Energy Saver Function

To use the Energy Saver function, configure the following settings:

- [Sleep and Sleep Timer \(page 2-20\)](#)
- [Power Off Timer \(page 2-22\)](#)

Sleep and Sleep Timer

Sleep

To enter Sleep, press the [Energy Saver] key. All indicators on the operation panel will go out to save power except the [Energy Saver] indicators. This status is referred to as Sleep.



If print data is received during Sleep, the print job is performed while the message display remains unlit.

When using the optional FAX, received fax data is printed out while the message display also remains unlit.

To use the machine, press any key on the operation panel.

The machine will be ready to operate within 11 seconds.

Note that ambient environmental conditions, such as ventilation, may cause the machine to respond more slowly.

Sleep Timer

Sleep Timer automatically switches the machine into Sleep if left idle for a preset time.

The default preset time is 1 minute.

To change the preset sleep time, refer to [Sleep Timer on page 7-17](#).

Follow the steps below to set the sleep timer for the machine to go into sleep mode when not in use.



1 Display the screen.

- 1 Press the [Status/System Menu/Counter] key.



Status/
System Menu/
Counter



- 2 Press the [▲] or [▼] key to select [Common Settings], and press the [OK] key.

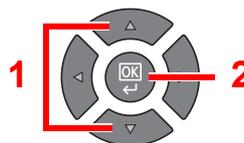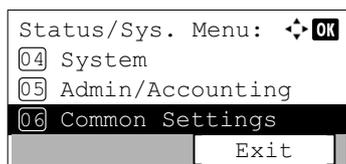

- 3 Press the [▲] or [▼] key to select [Timer Setting], and press the [OK] key.

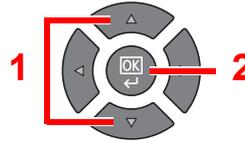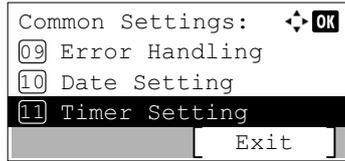

NOTE



If the login user name entry screen appears during operations, log in by referring to [Administrator User Name and Password on page 2-10](#).

The factory default login user name and login password are set as shown below.

Login User Name	Login Password
Admin*1	Admin*1


*1 Upper case and lower case letters are distinguished (case sensitive).

- 4 Press the [▲] or [▼] key to select [Sleep Timer], and press the [OK] key.

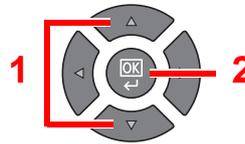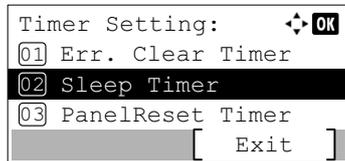

2 Set the sleep time.

Use the numeric key or press the [▲] or [▼] key to enter the sleep time, and press the [OK] key.

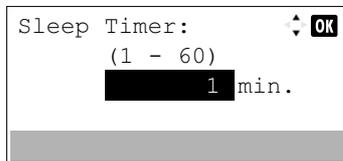

Power Off Timer

If the machine is not used while in sleep mode, the power automatically turns off. The Power Off Timer is used to set the time until the power turns off. The factory setting for the time until the power turns off is 1 hour.

To change the preset power off time, refer to [Power Off Rule on page 7-18](#) and [Power Off Timer on page 7-18](#).

To use the Power Off Timer, configure the following settings:

- [Power Off Rule on page 2-22](#)
- [Power Off Timer on page 2-23](#)

Power Off Rule

Follow the steps below to set whether the power automatically turns off when not used.



1 Display the screen.

- 1 Press the [Status/System Menu/Counter] key.



Status/
System Menu/
Counter



- 2 Press the [▲] or [▼] key to select [Common Settings], and press the [OK] key.

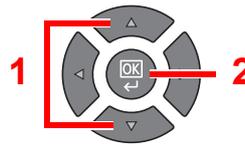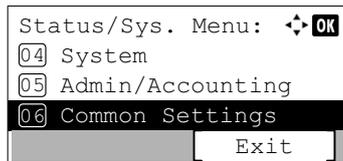

- 3 Press the [▲] or [▼] key to select [Timer Setting], and press the [OK] key.

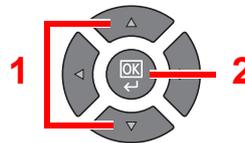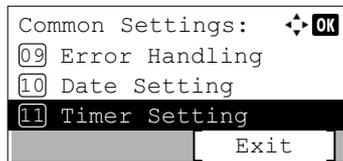

NOTE



If the login user name entry screen appears during operations, log in by referring to [Administrator User Name and Password on page 2-10](#).

The factory default login user name and login password are set as shown below.

Login User Name	Login Password
Admin*1	Admin*1



*1 Upper case and lower case letters are distinguished (case sensitive).

- 4 Press the [▲] or [▼] key to select [Power Off Rule], and press the [OK] key.

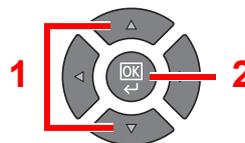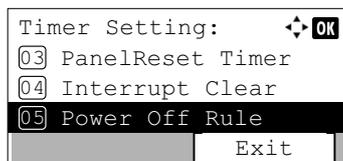

2 Set the power off rule.



- 1 Press the [▲] or [▼] key to select the condition to be set, and press the [OK] key.

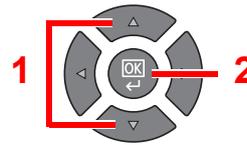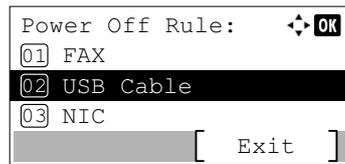

[FAX] is displayed when the optional FAX Kit is installed.

[NIC] is displayed when the optional Network Interface Kit is installed.

- 2 Press the [▲] or [▼] key to select [Off] or [On], and press the [OK] key.

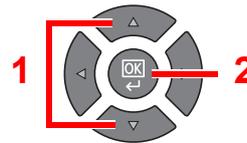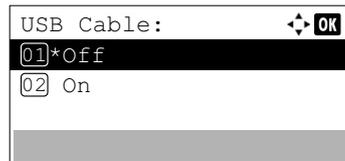

NOTE

Repeat steps 1 and 2 to set for a different condition.

Power Off Timer

Follow the steps below to select the length of time before the machine shuts off automatically when not in use.



1 Display the screen.

- 1 Press the [Status/System Menu/Counter] key.



Status/
System Menu/
Counter



- 2 Press the [▲] or [▼] key to select [Common Settings], and press the [OK] key.

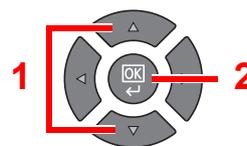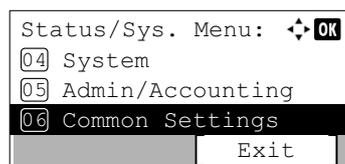

- 3 Press the [▲] or [▼] key to select [Timer Setting], and press the [OK] key.

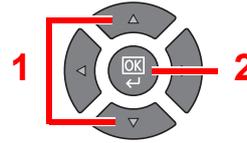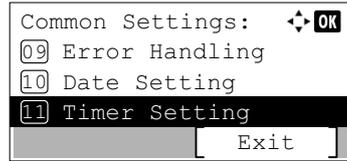



NOTE

If the login user name entry screen appears during operations, log in by referring to [Administrator User Name and Password on page 2-10](#). The factory default login user name and login password are set as shown below.

Login User Name	Login Password
Admin*1	Admin*1



*1 Upper case and lower case letters are distinguished (case sensitive).

- 4 Press the [▲] or [▼] key to select [Power Off Timer], and press the [OK] key.

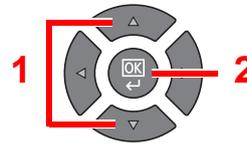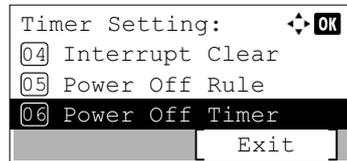

2 Set the power off time.

- Press the [▲] or [▼] key to select the power off time, and press the [OK] key.

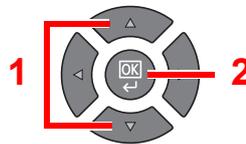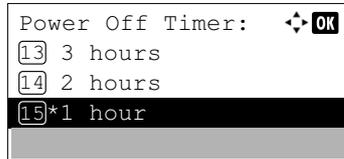


Installing Software

Install appropriate software on your PC from the Product Library disc.

When Using the Machine as the Shared Printer

Printing from the PC on the network becomes possible by connecting the PC (Host PC), which is connected to the machine via USB, to the PC on the network (Client PC).


You need to configure the following settings.

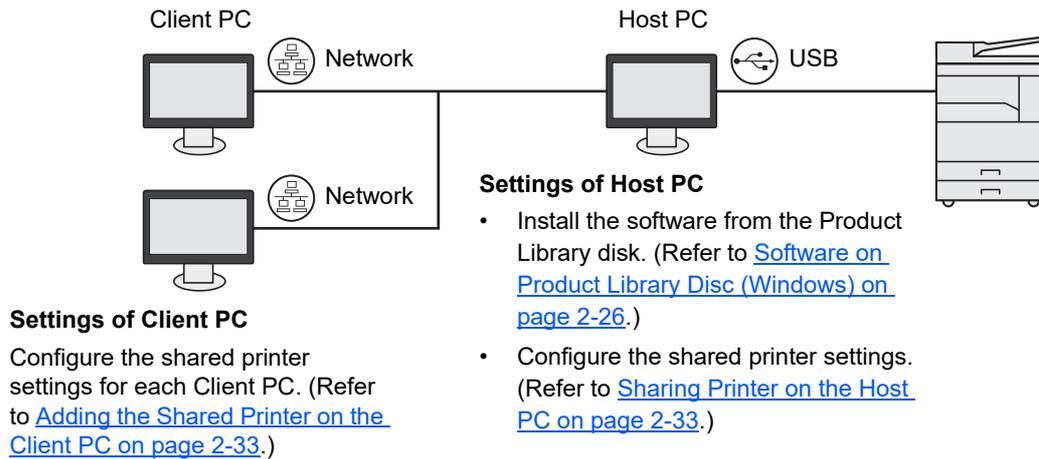

When Using the Machine as a Network Printer ^{*1}

Network printing becomes possible by connecting the machine to the PC on the network.

You need to configure the following settings.

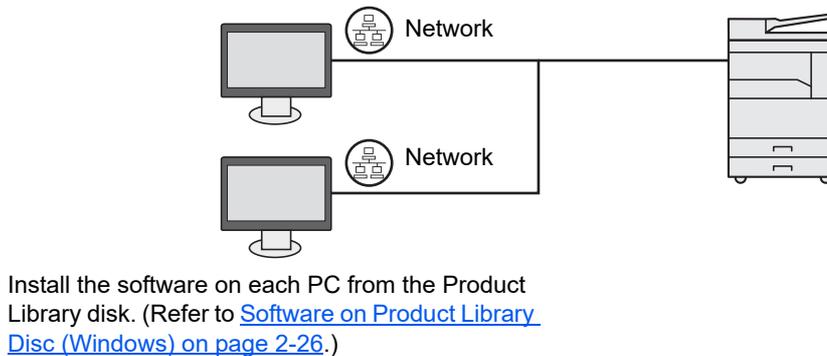

*1 The optional Network Interface Kit is required.

Software on Product Library Disc (Windows)

You can use either [[Express Install](#)] or [[Custom Install](#)] can be selected for the installation method. [[Express Install](#)] is set as the standard installation method. For items that cannot be installed by using [[Express Install](#)], install them by using [[Custom Install](#)]. For how to use [[Custom Install](#)], refer to [Custom Install on page 2-29](#).

Software	Description	Express Install
KYOCERA Client Tool	<p>Utility that enables current and all supported devices status, features and settings to be accessed.</p> <p>When KYOCERA Client Tool is installed, the following utilities are installed.</p> <ul style="list-style-type: none"> • Status Monitor (page 7-25) • Scan Destination and Print Box settings (page 7-26, page 7-32) • Configuration (page 7-25) <p>GX driver needs to be installed when using KYOCERA Client Tool.</p> <p>When connecting the computer (Host PC) connected to the machine via USB to the computer on the network (Client PC) and using the machine as a shared printer, KYOCERA Client Tool needs to be installed on the Host PC.</p>	○
GX DRIVER	Driver for printing files on a computer using the machine. This printer driver enables full use of the machine's features.	○
Kyocera TWAIN Driver GX	This driver enables scanning on the machine using a TWAIN-compliant software application.	○
Kyocera WIA Driver	<p>WIA (Windows Imaging Acquisition) is a function of Windows that enables reciprocal communication between an imaging device such as a scanner and an image processing software application. An image can be acquired using a WIA-compliant software application, which is convenient when a TWAIN-compliant software application is not installed in the computer.</p> <p>The WIA Driver of the machine can be used when connecting the machine via USB.</p>	○
KYOCERA Net Viewer	Utility that enables the machine to be monitored when connected to a network.	—
FAX Driver	This makes it possible to send a document created in a computer software application as a fax via the machine.	—



NOTE

- Installation on Windows must be done by a user logged on with administrator privileges.
- When connected by USB cable, Plug and Play is disabled on this device when in Sleep. To continue the installation, press any key on the operation panel to wake the device from Sleep before continuing.
- The optional FAX Kit is required in order to make use of fax functionality.

Installing Software in Windows


Express Install

The following procedure is an example for installing the software in Windows 10 using [\[Express Install\]](#).

For details on Custom Installation, refer to the following:

 [Custom Install \(page 2-29\)](#)


1 Insert the DVD.

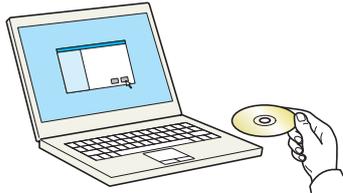

NOTE

- Installation on Windows must be done by a user logged on with administrator privileges.
- If the "Welcome to the Found New Hardware Wizard" dialog box displays, select [\[Cancel\]](#).
- If the autorun screen is displayed, click [\[Run Setup.exe\]](#).
- If the user account management window appears, click [\[Yes\]](#) ([\[Allow\]](#)).

2 Display the screen.

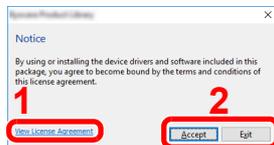


1 Click [\[View License Agreement\]](#) and read the License Agreement.

2 Click [\[Accept\]](#).

3 Select [\[Express Install\]](#).

4 Install the software.

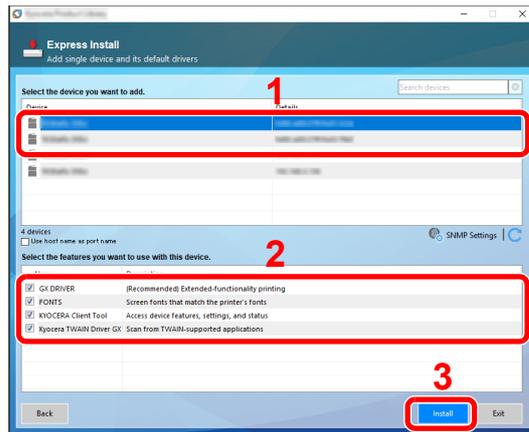

You can also select [[Use host name for port name](#)] and set to use the host name of the standard TCP/IP port. (A USB connection cannot be used.)


When you click [[Install](#)], a screen asking for your cooperation with data collection will be displayed. Select one of the answer choices and click [[OK](#)].



NOTE

- The machine cannot be detected unless it is on. If the computer fails to detect the machine, verify that it is connected to the computer via a network or USB cable and that it is turned on and click [C](#) (Reload).
- If the Windows security window appears, click [[Install this driver software anyway](#)].

5 Finish the installation.

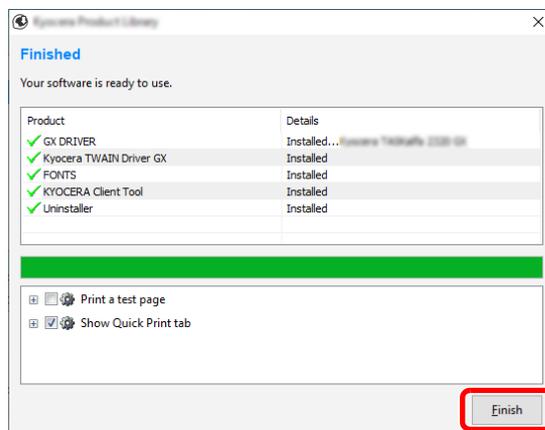

When "Your software is ready to use" appears, you can use the software. To print a test page, click the "Print a test page" checkbox and select the machine.

Click [[Finish](#)] to exit the wizard.

If a system restart message appears, restart the computer by following the screen prompts. This completes the printer driver installation procedure.

When using the Print Box, configure the settings by referring to [Setting Up the Print Box on page 2-36](#). When using this machine as a network printer, configure the network by referring to [When Connecting the Machine to the PC on the Network on page 2-37](#).

If you are installing the WIA driver, continue by configuring the [Setting WIA Driver on page 2-43](#).

Custom Install

The following procedure is an example for installing the software in Windows 10 using [\[Custom Install\]](#).


1 Insert the DVD.



NOTE

- Installation on Windows must be done by a user logged on with administrator privileges.
- If the "Welcome to the Found New Hardware Wizard" dialog box displays, select [\[Cancel\]](#).
- If the autorun screen is displayed, click [\[Run Setup.exe\]](#).
- If the user account management window appears, click [\[Yes\]](#) ([\[Allow\]](#)).

2 Display the screen.

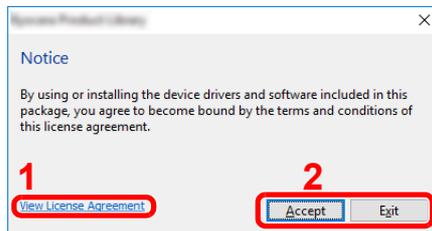


1 Click [\[View License Agreement\]](#) and read the License Agreement.

2 Click [\[Accept\]](#).

3 Select [\[Custom Install\]](#).

4 Install the software.


1 Select the device to be installed.

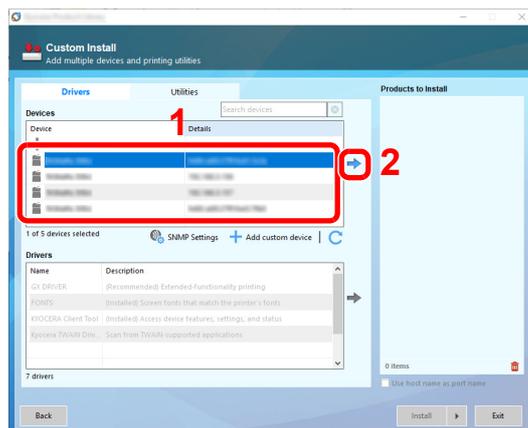


NOTE

- The machine cannot be detected unless it is on. If the computer fails to detect the machine, verify that it is connected to the computer via a network or USB cable and that it is turned on and click [\[Reload\]](#).
- If the desired device does not appear, select [\[Add custom device\]](#) to directly select the device.


2 Select the driver to be installed.

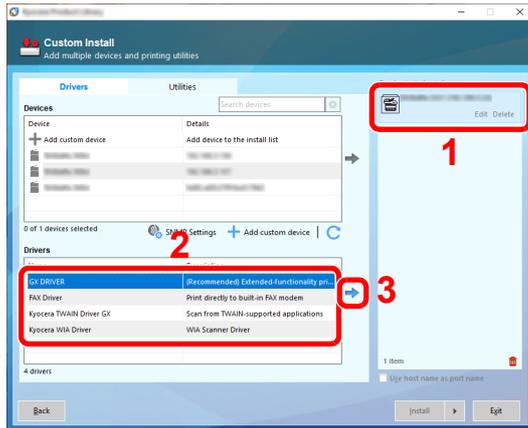

3 Click [Utility] tab and select the utility to be installed.

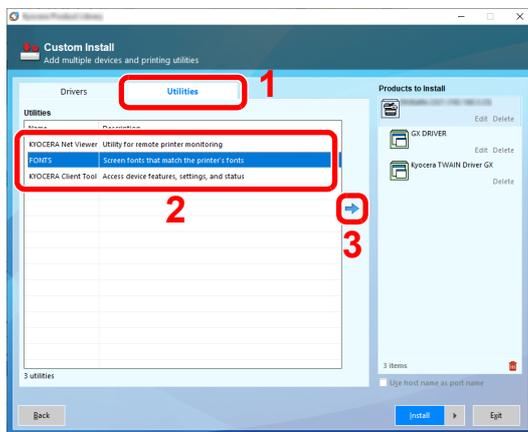


4 Click [Install].

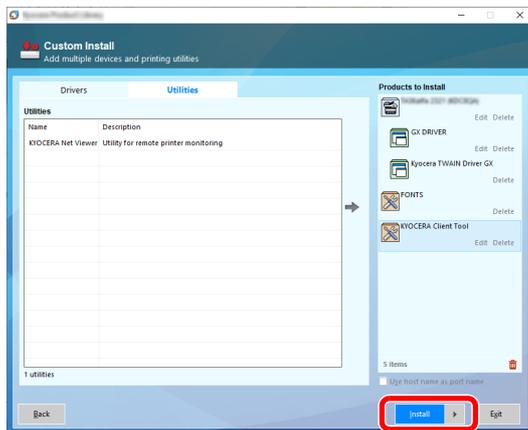

When you click [Install], a screen asking for your cooperation with data collection will be displayed. Select one of the answer choices and click [OK].

5 Finish the installation.

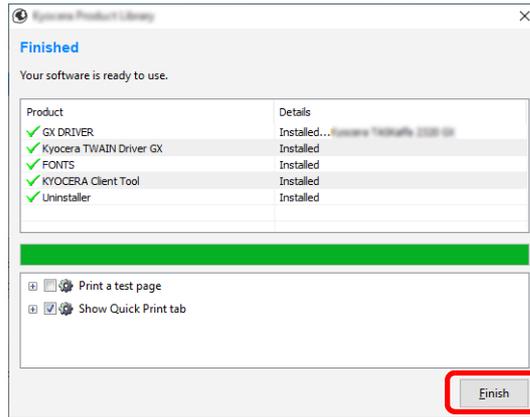

When "Your software is ready to use" appears, you can use the software. To print a test page, click the "Print a test page" checkbox and select the machine.

Click [**Finish**] to exit the wizard.

If a system restart message appears, restart the computer by following the screen prompts. This completes the printer driver installation procedure.

When using the Print Box, configure the settings by referring to [Setting Up the Print Box on page 2-36](#). When using this machine as a network printer, configure the network by referring to [When Connecting the Machine to the PC on the Network on page 2-37](#).

If you are installing the WIA driver, continue by configuring the [Setting WIA Driver on page 2-43](#).

Uninstalling the Software

Perform the following procedure to delete the Software from your computer.



NOTE

Uninstallation on Windows must be done by a user logged on with administrator privileges.

1 Display the screen.

Click the search box in the taskbar, and enter "Uninstall Product Library" in the search box. Select [\[Uninstall Product Library\]](#) in the search list.




NOTE

In Windows 8.1, click [\[Search\]](#) in charms, and enter "Uninstall Product Library" in the search box. Select [\[Uninstall Product Library\]](#) in the search list.

2 Uninstall the software.

Place a check in the check box of the software to be deleted.

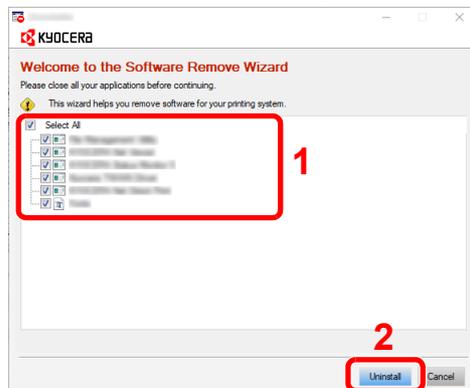

3 Finish uninstalling.

If a system restart message appears, restart the computer by following the screen prompts. This completes the software uninstallation procedure.




NOTE

- The software can also be uninstalled using the Product Library.
- In the Product Library installation screen, click [\[Uninstall\]](#), and follow the on-screen instructions to uninstall the software.

Setting the Shared Printer and FAX

If the computer connected to the machine (Host PC) via USB is also connected to the computer on the network (Client PC), printing from the computer on the network is enabled by setting the machine as the shared printer and FAX. This section explains how to operate the device on the Host PC and on the Client PC respectively by using the setting example on Windows 10.

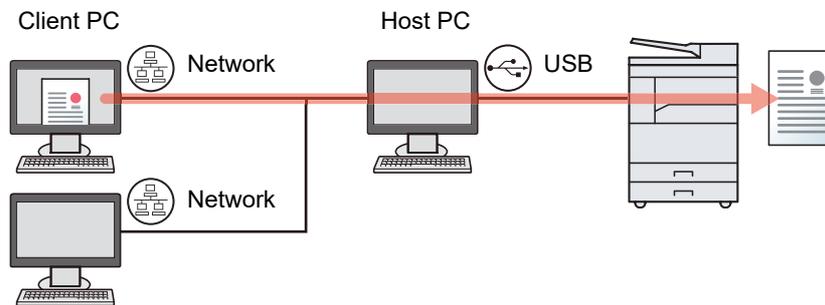

Sharing Printer on the Host PC

- 1 Click **[Start]** button on the Windows and then select **[Windows System]**, **[Control Panel]**, and **[View devices and printers]**.

NOTE

In Windows 8.1, select **[Settings]** in charms on Desktop, and select **[Control Panel]**, and then **[Devices and Printers]**.

- 2 Right-click the printer driver icon of the machine, and click the **[Printer properties]** menu of the printer driver.
- 3 Select **[Share this printer]** on the **[Sharing]** tab.
- 4 Click **[OK]**.


Adding the Shared Printer on the Client PC

- 1 Click **[Start]** button on the Windows and then select **[Windows System]**, **[Control Panel]**, and **[View devices and printers]**.

NOTE

In Windows 8.1, select **[Settings]** in charms on Desktop, and select **[Control Panel]**, and then **[Devices and Printers]**.

- 2 Click **[Add a printer]**.

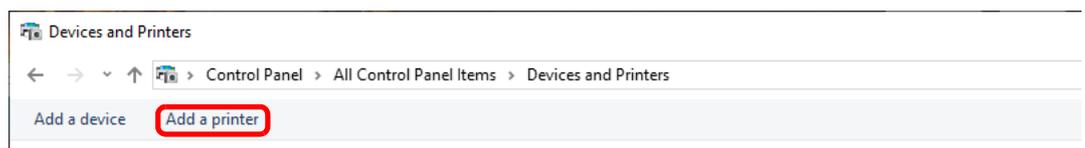

- 3 Click **[Add a network, wireless or Bluetooth printer]**.
- 4 Select the printer added via an operation on the Host PC from the list, and then click **[Next]**.
- 5 Confirm that the printer is added, and then click **[Next]**.
- 6 Print the test page as needed, and then click **[Finish]**.

Installing Software in Mac Computer

Only the machine's printer functionality can be used by a Mac computer.


NOTE

- Installation on Mac OS must be done by a user logged on with administrator privileges.
- If connecting by Bonjour, enable Bonjour in the machine's network settings.

 [Bonjour Settings \(page 2-18\)](#)


- In the Authenticate screen, enter the name and password used to log in to the operating system.

1 Insert the Product Library disc.

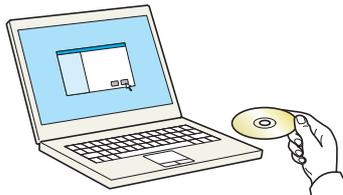

Double-click the [Kyocera] icon.

2 Display the screen.

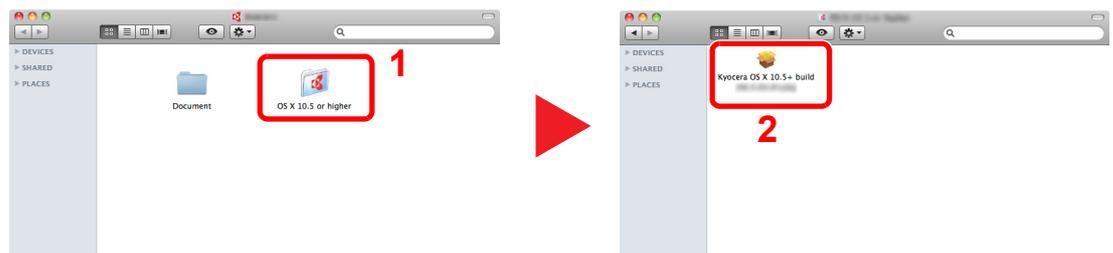

Double-click [OS X 10.5 or higher] and [Kyocera OS X 10.5+].

3 Install the Software.




Install the printer driver as directed by the instructions in the installation software.

This completes the printer driver installation.


If a USB connection is used, the machine is automatically recognized and connected. If an IP connection is used, the settings below are required.

4 Configure the printer.


- 1 Open System Preferences and add the printer.

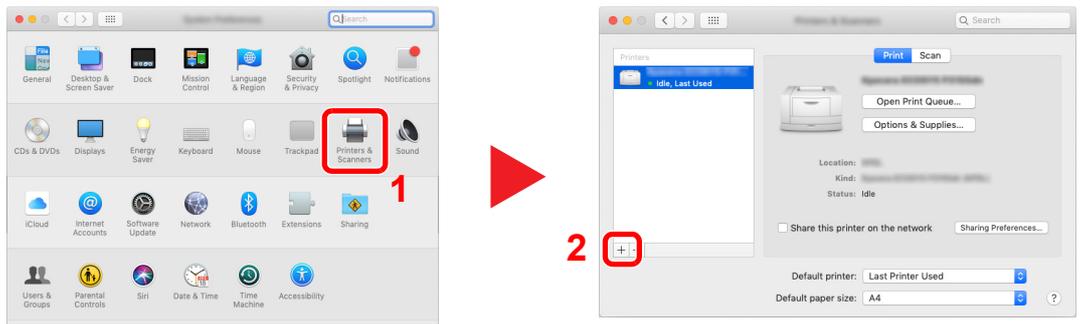

- 2 Select [Default] and click the item that appears in "Name" and then select the driver in "Use".

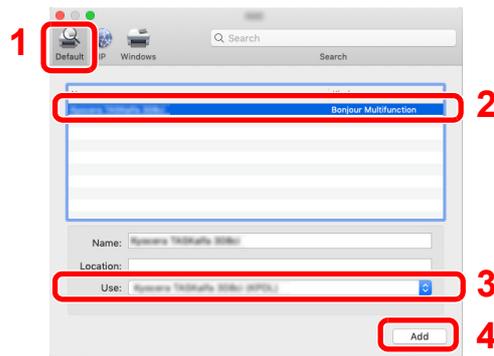

- 3 The selected machine is added.

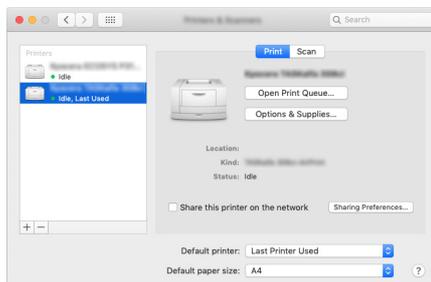

NOTE

When using an IP connection, click the IP icon for an IP connection and then enter the host name or IP address. The number entered in "Address" will automatically appear in "Name". Change if needed.

- 4 Select the printer added newly, and click the [Options & Supplies...] to select the options equipped with the machine.



Setting KYOCERA Client Tool

KYOCERA Client Tool gives you quick access to common machine features and settings, plus the current status of all supported machines.

You can also use KYOCERA Client Tool to order toner, download printer drivers and open the company website.

KYOCERA Client Tool has the following functions.

Function	Description	Reference Page
Print	Access to printing preferences and machine driver properties.	page 7-23
Device	Configure Status Monitor, Scan Destination, and Print Box settings.	page 7-23
Scan	Configure TWAIN and Quick Scan settings. Scan to PDF, Scan to E-mail and Scan to Folder can also be executed from this tab.	page 7-24
FAX *1	Access to FAX settings.	page 7-24
Maintenance	Activates the KYOCERA Net Viewer for remote device monitoring.*2 Order replacement toner, view our web site, and download software.	page 7-24

*1 Displayed only when the optional FAX Kit is installed.

*2 KYOCERA Net Viewer can be installed only when network connection is used. The optional Network Interface Kit is necessary when connecting the machine to the PC on the network.

Setting Up the Print Box

When using the Print Box, the Print Box needs to be created.

1 Start KYOCERA Client Tool.

Click [**Start**] button on the Windows and then select [**Kyocera**] and [**KYOCERA Client Tool**] to start KYOCERA Client Tool.




NOTE

In Windows 8.1, select [**Search**] in charms, [**Apps**], and then [**KYOCERA Client Tool**].

2 Display the screen.


Click [**Print Box Destination**] on the [**Device**] tab.

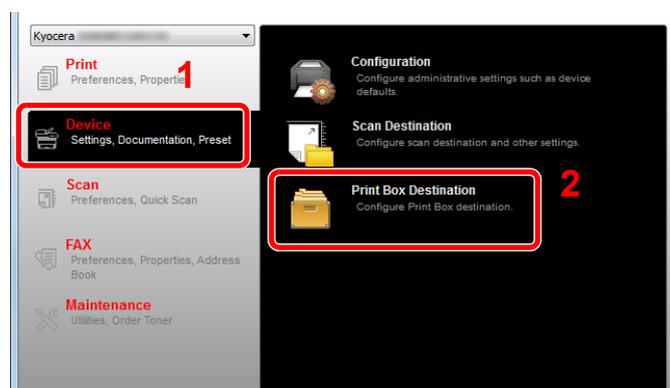

3 Configure the settings.

- 1 Select the box number (1 to 30).
- 2 Set a name for the Print Box. Up to 16 characters can be entered. This name is displayed when you select a Print Box on the machine operation panel.
- 3 Set the PIN Code as required. Select the checkbox to assign a PIN code to and enter a 4-digit numeric value.

With a PIN code assigned to the Print Box, executing the print jobs in the Print Box from the machine requires entry of the PIN code, thereby restricting user access to the print jobs. Since third parties who do not know the PIN cannot print, security is enhanced.

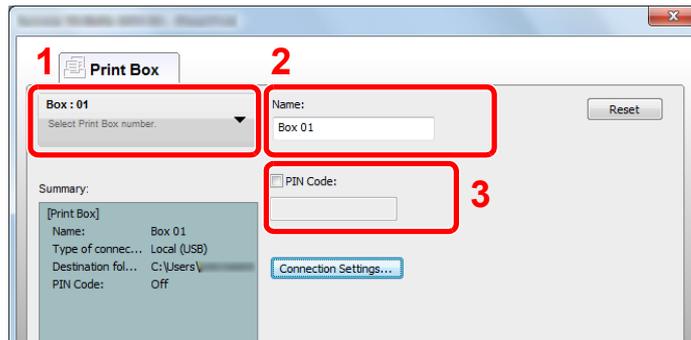

- 4 Click **[Save]**.

When Connecting the Machine to the PC on the Network

When connecting the machine to the PC on the network, configure the host name or IP address of the PC in use. When using DHCP, configure the host name. If DHCP is not used, configure the IP address.

1 Making a note of the host name or IP address.

- 1 Click **[Start]** button on the Windows and then select **[Windows System]** and **[Command Prompt]**.


NOTE

In Windows 8.1, display **[Apps]** on **[Search]** in charms on the Start screen, and select **[Command Prompt]**.

The Command Prompt window appears.

- 2 At the Command Prompt, enter "ipconfig /all" and then press **[Enter]**.

3 Check the host name and IP address.

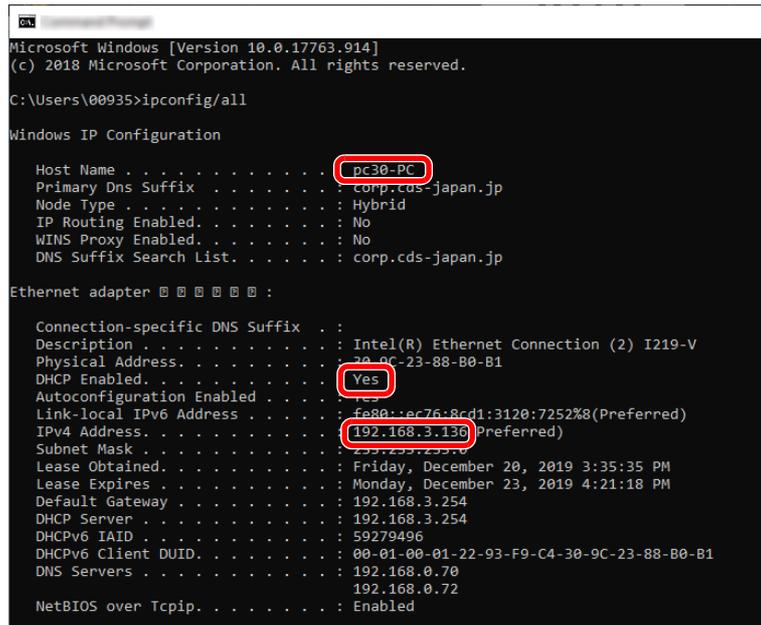


Screen example

Host Name: pc30-PC, DHCP: No, IP Address: 192.168.3.136


2 Configure the settings.

When connecting the machine to the PC on the network, configure the following settings in addition to configuration of [Setting Up the Print Box \(page 2-36\)](#).

1 Click [**Connection Settings**].

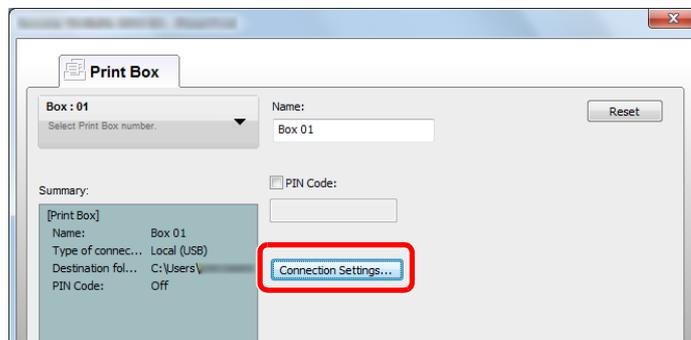


2 Select [**Network**] and enter the host name or IP address for the computer with the Print Box to be used.

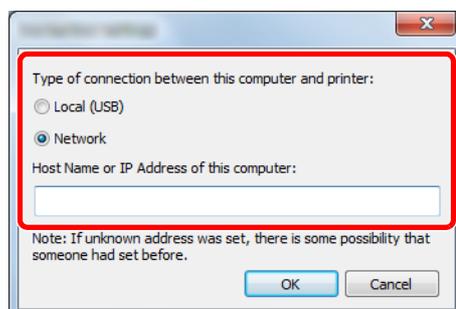

3 Click [**OK**].

- 4 Change the location of the folder used as Print Box as required. To select the folder, click [**Browse**] to open "Browse for Folder".

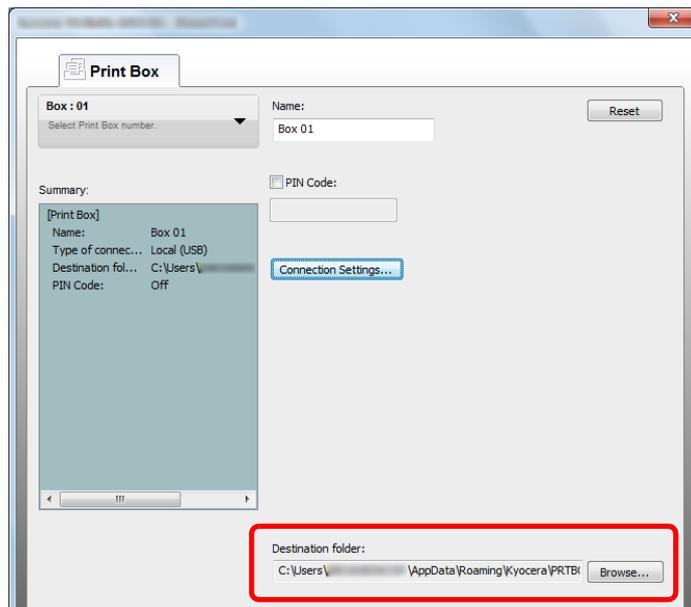

- 5 Click [**Save**].

For other settings of Print Box, refer to [Print Box Settings on page 7-32](#).

For how to use Print Box, refer to [Using Print Box on page 4-8](#).

Setting Up the Scan Destination

When saving scan data in a folder other than "Documents", Scan Destination needs to be configured in advance by using KYOCERA Client Tool.

1 Start KYOCERA Client Tool.

Click **[Start]** button on the Windows and then select **[Kyocera]** and **[KYOCERA Client ToolClient Tool]** to start KYOCERA Client Tool.




NOTE

In Windows 8.1, select **[Search]** in charms, **[Apps]**, and then **[KYOCERA Client Tool]**.

2 Display the screen.


Click **[Scan Destination]** on the **[Device]** tab.

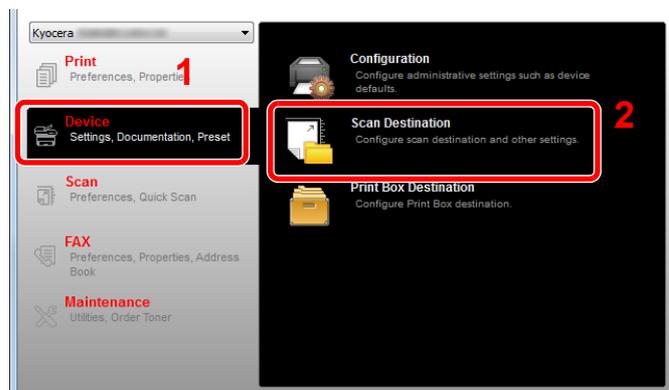

3 Configure the settings.

- 1 Select the destination number (1 to 30).
- 2 Set a name for the destination. Up to 16 characters can be entered. This name is displayed when you select a destination on the machine operation panel.

- 3 Specified folder where the scanned image will be saved. To select the folder, click **[Browse]** to open "Browse for Folder".

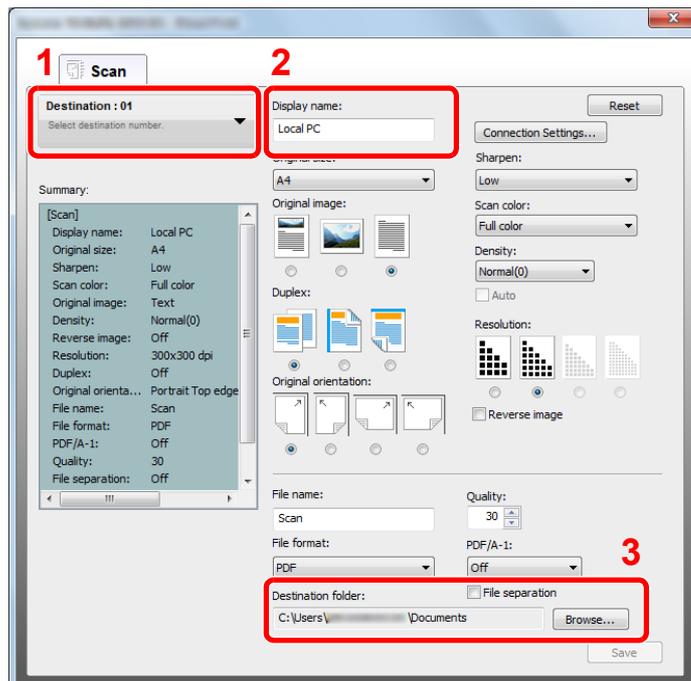

- 4 Click **[Save]**.

When Connecting the Machine to the PC on the Network

When connecting the machine to the PC on the network, configure the host name or IP address of the PC in use. When using DHCP, configure the host name. If DHCP is not used, configure the IP address.

1 Making a note of the host name or IP address.

- 1 Click **[Start]** button on the Windows and then select **[Windows System]** and **[Command Prompt]**.


NOTE

In Windows 8.1, display **[Apps]** on **[Search]** in charms on the Start screen, and select **[Command Prompt]**.

The Command Prompt window appears.

- 2 At the Command Prompt, enter "ipconfig /all" and then press **[Enter]**.

3 Check the host name and IP address.

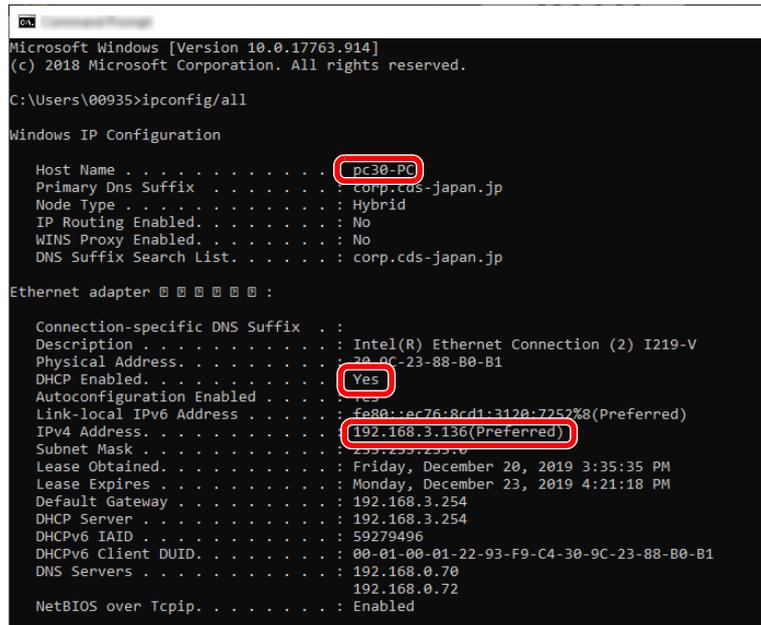


Screen example

Host Name: pc30-PC, DHCP: No, IP Address: 192.168.1.133


2 Configure the settings.

When connecting the machine to the PC on the network, configure the following settings in addition to configuration of [Setting Up the Scan Destination \(page 2-40\)](#).

1 Click [**Connection Settings**].

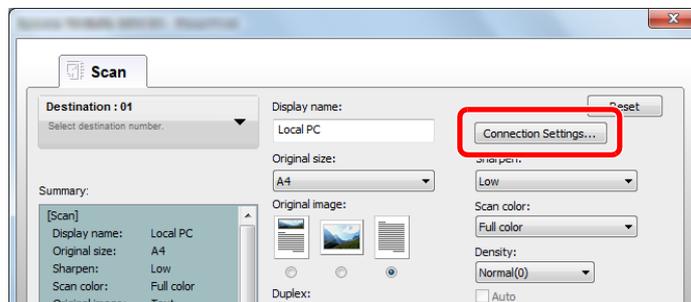

2 Select [**Network**] and enter the host name or IP address for the computer with the Print Box to be used.

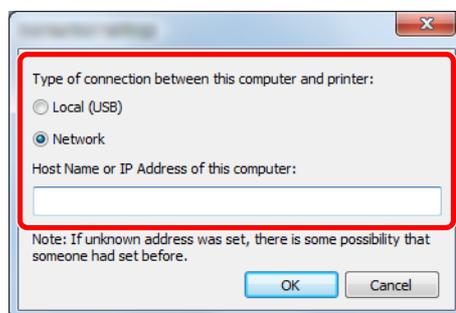

3 Click [**OK**] and [**Save**].

For other settings of scan, refer to [Scan Destination Settings on page 7-26](#).

For how to use scan, refer to [Use Your Desired Destination on page 5-39](#).

Setting WIA Driver

Register this machine to the WIA Driver. Instructions are based on interface elements as they appear in Windows 10.

1 Display the screen.


- 1 Click the search box in the taskbar, and enter "control.exe /name Microsoft.ScannersAndCameras" in the search box. Select [**control.exe /name Microsoft.ScannersAndCameras**] in the search list then the Scanners and Cameras screen appears.




NOTE

In Windows 8.1, click [**Search**] in charms, and then [**Settings**], and enter "Scanner" in the search box. Click [**View scanners and cameras**] in the search list then the Scanners and Cameras screen appears.

- 2 Select the same name as this machine from WIA Drivers, and click [**Properties**].

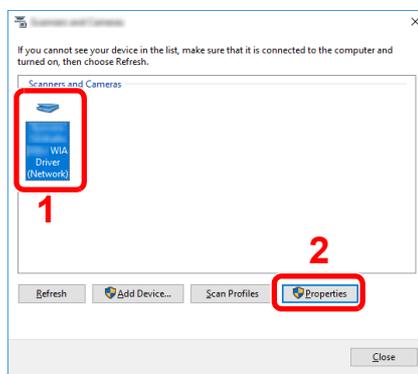

2 Configure WIA Driver.

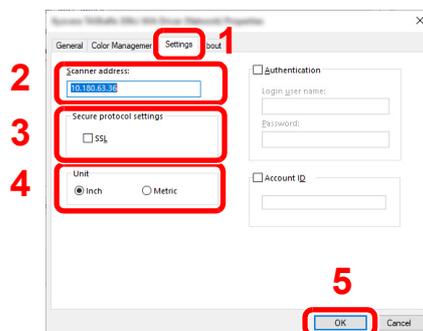

- 1 Click the [**Settings**] tab.
- 2 Enter the machine IP addresses or host name.
- 3 When using SSL, select the checkbox beside SSL.
- 4 Set units of measurement.
- 5 Click [**OK**].

Checking the Counter

Press the [**Status/System Menu/Counter**] key to check the number of sheets printed and scanned.



1 Display the screen.

- 1 Press the [**Status/System Menu/Counter**] key.

Status/
System Menu/
Counter





- 2 Press the [**▲**] or [**▼**] key to select [**Counter**], and press the [**OK**] key.

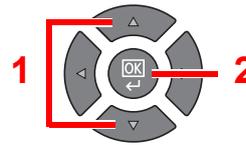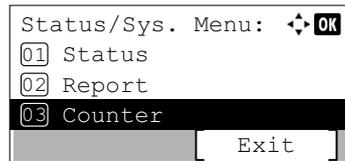

2 Check the counter.

Press the [**▲**] or [**▼**] key to select the item you want to check, and press the [**OK**] key.

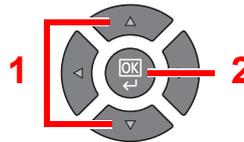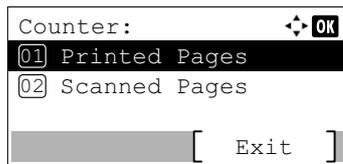

Command Center RX

If the machine is connected to the network, you can configure various settings using Command Center RX. This section explains how to access Command Center RX.

For details on Command Center RX, refer to the **Command Center RX User Guide**.

NOTE

- The optional Network Interface Kit is necessary when connecting the machine to the PC on the network.
- To fully access the features of the Command Center RX pages, enter the User Name and Password and click [\[Login\]](#). Entering the predefined administrator password allows the user to access all pages, including Address Book and Settings on the navigation menu. The factory default setting for the default user with administrator privileges is shown below.

Login User Name	Login Password
Admin ^{*1}	Admin ^{*1}

^{*1} Upper case and lower case letters are distinguished (case sensitive).

Settings that the administrator and general users can configure in Command Center RX are as follows.

Setting	Description	Administrator	General User
Device Information	The machine's structure can be checked. [Configuration] , [Counter] , [About Command Center RX]	<input type="radio"/>	<input type="radio"/>
Job Status	Displays all device information, including print and scan jobs, scheduled jobs, and job log history. [Printing Job Status] , [Printing Job Log] , [Sending Job Status] ^{*1} , [Scheduled Jobs] ^{*1} , [Sending Job Log] ^{*1}	<input type="radio"/>	<input type="radio"/>
Address Book ^{*1}	Create, edit, or delete addresses and address groups. [Address Book] , [One Touch Key]	<input type="radio"/>	<input type="radio"/>
Device Settings	Configure the advanced settings of the machine. [Paper/Feed/Output] , [Original Document] , [Energy Saver/Timer] , [Date/Time] , [System]	<input type="radio"/>	—
Function Settings	Configure the advanced function settings. [Common/Job Defaults] , [Copy] , [Printer] , [E-mail] , [FAX] ^{*1} , [Forward Rules] ^{*1} , [Operation Panel]	<input type="radio"/>	—
Network Settings	Configure the network advanced settings. [General] , [TCP/IP] , [Protocol]	<input type="radio"/>	—
Security Settings	Configure the security advanced settings. [Device Security] , [Network Security] , [Certificates]	<input type="radio"/>	—
Management Settings	Configure the advanced management settings. [Job Accounting] , [Administrator Settings] , [Notification/Report] , [SNMP] , [Reset]	<input type="radio"/>	—

^{*1} Displayed only when the optional FAX Kit is installed.

Accessing Command Center RX

1 Display the screen.

- 1 Launch your Web browser.
- 2 In the address or location bar, enter the machine's IP address or the host name.

Examples: `https://192.168.48.21/` (for IP address)

`https://MFP001` (if the host name is "MFP001")



The web page displays basic information about the machine and Command Center RX as well as their current status.



NOTE

When connecting to Command Center RX, a message may appear that reads "There is a problem with the security certificate of this website". To prevent this message appearing, install the device certificates of the machine to the Web browser. For details, refer to **Command Center RX User Guide**.

2 Configure the function.

Select a category from the navigation bar on the left of the screen. For details, refer to **Command Center RX User Guide**.


3 Preparation before Use

This chapter explains the following operations.


Using the Operation Panel	3-2
Operation Panel Keys	3-2
Operation Method	3-3
Display for Originals and Paper	3-4
Help Screen	3-4
Loading Paper	3-5
Precaution for Loading Paper	3-6
Loading in the Cassettes	3-7
Loading Paper in the Multi Purpose Tray	3-10
Specifying Paper Size and Media Type	3-13

Using the Operation Panel

 Operation Panel Keys

 <p>Status/ System Menu/ Counter</p>	<p>Displays the following screens. Status / Report / Counter/ System / Admin/ Accounting / Common Settings / Copy / Printer / FAX*¹ / Edit Destination*¹ / Adjust/Maint.</p>	 <p>Density</p>	<p>Displays the density setting screen.</p>	 <p>Function Menu</p>	<p>Displays the function menu for copy and FAX.*¹</p>
 <p>Program</p>	<p>Displays the Program screen.</p>	 <p>Original Image</p>	<p>Displays the original image setting screen.</p>		<p>Increments or decrements numbers, or selects menu in the message display. In addition, moves the cursor when entering the characters</p>
 <p>Print Box</p>	<p>Displays the Print Box screen.</p>	 <p>Duplex</p>	<p>Displays the duplex setting screen.</p>		<p>Finalizes a function or menu, and numbers that have been entered.</p>
 <p>Copy</p>	<p>Displays the Copy screen.</p>	 <p>Combine</p>	<p>Displays the combine setting screen.</p>	 <p>Back</p>	<p>Returns to the previous display.</p>
 <p>Scan</p>	<p>Displays the Scan screen.</p>	 <p>ID Card Copy</p>	<p>Displays the ID card Copy screen.</p>		
 <p>FAX</p>	<p>Displays the FAX screen.*¹</p>				

Message display.
Displays the setting menu, machine status, and error messages.

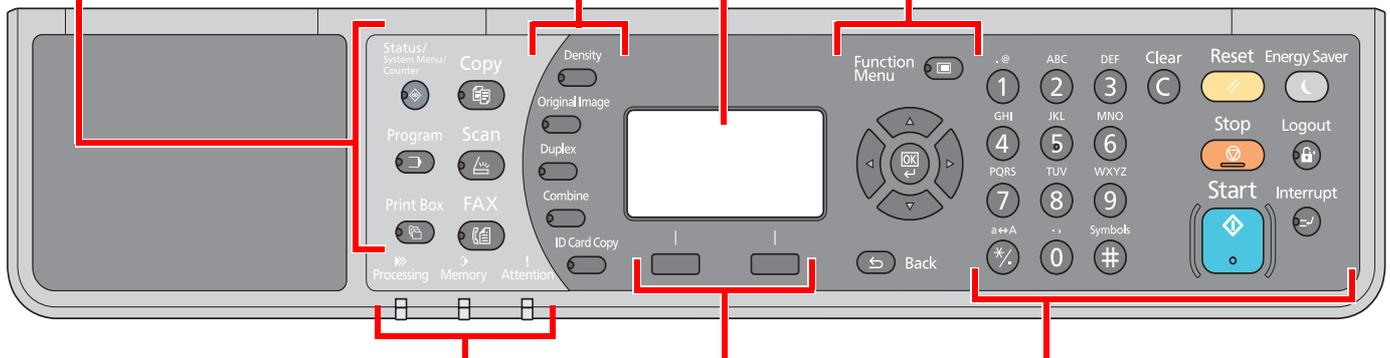

Processing: Blinks while printing or sending/receiving.

Memory: Lights when there is a received document in the FAX memory.*¹

Attention: Lights or blinks when an error occurs and a job is stopped.

Select Key: Selects the menu displayed at the bottom of the message display.

 <p>Numeric keys. Enter numbers and characters.</p>	 <p>Reset</p>	<p>Returns settings to their default states.</p>	 <p>Energy Saver</p>	<p>Puts the machine to sleep or wakes it up.</p>
	 <p>Stop</p>	<p>Cancels or pauses the job in progress.</p>	 <p>Logout</p>	<p>Returns to the account ID entry screen. (i.e. logout)</p>
 <p>Clear</p>	 <p>Start</p>	<p>Starts copying and scanning operations and processing for setting operations.</p>	 <p>Interrupt</p>	<p>Displays the Interrupt Copy screen.</p>


*¹ The optional FAX Kit is required.

Operation Method

This section explains how to operate the setting menus on the message display.


Displaying the Menus and Configuring Settings

Press the [Status/System Menu/Counter] key, [Function Menu] key, or function keys to display the setting menus. Press the [▲] key, [▼] key, [◀] key, [▶] key, [OK] key, or [Back] key to select a menu, and perform settings.

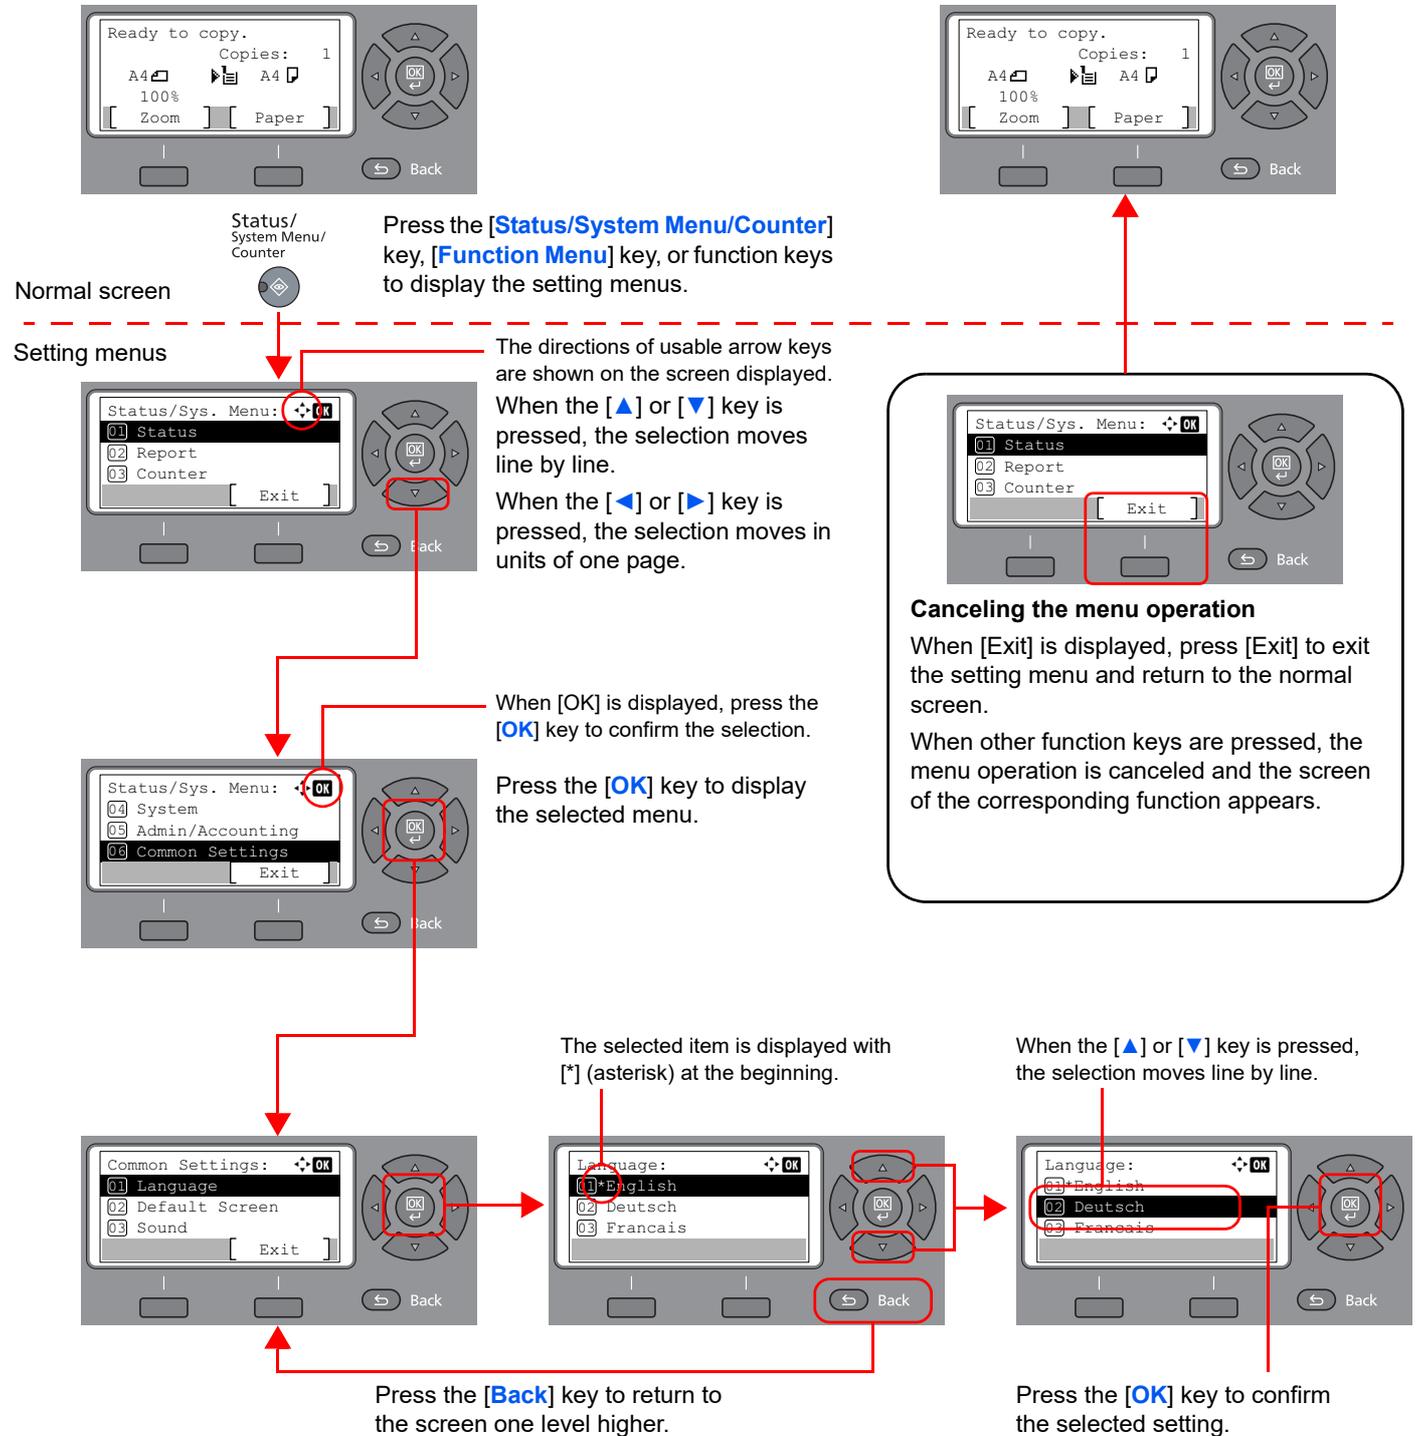

Display for Originals and Paper

The copy screen displays the selected paper source.

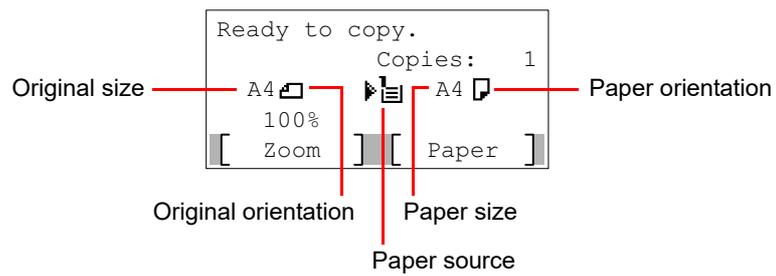

Help Screen

If you have difficulty operating the machine, you can check how to operate it using the operation panel.

When [Help] is displayed on the message display, press [Help] to display the Help screen. The Help screen shows machine operation.




Press [▼] to display the next step or press [▲] to display the previous step.

Press the [OK] key to exit the Help screen.

Loading Paper

Paper can be loaded in the one standard cassette and the multi purpose tray. A paper feeder is also available as an option. (Refer to [Optional Equipment on page 10-2.](#))

For the paper load methods for each cassette, refer to the page below.

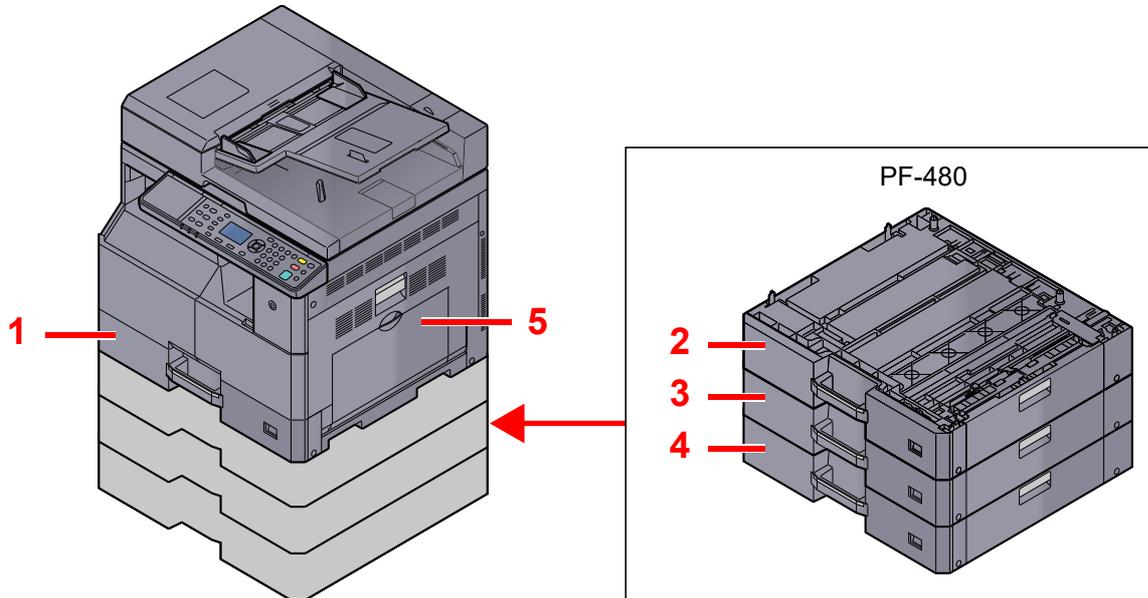


No.	Cassettes	Page
1	Cassette 1	page 3-7
2	Cassette 2	page 3-7
3	Cassette 3	page 3-7
4	Cassette 4	page 3-7
5	Multi Purpose Tray	page 3-10

 **NOTE**

- The number of sheets that can be held varies depending on your environment and paper type.
- You should not use inkjet printer paper or any paper with a special surface coating. (Such paper may cause paper jams or other faults.)

Precaution for Loading Paper

When you open a new package of paper, fan the sheets to separate them slightly prior to loading in the following steps.

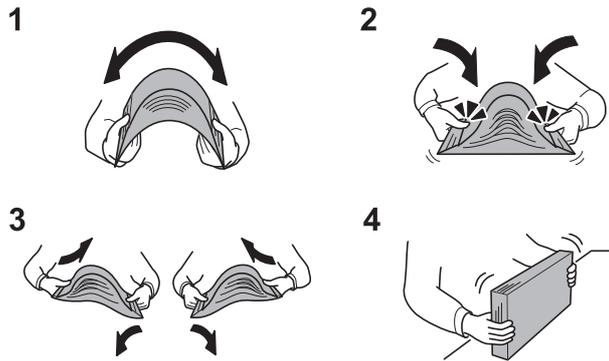

- 1 Bend the whole set of sheets to swell them in the middle.
- 2 Hold the stack at both ends and stretch it while keeping the entire stack swelled.
- 3 Raise the right and left hands alternately to create a gap and feed air between the papers.
- 4 Finally, align the papers on a level, flat table.

In addition, note the following points.

- If the paper is curled or folded, straighten it before loading. Paper that is curled or folded may cause a jam.
- Avoid exposing opened paper to high temperatures and high humidity as dampness can be a cause of problems. Seal any remaining paper after loading in the multi purpose tray or cassettes back in the paper storage bag.
- If the machine will not be used for a prolonged period, protect all paper from humidity by removing it from the cassettes and sealing it in the paper storage bag.

✔ IMPORTANT

If you copy onto used paper (paper already used for printing), do not use paper that is stapled or clipped together. This may damage the machine or cause poor image quality.

💡 NOTE

If you use special paper such as letterhead, paper with holes or paper with pre-prints like logo or company name, refer to [Paper on page 10-8](#).

Loading in the Cassettes


The standard cassette can hold plain paper, recycled paper or color paper. Cassette 1 hold up to 300 sheets of plain paper (80 g/m²).

For details of the supported paper sizes, refer to [Choosing the Appropriate Paper on page 10-9](#). For the paper type setting, refer to [Media Type Set. \(Media Type Settings\) on page 7-15](#).

✔ IMPORTANT

- The cassettes can hold paper with weight between 64 - 105 g/m².
- Do not load thick paper that is heavier than 106 g/m² in the cassettes. Use the multi purpose tray for paper that is heavier than 106 g/m².


1 Pull the cassette out toward you until it stops.

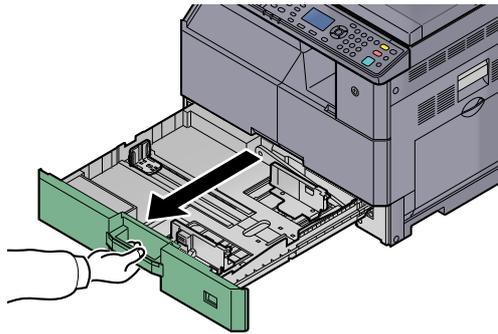

NOTE

Do not pull out more than one cassette at a time.


2 Push down on the cassette base plate and secure it.

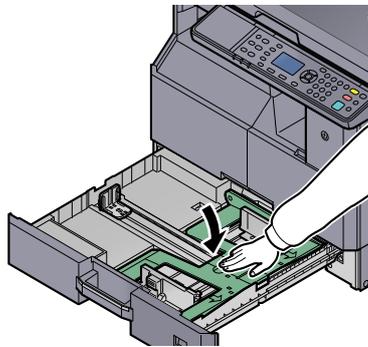

3 Adjust the cassette size.

- 1 Holding the paper width adjusting tab, move the paper width guides to fit the paper.

Paper sizes are marked on the cassette.

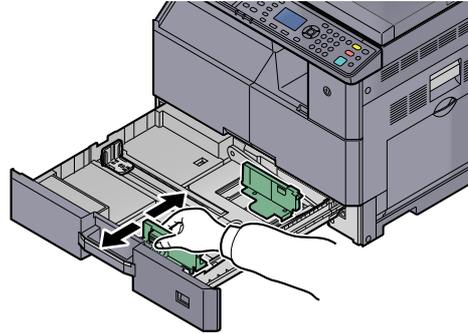


✔ **IMPORTANT**

Make sure that the width guides are flush against the paper. If there is space between the guides and the paper, set the width guides again.

- 2 Squeeze the ends of the bottom of the paper length guide and move the guide to fit the length of the paper.

Paper sizes are marked on the cassette.

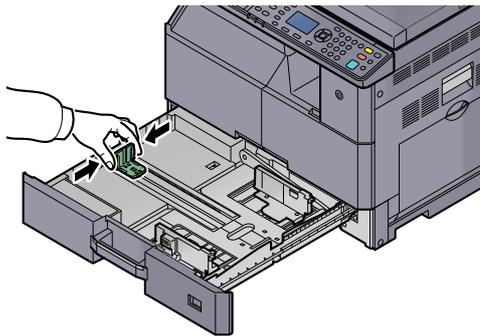


✔ **IMPORTANT**

Make sure that the length guide is flush against the paper. If there is space between the guide and the paper, set the length guide again.


4 Load paper.

- 1 Set the paper strait from the upper part.

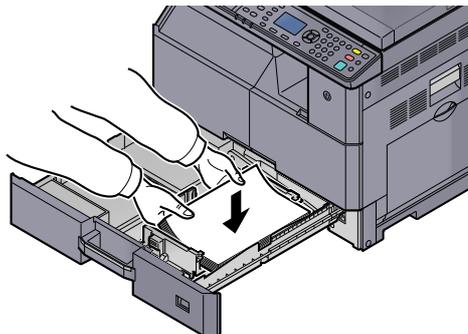


✔ **IMPORTANT**

- Load the paper with the print side facing up.
- After removing new paper from its packaging, fan the paper before loading it in the cassette. (Refer to [Precaution for Loading Paper on page 3-6.](#))
- Before loading the paper, be sure that it is not curled or folded. Paper that is curled or folded may cause paper jams.
- Ensure that the loaded paper does not exceed the level indicator (see illustration below).
- The paper length and width guides must be adjusted to the paper size before loading the paper. Loading the paper without adjusting these guides may cause skewed feeding and paper jams.
- Be sure that the paper length and width guides rest securely against the paper. If there is a gap, readjust the guides to fit the paper.

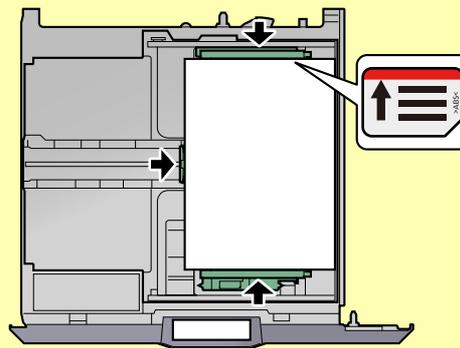

- 2** Insert the appropriate paper size card in the slot to indicate the size of the paper inside.

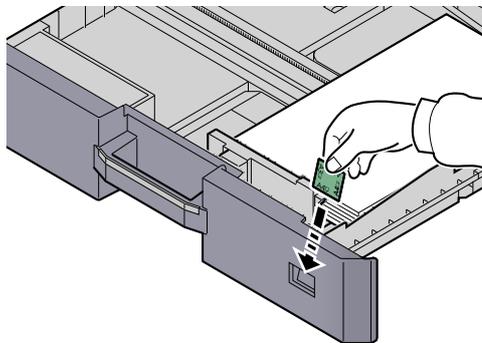

- 5** Gently push the cassette back in.

- 6** Select the media type (plain, recycled, etc.) loaded in the cassette.



[Specifying Paper Size and Media Type for the Cassettes \(page 3-13\)](#)

Loading Paper in the Multi Purpose Tray

The multi purpose tray will hold up to 100 sheets of A4 or smaller plain paper (80 g/m²) or up to 25 sheets of plain paper (80 g/m²) larger than A4.

For details of the supported paper sizes, refer to [Choosing the Appropriate Paper on page 10-9](#). For the paper type setting, refer to [Media Type Set. \(Media Type Settings\) on page 7-15](#).

✔ IMPORTANT

If you are using a paper weight of 106 g/m² or more, set the media type to Thick and set the weight of the paper you are using.


The capacity of the multi purpose tray is as follows.

- A4 or smaller plain paper (80 g/m²), recycled paper or color paper: 100 sheets
- B4 or larger plain paper (80 g/m²), recycled paper or color paper: 25 sheets
- Hagaki: 15 sheets
- OHP film: 25 sheets
- Envelope DL, Envelope C4, Envelope C5, Envelope #10, Envelope #9, Envelope #6, Monarch, Youkei 4, Youkei 2: 5 sheets

📄 NOTE


- When you load custom size paper, enter the paper size by referring to [Specifying Paper Size and Media Type for the Multi Purpose Tray \(MP Tray Setting\) on page 3-15](#).
- When you use special paper such as transparencies or thick paper, select the media type by referring to [Specifying Paper Size and Media Type for the Multi Purpose Tray \(MP Tray Setting\) on page 3-15](#).

1 Open the multi purpose tray.

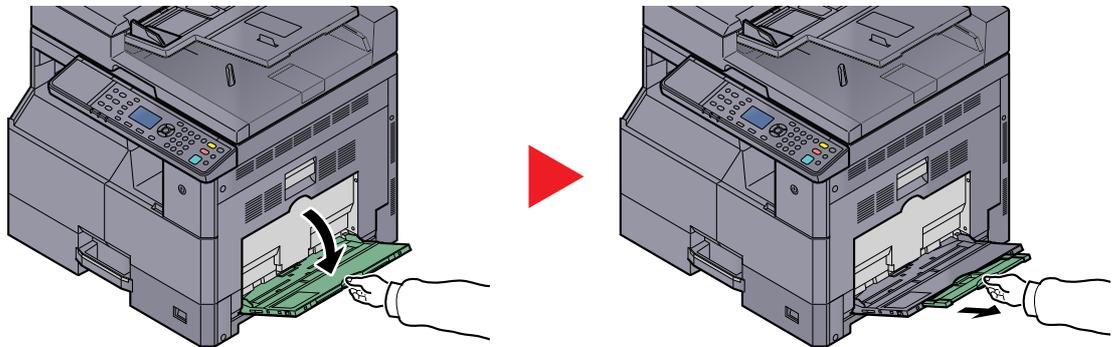


Pull out the MP tray extension to match the paper size. Refer to the label which sealed inside the machine when opening the MP tray.

2 Adjust the multi purpose tray size.

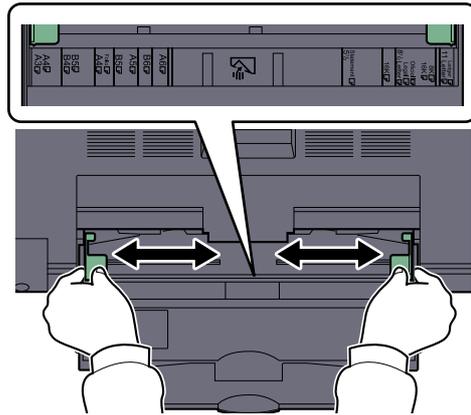

3 Load paper.

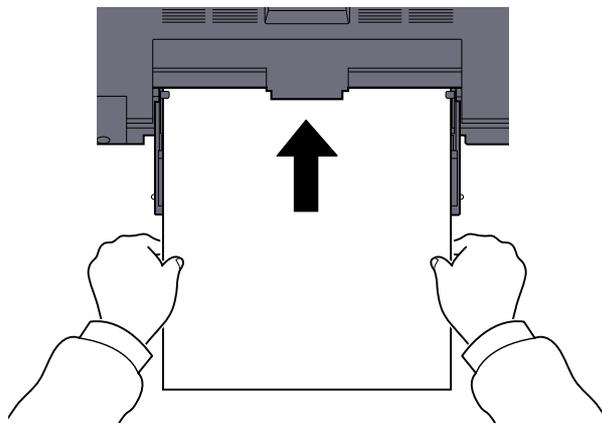

Insert the paper along the paper width guides into the tray until it stops.

After removing new paper from its packaging, fan the paper before loading it in the multi-purpose tray.

 [Precaution for Loading Paper \(page 3-6\)](#)

IMPORTANT

- When loading the paper, keep the print side facing down.
- Curled paper must be uncurled before use.
- Straighten the top edge if it is curled.
- When loading paper into the multi purpose tray, check that there is no paper left over in the tray from a previous job before loading the paper. If there is just a small amount of paper left over in the multi purpose tray and you want to add more, first remove the left-over paper from the tray and include it with the new paper before loading the paper back into the tray.
- If there is a gap between the paper and the paper width guides, readjust the guides to fit the paper in order to prevent skewed feeding and paper jams.


4 Select the media type (plain, recycled, etc.) loaded in the multi-purpose tray.

 [Specifying Paper Size and Media Type for the Multi Purpose Tray \(MP Tray Setting\) \(page 3-15\)](#)

When you load envelopes or cardstock in the multi purpose tray

Load the paper with the print side facing down. For the procedure for printing, refer to the **Printer Driver User Guide**.

Example: When printing the address.

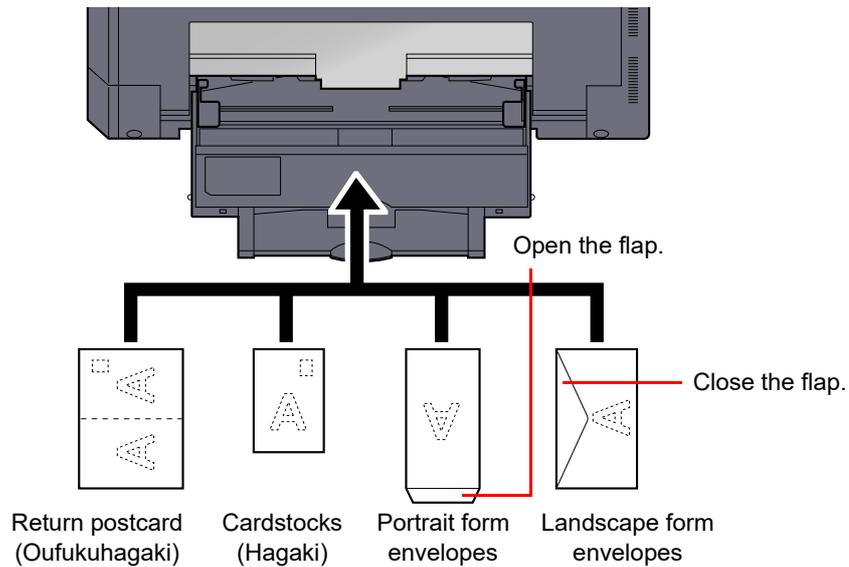

✔ IMPORTANT

- Use unfolded return postcard (Oufukuhagaki).
- How to load envelopes (orientation and facing) will differ depending on the type of envelope. Be sure to load it in correctly, otherwise printing may be done in the wrong direction or on the wrong face.

🔗 NOTE

When you load envelopes in the multi purpose tray, select the envelope type by referring to [Specifying Paper Size and Media Type for the Multi Purpose Tray \(MP Tray Setting\)](#) on page 3-15.

Specifying Paper Size and Media Type

The default paper size setting for cassette 1 and for the optional paper feeder (cassettes 2 to 4) is [Auto], and the default media type setting is [Plain]. For the multi purpose tray, the default paper size setting is [A4], and the default media type setting is [Plain].

To fix the type of paper to be used in cassettes, specify the paper size and media type setting. (Refer to [Specifying Paper Size and Media Type for the Cassettes on page 3-13](#).) To change the type of paper to be used in the multi purpose tray, specify the paper size and media type setting. (Refer to [Specifying Paper Size and Media Type for the Multi Purpose Tray \(MP Tray Setting\) on page 3-15](#).)

Specifying Paper Size and Media Type for the Cassettes

To fix the type of paper to be used in cassette 1 or the optional paper feeders (cassettes 2 to 4), specify the paper size. Also, if you use a media type other than plain paper, specify the media type setting.

Selection Item		Selectable Size/Type
Cassette 1 (to 4) Size	Auto	Paper size is automatically detected and selected. Value: Metric, Inch
	Standard Size	Available options are as follows: Value: A3, A4-R, A4, A5-R, B4, B5-R, B5, Folio, 216 × 340 mm, Ledger, Letter-R, Letter, Legal, Statement, Oficio II, 8K, 16K-R, 16K
Cassette 1 (to 4) Type* ¹		Select the media type. Value: Plain (52 to 105 g/m ²), Rough, Vellum (52 to 105 g/m ²), Recycled, Preprinted* ² , Bond, Color, Prepunched* ² , Letterhead* ² , Thick (106 to 128 g/m ²), High Quality, Custom 1-8

*¹ To change to a media type other than [Plain], refer to [Media Type Set. on page 7-12](#). When a paper weight that cannot be loaded in the cassette is set for a media type, that media type does not appear.

*² To print on preprinted or prepunched paper or on letterhead, refer to [SpecialPaper Act. on page 7-13](#).



1 Display the screen.

- 1 Press the [**Status/System Menu/Counter**] key.



Status/
System Menu/
Counter





- 2 Press the [**▲**] or [**▼**] key to select [Common Settings], and press the [**OK**] key.

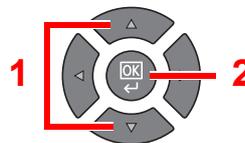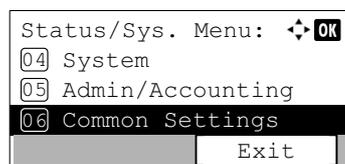

- 3 Press the [**▲**] or [**▼**] key to select [Orig./Paper Set.], and press the [**OK**] key.

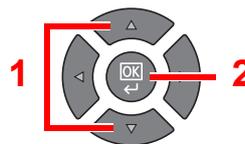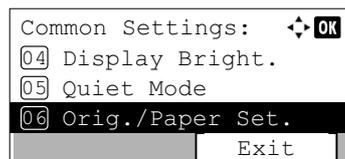

- 4 Press the [▲] or [▼] key to select [Cassette 1 (to 4) Set.], and press the [OK] key.

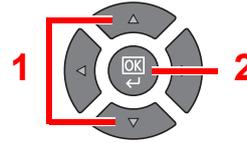
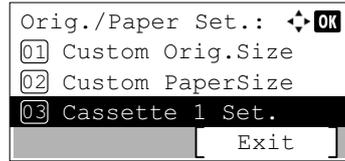


 **NOTE**



[Cassette 2] to [Cassette 4] are shown when the optional paper feeder is installed.

2 Specify the paper size.


- 1 Press the [▲] or [▼] key to select [Cassette 1 (to 4) Size], and press the [OK] key.

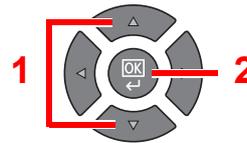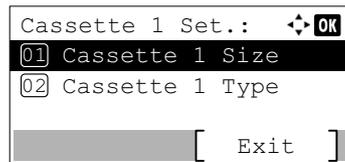


- For automatic detection of the paper size, press the [▲] or [▼] key to select [Auto], and press the [OK] key.

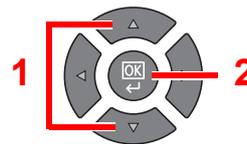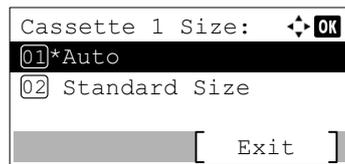



Press the [▲] or [▼] key to select [Metric] or [inch] as the unit, and press the [OK] key.

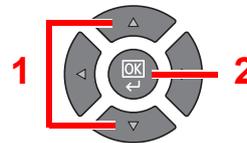

- To select the paper size, press the [▲] or [▼] key to select [Standard Size], and press the [OK] key.

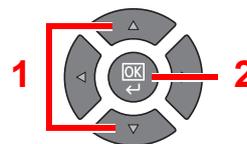

Press the [▲] or [▼] key to select the paper size, and press the [OK] key.

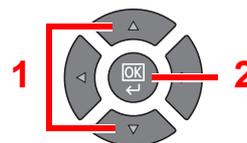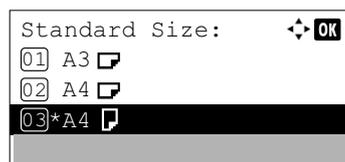


- 2 Press the [Back] key.





3 Specify the media type.

- 1 Press the [▲] or [▼] key to select [Cassette 1 (to 4) Type], and press the [OK] key.

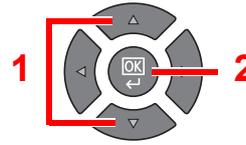

- 2 Press the [▲] or [▼] key to select the media type, and press the [OK] key.

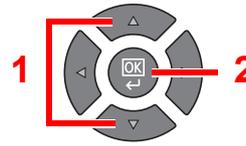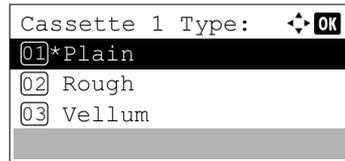

Specifying Paper Size and Media Type for the Multi Purpose Tray (MP Tray Setting)

To change the type of paper to be used in the multi purpose tray, specify the paper size. When using other than a plain paper, specify the media type.

Selection Item		Selectable Size/Type
MP Tray Size	Standard Size	Available options are as follows: Value: A3, A4-R, A4, A5-R, A6-R, B4, B5-R, B5, B6-R, Folio, 216 × 340 mm, Ledger, Letter-R, Letter, Legal, Statement, Executive, Oficio II, 8K, 16K-R, 16K, ISO B5, Envelope #10, Envelope #9, Envelope #6, Envelope Monarch, Envelope DL, Envelope C5, Envelope C4, Hagaki, Oufukuhagaki, Youkei 4, Youkei 2, Custom*1
	Size Entry	Enter the size not included in the standard size. Value Metric X: 148 to 432 mm (in 1 mm increments) Y: 98 to 297 mm (in 1 mm increments) Inch X: 5.83 to 17.00" (in 0.01" increments) Y: 3.86 to 11.69" (in 0.01" increments)
MP Tray Type*2		Select the media type. Value: Plain (52 to 105 g/m ²), Transparency, Rough, Vellum (52 to 105 g/m ²), Labels, Recycled, Preprinted*3, Bond, Cardstock, Color, Prepunched*3, Letterhead*3, Envelope, Thick (106 to 163 g/m ²), High Quality, Custom 1-8

*1 For instructions on how to specify the custom paper size, refer to [Custom PaperSize on page 7-12](#).

*2 To change to a media type other than [Plain], refer to [Media Type Set. on page 7-12](#).

*3 To print on preprinted or prepunched paper or on letterhead, refer to [SpecialPaper Act. on page 7-13](#).



1 Display the screen.

- 1 Press the [Status/System Menu/Counter] key.



Status/
System Menu/
Counter





- 2 Press the [▲] or [▼] key to select [Common Settings], and press the [OK] key.

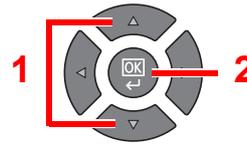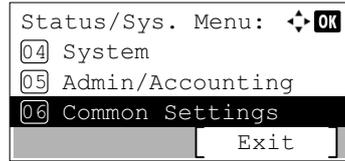

- 3 Press the [▲] or [▼] key to select [Orig./Paper Set.], and press the [OK] key.

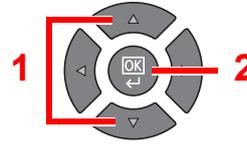
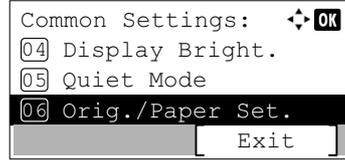


- 4 Press the [▲] or [▼] key to select [MP Tray Set.], and press the [OK] key.

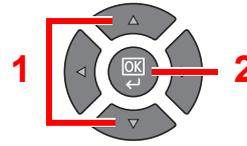
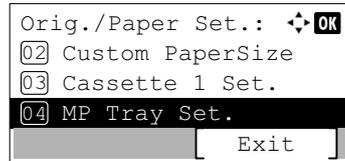


2 Specify the paper size.



- 1 Press the [▲] or [▼] key to select [MP Tray Size], and press the [OK] key.

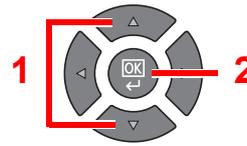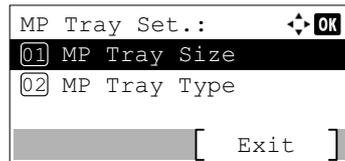


- To select the paper size, press the [▲] or [▼] key to select [Standard Size], and press the [OK] key.

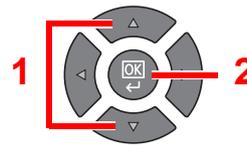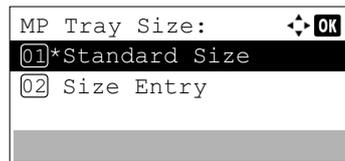

Press the [▲] or [▼] key to select the paper size, and press the [OK] key.

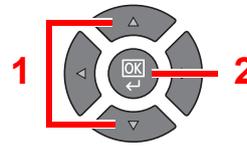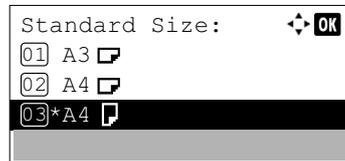


- To enter a size not displayed in the standard sizes, press the [▲] or [▼] key to select [Size Entry], and press the [OK] key.

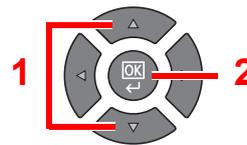

Use the numeric keys or press the [▲] or [▼] key to enter the paper length, and press the [OK] key.



Use the numeric keys or press the [▲] or [▼] key to enter the paper width, and press the [OK] key.

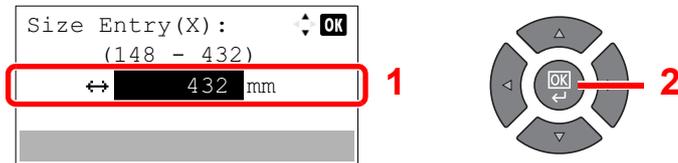

2 Press the [Back] key.




3 Specify the media type.

1 Press the [▲] or [▼] key to select [MP Tray Type], and press the [OK] key.



2 Press the [▲] or [▼] key to select the media type, and press the [OK] key.

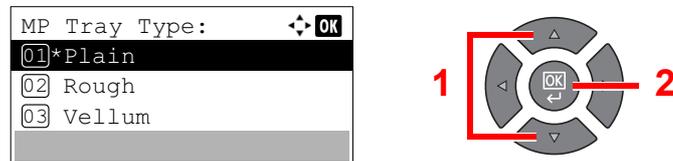

4 Printing from PC

This chapter explains the following topics:


Printing from PC	4-2
Printer Driver Print Settings	4-5
Printer Driver Help	4-6
Changing the Default Printer Driver Settings (Windows 10)	4-6
Canceling Jobs	4-6
Using Print Box	4-8
Flow of Operations of Print Box	4-8
Saving Document to a Print Box	4-12
Printing Document from Print Box	4-13

Printing from PC

Follow the steps below to print documents from applications.

NOTE

- To print the document from applications, install the printer driver on your computer from the supplied Product Library disc.
- In some environments, the current settings are displayed at the bottom of the printer driver.

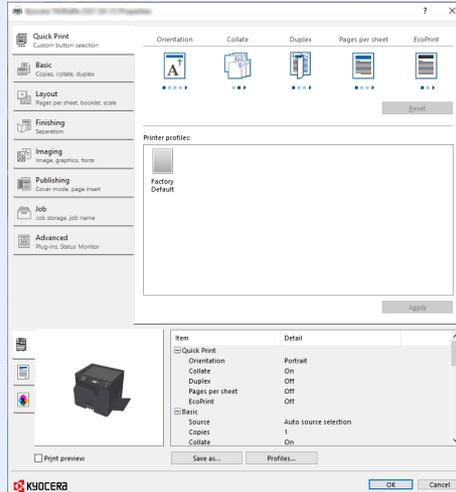


- When printing the cardstock or envelopes, load the cardstock or envelopes before performing the following procedure. (Refer to [When you load envelopes or cardstock in the multi purpose tray on page 3-12.](#))

1 Display the screen.

Click [File] and select [Print] in the application.

2 Configure the settings.

- 1 Select the machine from the "Printer" menu and click [Properties].

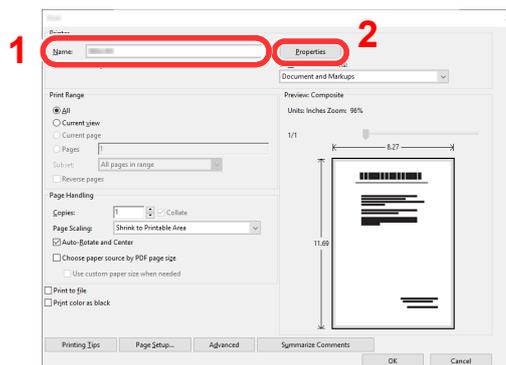


2 Select the **[Basic]** tab.

3 Click "Print size" menu and select the paper size to use for printing.

To load the paper of size that is not included in print sizes of the machine such as cardstock or envelopes, the paper size needs to be registered.

 [Registering the Original Size \(page 4-3\)](#)

To print on the special paper such as thick paper or transparency, click "Media type" menu and select the media type.

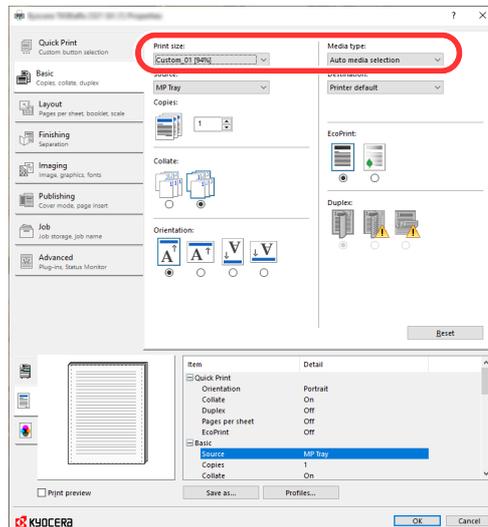

4 Click **[OK]** to return to the Print dialog box.

3 Click **[OK]**.

Start printing.

Registering the Original Size

If you loaded a paper size that is not included in the print sizes of the machine, register the paper size in the **[Basic]** tab of the print settings screen of the printer driver.

The registered size can be selected from the "Print size" menu.

NOTE

To execute printing at the machine, set the paper size and type in [Specifying Paper Size and Media Type for the Cassettes on page 3-13](#).

1 Display the print settings screen.

2 Register the paper size.

1 Click the **[Basic]** tab.


2 Select **[Custom]** in the "Print size" menu.

3 Click **[New]**.

4 Enter the name of the paper.

5 Enter the paper size.

- 6 Click [OK].
- 7 In the "Print size" menu, select the paper size (name) that you registered in steps 4 to 7.
- 8 Click [MP tray] in the "Source" menu.
- 9 Select the type of paper in the "Media type" menu.

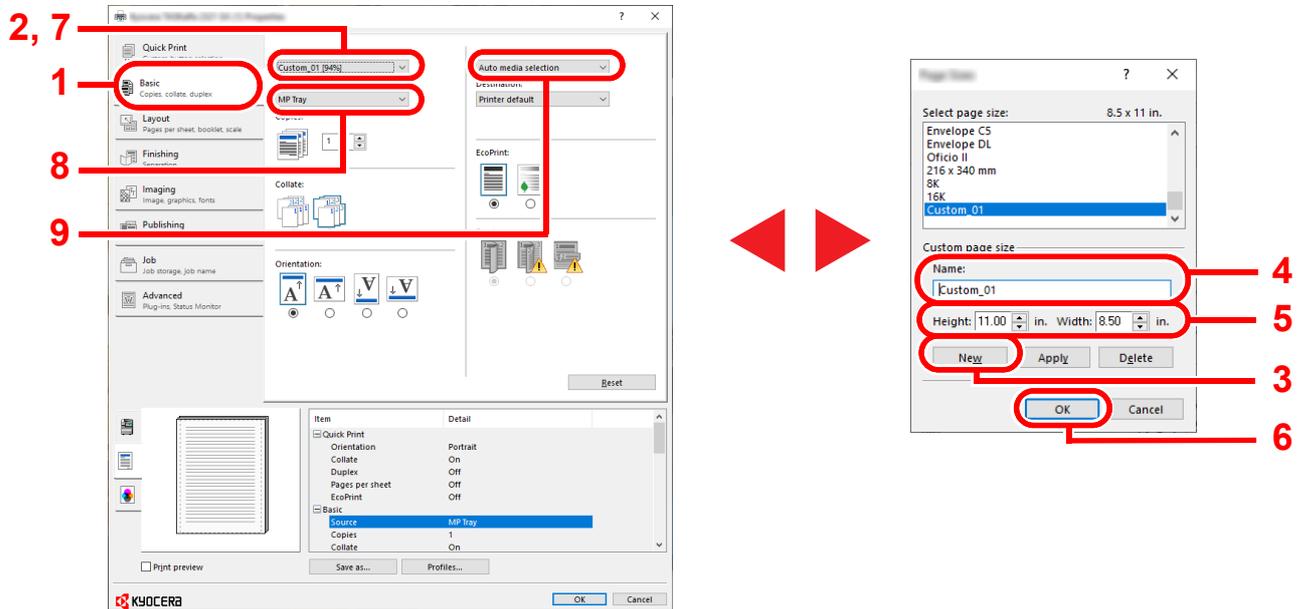



 **NOTE**

If you loaded a postcard or envelope, select [**Cardstock**] or [**Envelope**] in the "Media type" menu.

Printer Driver Print Settings

 
The printer driver print settings screen allows you to configure a variety of print-related settings. For more information, refer to the **Printer Driver User Guide** on the Product Library disc.

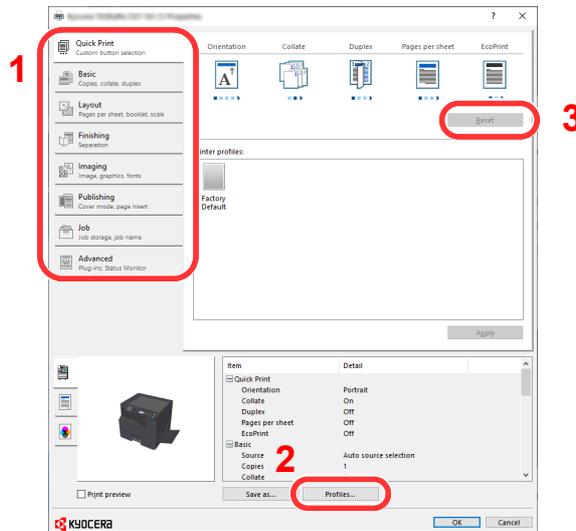

No.	Description
1	<p>[Quick Print] tab Provides icons that can be used to easily configure frequently used functions. Each time you click an icon, it changes to an image resembling the print results and applies the settings.</p>  <p>[Basic] tab This tab groups basic functions that are frequently used. You can use it to configure the paper size, destination, and duplex printing.</p> <p>[Layout] tab This tab lets you configure settings for printing various layouts, including booklet printing, combine mode, poster printing, and scaling.</p> <p>[Finishing] tab This tab lets you offset printed media.</p> <p>[Imaging] tab This tab lets you configure settings related to the quality of the print results.</p> <p>[Publishing] tab This tab lets you create covers and inserts for print jobs and put inserts between sheets of OHP film.</p> <p>[Job] tab This tab lets you configure the settings for saving print data in a Print Box. Since saved documents can be printed directly from the machine, this function is convenient when you wish to print a document that you don't want others to see.</p> <p>[Advanced] tab This tab lets you configure settings for adding watermarks to print data.</p>
2	<p>[Profiles] Printer driver settings can be saved as a profile. Saved profiles can be recalled at any time, so it's a convenient practice to save frequently used settings.</p>
3	<p>[Reset] Click to revert settings to their initial values.</p>

Printer Driver Help

The printer driver includes Help. To learn about print settings, open the printer driver print settings screen and display Help as explained below.

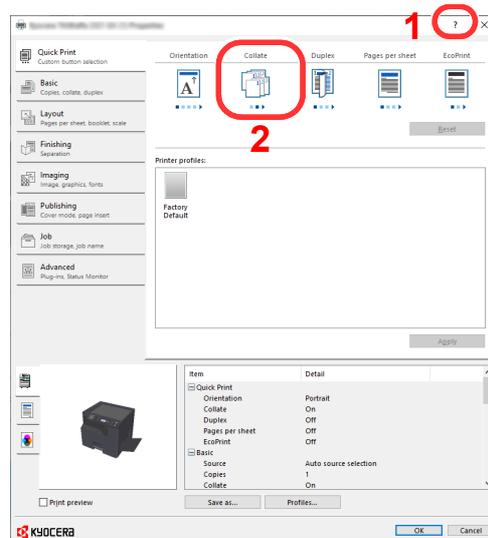

- Click [?] in the upper right corner of the screen and then click the item you want to know about.
- Click the item you want to know about and press the [F1] key on your keyboard.

Changing the Default Printer Driver Settings (Windows 10)

The default printer driver settings can be changed. By selecting frequently used settings, you can omit steps when printing. For the settings, refer to **Printer Driver User Guide**.

- 1 Click [Start] button on the Windows and then select [Windows System], [Control Panel], and [View devices and printers].
- 2 Right-click the printer driver icon of the machine, and click the [Printer properties] menu of the printer driver.
- 3 Click [Preferences] on the [General] tab.
- 4 Select the default settings and click [OK].

Canceling Jobs

You can cancel jobs by pressing the [Stop] key.

Stop




When there are waiting jobs

[Print Job List] is displayed.

NOTE

When the optional FAX Kit is installed, [Job Cancel List] is displayed. Press the [▲] or [▼] key to select [Print Job List], and press the [OK] key.

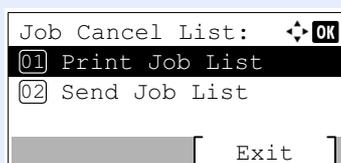

FAX jobs that are being transmitted can be canceled by selecting [Send Job List].


- 1 Press the [▲] or [▼] key to select the job to cancel, and press [Menu].



NOTE

Two jobs are displayed in the order of reception by the machine.


- 2 Press the [▲] or [▼] key to select [Cancel Job], and press the [OK] key.

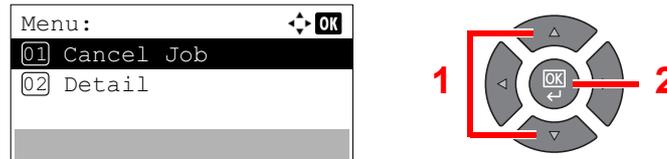

NOTE

Select [Detail] and press the [OK] key to show the detailed information of the job.

- 3 Press [Yes] in the confirmation screen.

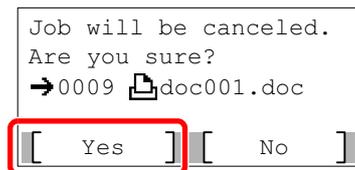

The job is canceled.

NOTE

If a print job remains on a PC, you can cancel the job by following the steps below.

- 1 Double-click the printer icon () displayed on the taskbar at the bottom right of the Windows desktop to display a dialog box for the printer.
- 2 Click the file for which you wish to cancel printing and select [Cancel] from the "Document" menu.

Using Print Box

Print Box is a function to temporarily save a printer document in the box on a PC and execute printing at the machine. A job is not printed until you operate the machine, and this prevents the printed papers from being taken by someone. With a PIN code assigned to the Print Box, you can further strengthen security.

If you configure settings in the [Print Box] of [Job] tab of the printer driver and then print, the printed data will be saved in the box on the PC and printing can be executed at the machine.


The Print Box can be set in the KYOCERA Client Tool. Refer to [Default Settings on the PC \(KYOCERA Client Tool\) on page 7-22](#).

Flow of Operations of Print Box


When connecting the machine to the PC via USB: [page 4-8](#)

When connecting the machine to the PC on the network: [page 4-9](#)

Flow of Print Box operation when the machine and a PC are connected via USB

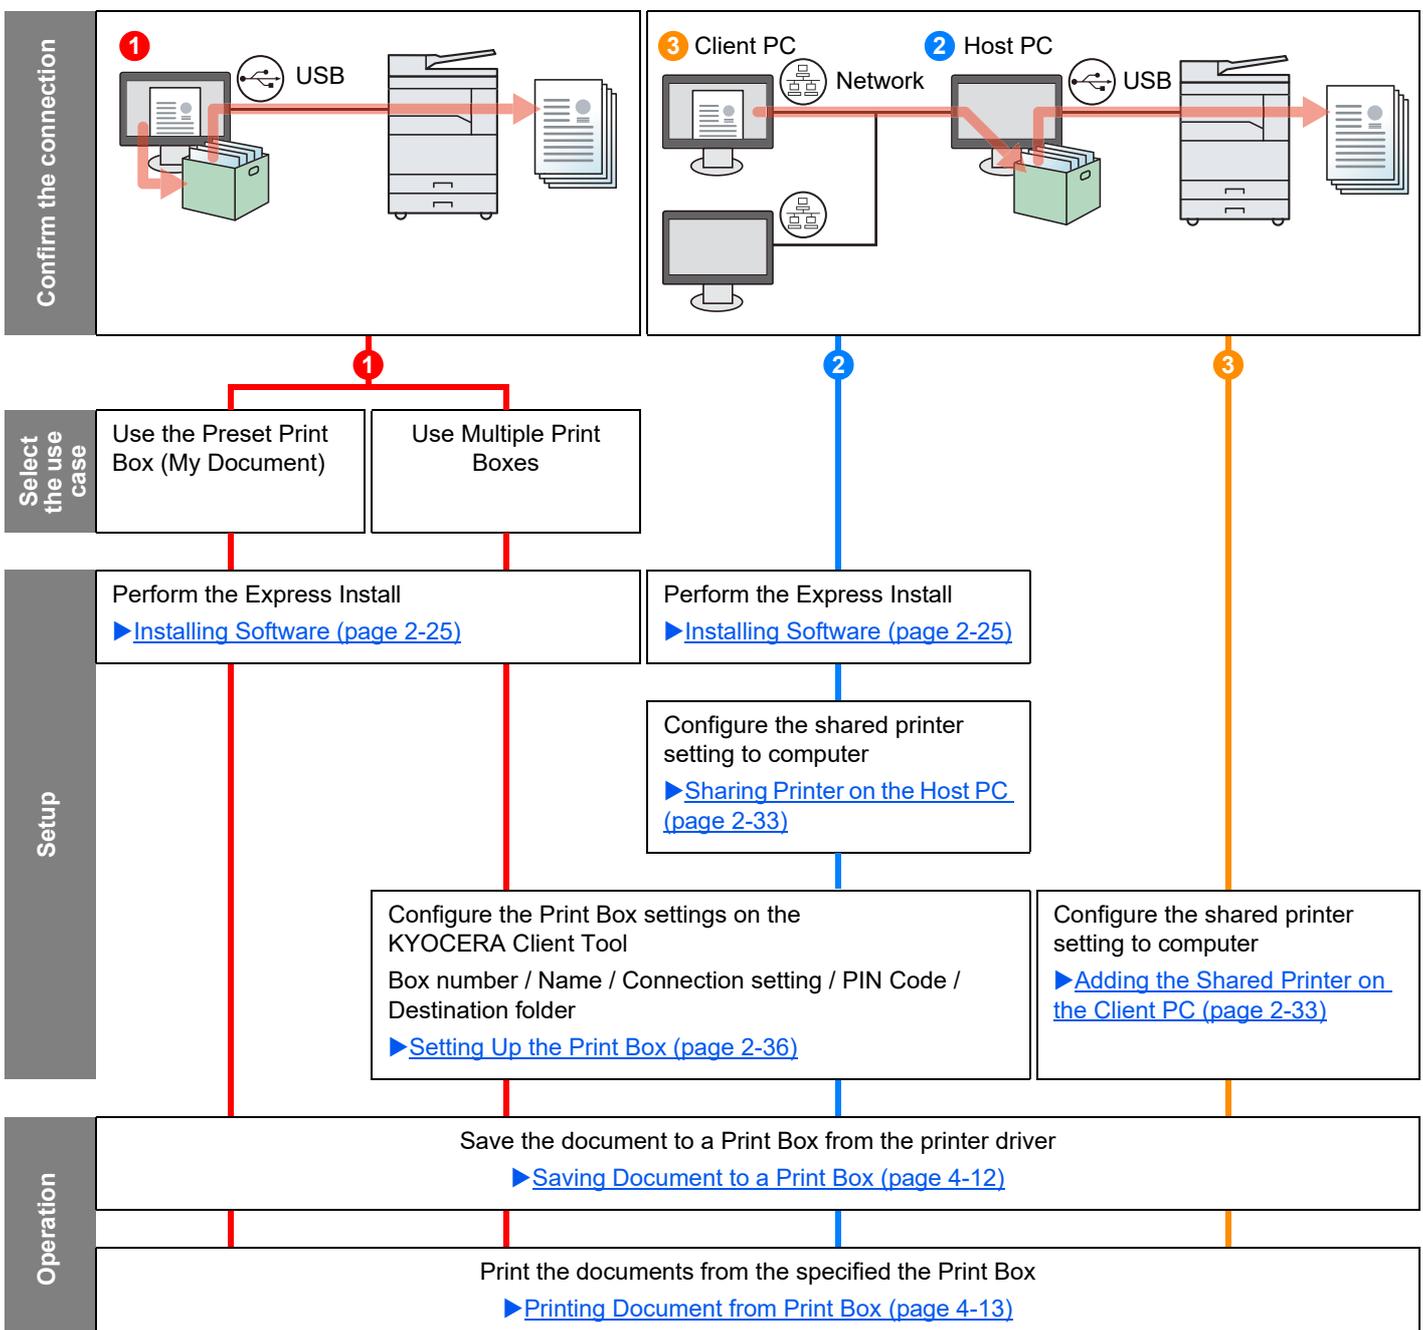

Flow of Print Box operation when the machine and a PC are connected on the network

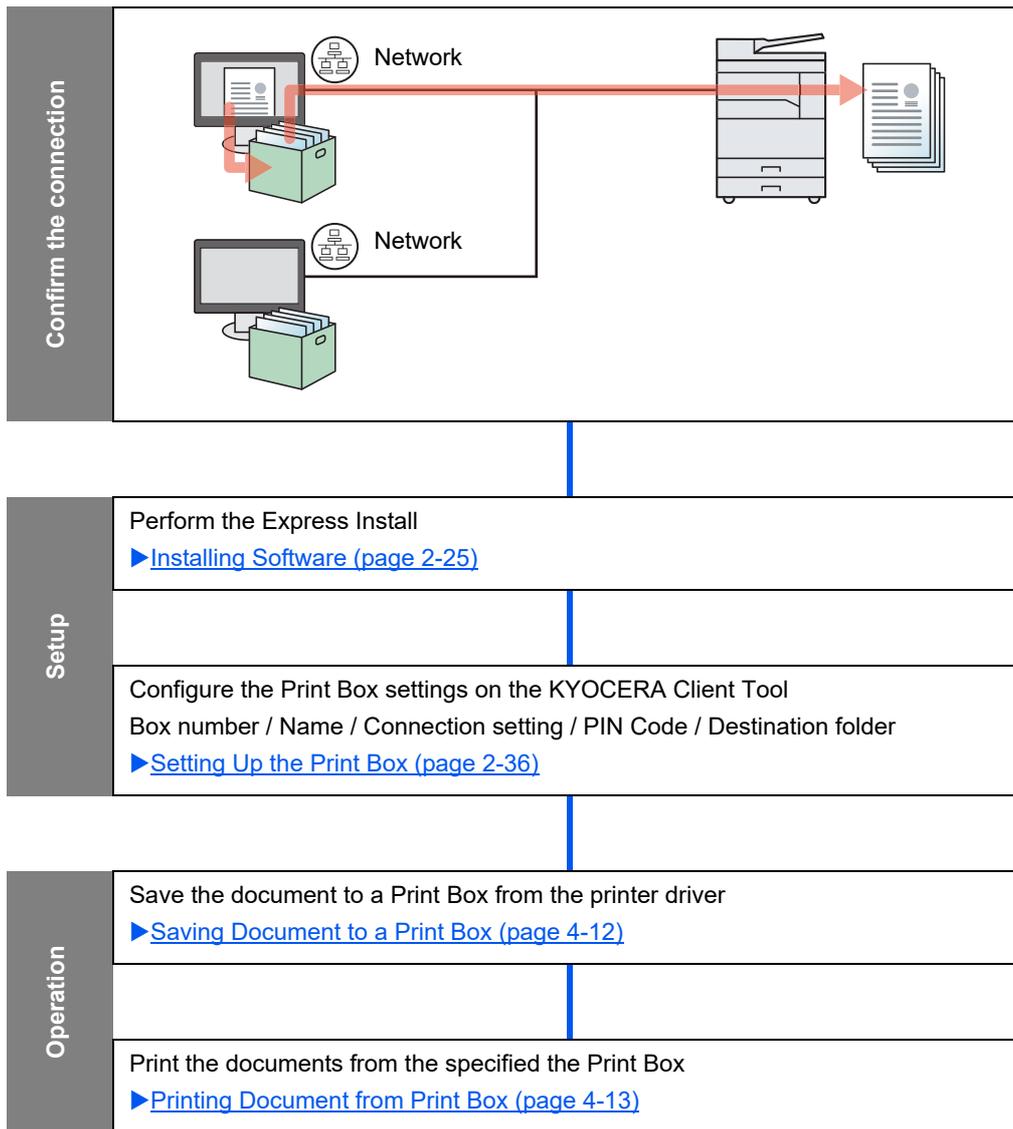

Use the Preset Print Box

Save the print data in the preset Print Box. Box 01 is set by default. When selecting Box 01 from the GX Driver and printing, printing can be executed only by selecting Box 01 in the operation panel.

- 1 Select [Box 01] from the GX driver and then execute printing. (Refer to [Saving Document to a Print Box on page 4-12.](#))
- 2 Select [Box 01] to be printed at the machine when needed. (Refer to [Printing Document from Print Box on page 4-13.](#))




Use Multiple Boxes

A maximum of 30 Print Boxes (Box 01 to 30) can be set by using KYOCERA Client Tool.

When Connecting the Machine to the PC via USB

When connecting the computer (Host PC) connected to the machine via USB to the computer on the network (Client PC) and using the machine as a shared printer, each Client PC can use a different Print Box.

- 1 Configure the Print Box by using KYOCERA Client Tool. (Refer to [Setting Up the Print Box on page 2-36.](#))
- 2 Select the Print Box from the Client PC and execute printing. (Refer to [Saving Document to a Print Box on page 4-12.](#))
- 3 A print job is saved in a Print Box in the Host PC.
- 4 Select the Print Box to be printed at the machine when needed. (Refer to [Printing Document from Print Box on page 4-13.](#))

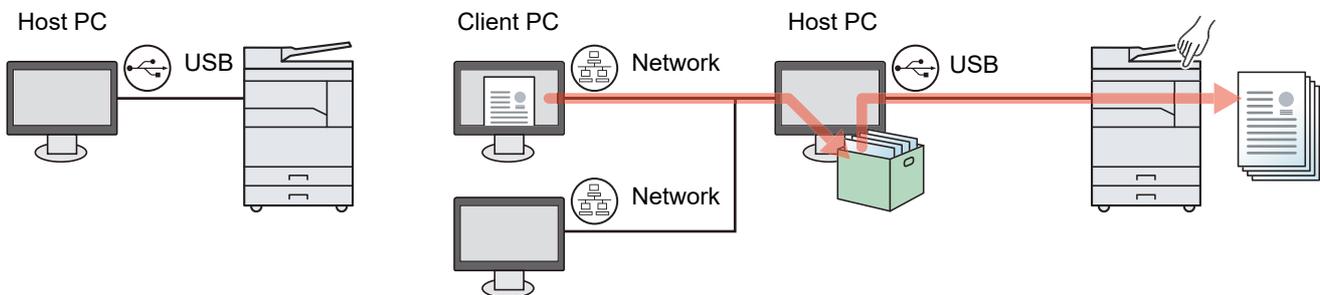


NOTE

When using the machine as a shared printer, settings must be made for the shared printer. Refer to [Setting the Shared Printer and FAX on page 2-33.](#)

When Connecting the Machine to the PC on the Network ^{*1}

If the machine is connected to the PC on the network, multiple Print Boxes can be used on the PC linked to the network.

- 1** Configure the Print Box on the PC on the network by using KYOCERA Client Tool. (Refer to [Setting Up the Print Box on page 2-36.](#))
- 2** Select the Print Box from the PC and execute printing. (Refer to [Saving Document to a Print Box on page 4-12.](#))
A print job is saved in a Print Box.
- 3** Select the Print Box to be printed at the machine when needed. (Refer to [Printing Document from Print Box on page 4-13.](#))

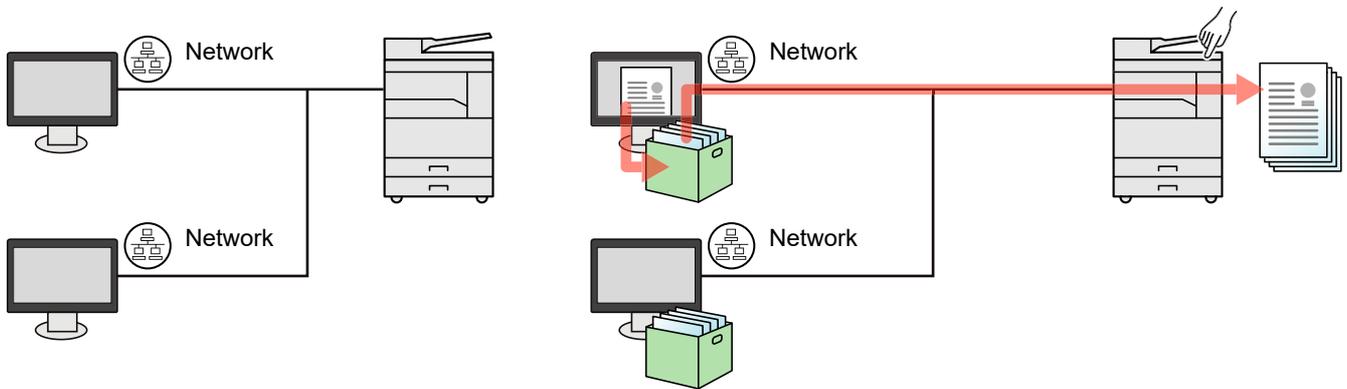

*1 The optional Network Interface Kit is required.



NOTE

The administrator of the machine needs to set the Print Box number in such a manner that the Print Box number does not overlap on the network.

Saving Document to a Print Box

Use the procedure below to save a document in the Print Box created on the PC. Print Box can be selected from [Box 01] to [Box 30]. To use the other boxes or to change the default box name, configure the settings on KYOCERA Client Tool. Refer to [Default Settings on the PC \(KYOCERA Client Tool\) on page 7-22](#). In addition, a PIN code can be set for a Print Box. Since the PIN code must be entered when printing at the machine, security is enhanced.

1 Start KYOCERA Client Tool on the Host PC.

Click [**Start**] button on the Windows and then select [**Kyocera**] and [**KYOCERA Client Tool**] to start KYOCERA Client Tool.




NOTE

In Windows 8.1, select [**Search**] in charms, [**Apps**], and then [**KYOCERA Client Tool**].


2 Display the screen on your PC.

- 1 Click [**File**] and select [**Print**] in the application.
- 2 Select the machine from the "Name" menu and click [**Properties**].
- 3 Select the [**Job**] tab.

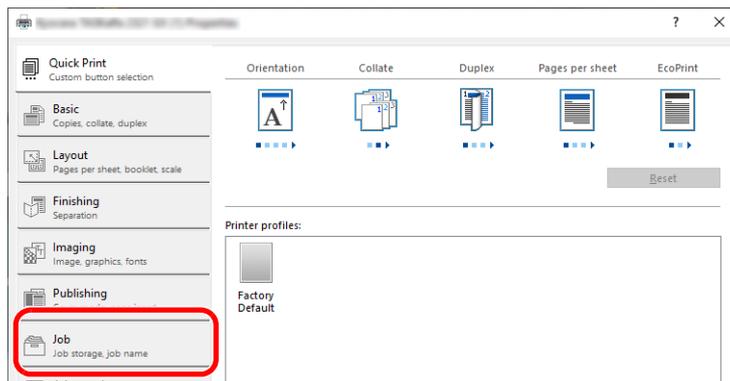

3 Configure the settings.

- 1 Select [**Print Box**] then select the Print Box where the print job should be stored from the [**Box 01**] to [**Box 30**].

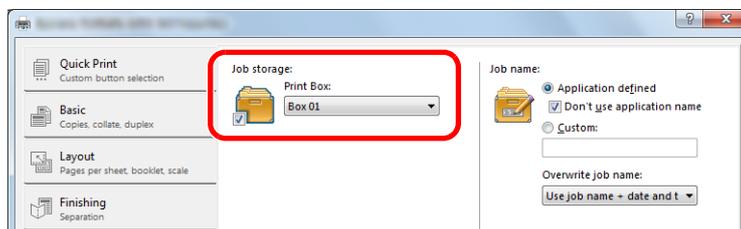

- 2 As necessary, set the job name for the print job.



NOTE

Note that the same job name is set and the job is overwritten if [**Custom**] and [**Replace existing file**] are set.

4 Start printing.

Select [**OK**] to return to the "Print" screen and click [**OK**] to start storing.

Printing Document from Print Box

Print a document saved in a Print Box.

NOTE

- All documents saved in the selected Print Box are printed.
- KYOCERA Client Tool must be running on the computer from which printing from Print Box is executed.
- After being printed, the documents in the Print Box are deleted.

1 Start KYOCERA Client Tool on the Host PC.

Click **[Start]** button on the Windows and then select **[Kyocera]** and **[KYOCERA Client Tool]** to start KYOCERA Client Tool.

NOTE

In Windows 8.1, select **[Search]** in charms, **[Apps]**, and then **[KYOCERA Client Tool]**.



2 Press the **[Print Box]** key on the machine.

Print Box



3 Select the Print Box.

Press the **[▲]** or **[▼]** key to select the Print Box.

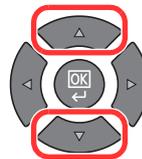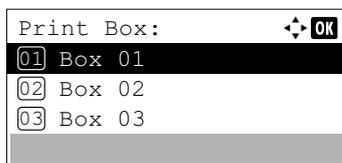

NOTE

The name set by using KYOCERA Client Tool appears. When using Box 01, the default name (Box 01) is set by KYOCERA Client Tool. When using any of Box 02 to 30, a Box name needs to be set by using KYOCERA Client Tool. If a box with no Box name is set, [---] appears on the message display. If a document is stored in the box for which no Box name is set, printing from the box is not available.

For details on setting the box name, refer to [Default Settings on the PC \(KYOCERA Client Tool\) on page 7-22](#).



4 Press the **[Start]** key.

Start



Printing starts.

If you have assigned a PIN code to the Box with KYOCERA Client Tool, enter the PIN code using the numeric keys and press the **[OK]** key.

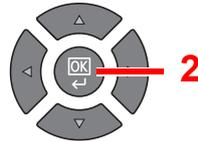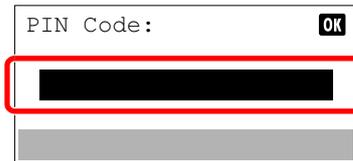

5 Operation on the Machine


This chapter explains the following topics:

Loading Originals	5-2
Placing Originals on the Platen	5-2
Loading Originals in the Document Processor (Option)	5-3
Checking the Equipment's Serial Number	5-5
Copying	5-6
Basic Operation	5-6
Interrupt Copy	5-8
ID Card Copy	5-9
Using Various Functions	5-12
Program	5-27
Select Key Settings	5-31
Canceling Jobs	5-31
Scanning	5-33
Flow of Scan Operations	5-33
Scan the Image to the Specified Destination	5-38
Scan the Image by Selecting the Destination (Quick Scan)	5-41
Scanning using TWAIN	5-42
Canceling Jobs	5-43
How to use the FAX Function	5-44

Loading Originals

Placing Originals on the Platen

You may place books or magazines on the platen in addition to ordinary sheet originals.

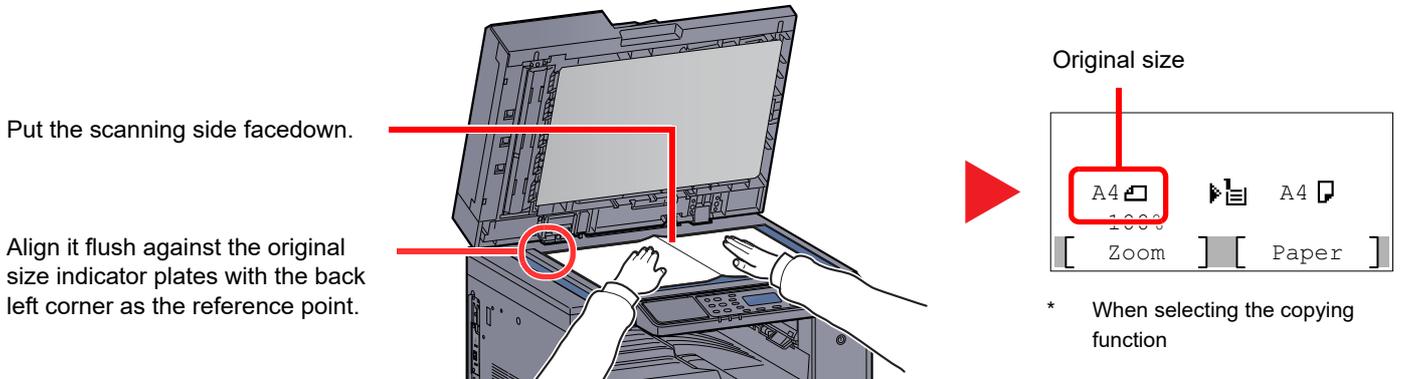

NOTE

- For details on original size, refer to [Original Size on page 5-22](#).
- For details on original orientation, refer to [Orig. Orientation \(Original Orientation\) on page 5-22](#).

CAUTION

Do not leave the optional original cover or document processor open as there is a danger of personal injury.

IMPORTANT

- Do not push the optional original cover or document processor forcefully when you close it. Excessive pressure may crack the platen glass.
- When placing books or magazines on the machine, do so with the optional original cover or document processor in the open position.

Loading Originals in the Document Processor (Option)

The optional document processor automatically scans each sheet of multiple originals. Both sides of two-sided originals are scanned.

Originals Supported by the Document Processor

The document processor supports the following types of originals.

Detail	Document Processor
Weight	1-sided: 45 to 120 g/m ² 2-sided: 50 to 120 g/m ²
Sizes	Maximum: Ledger/A3 Minimum: Statement-R/A5-R
No. of sheets	Plain paper (50 to 80 g/m ²), Colored paper, Recycled paper, High Quality: 50 sheets (Mixed size originals: 30 sheets) Thick paper (120 g/m ²): 33 sheets Art paper: 1 sheet

Originals Not Supported by the Document Processor

Do not use the document processor for the following types of originals. Otherwise, the originals may be jammed or the document processor may become dirty.


- Originals bound with clips or staples (Remove the clips or staples and straighten curls, wrinkles or creases before loading. Failure to do so may cause the originals to jam.)
- Originals with adhesive tape or glue
- Originals with cut-out sections
- Curled original
- Originals with folds (Straighten the folds before loading. Failure to do so may cause the originals to jam.)
- Carbon paper
- Crumpled paper

How to Load Originals


IMPORTANT

- **Before loading originals, be sure that there are no originals left on the original eject table. Originals left on the original eject table may cause the new originals to jam.**
- **Do not make an impact on the document processor top cover, such as aligning the originals on the top cover. It may cause an error in the document processor.**

1 Adjust the original width guides.

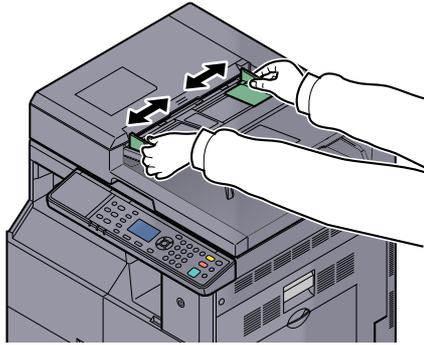

2 Place the originals.

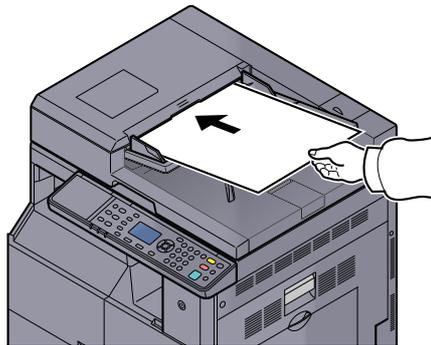

Original size



* When selecting the copying function

Put the side to be scanned (or the first side of two-sided originals) face-up. Slide the leading edge into the document processor as far as it will go.




NOTE

- For details on original size, refer to [Original Size on page 5-22](#).
- For details on original orientation, refer to [Orig. Orientation \(Original Orientation\) on page 5-22](#).



IMPORTANT

- **Confirm that the original width guides exactly fit the originals. If there is a gap, readjust the original width guides. The gap may cause the originals to jam.**

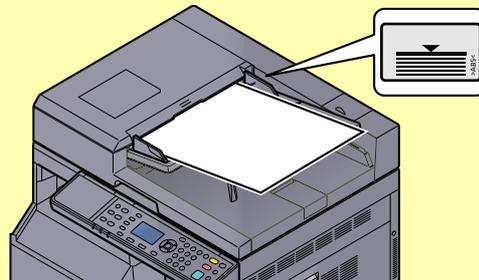

- **Ensure that loaded originals do not exceed the level indicator. Exceeding the maximum level may cause the originals to jam.**
- **Originals with punched holes or perforated lines should be placed in such a way that the holes or perforations will be scanned last (not first).**

Copying

Basic Operation




Follow the steps as below for basic copying.

1 Press the [Copy] key.

Copy



2 Place the originals.

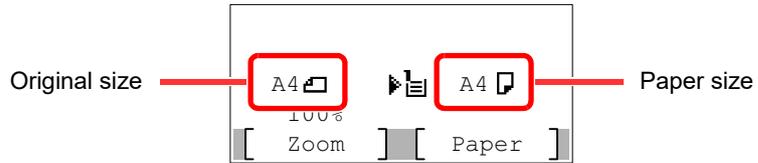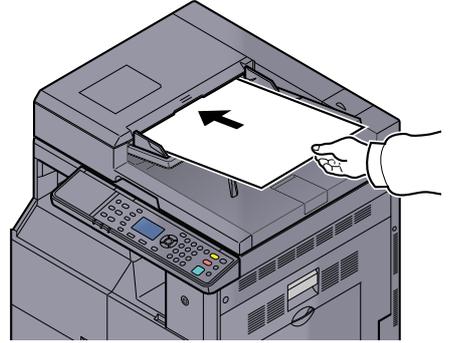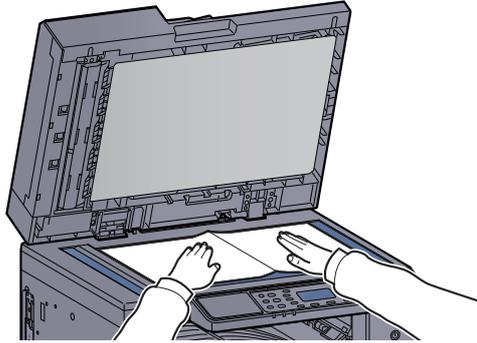


Check the original size and the paper size.



NOTE

- For loading instructions, refer to [Loading Originals on page 5-2](#).
- For selecting the paper source, refer to [Paper Selection on page 5-19](#).

3 Select the functions.

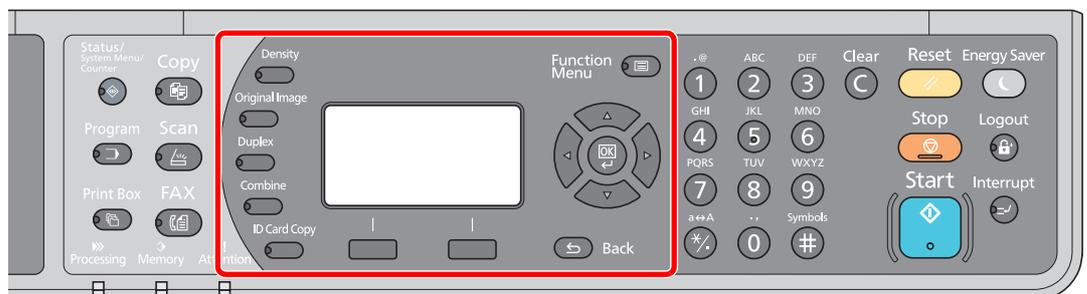

Select the copier functions to use.



[Using Various Functions \(page 5-12\)](#)

4 Use the numeric keys to enter the copy quantity.

Specify the desired number up to 999.

5 Press the [Start] key.

Start



Copying starts.

Interrupt Copy

This function allows you to pause the current jobs in progress when you need to make copies immediately. When the interruption copy ends, the machine resumes the paused print jobs.

NOTE

If the machine is left unused for 60 seconds in interrupt copy mode, interrupt copying is automatically cancelled and printing resumes. You can change the delay until interrupt copying is canceled. Change the delay as required.

 [Interrupt Clear \(page 7-17\)](#)

1 Press the **[Interrupt]** key.

Interrupt




The current print job is temporarily interrupted.

2 Place the originals onto the machine for interrupt copy.

NOTE

For loading instructions, refer to [Loading Originals on page 5-2](#).

3 Select the functions.

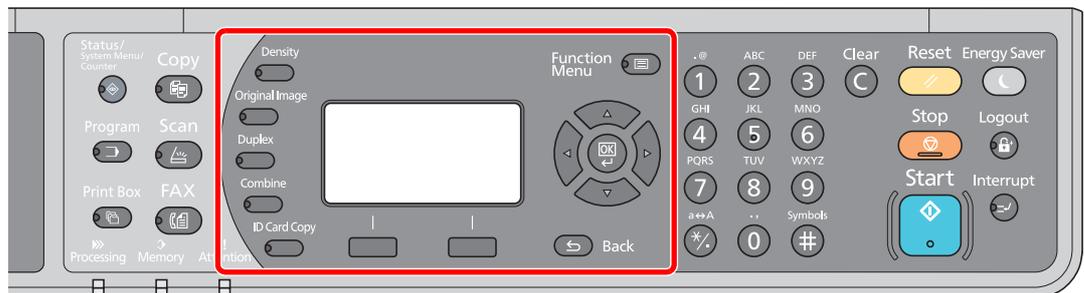

Select the copier functions to use.

 [Using Various Functions \(page 5-12\)](#)

4 Press the **[Start]** key.

Start



Interrupt copying starts.

5 When interrupt copying ends, press the **[Interrupt]** key.

The machine resumes the paused print jobs.

ID Card Copy

Use to copy the front and back sides of a license or other ID card on one sheet of paper.



1 Configure the settings.

- 1 Press the [ID Card Copy] key.


ID Card Copy



- 2 Press the [▲] or [▼] key to select [On], and press the [OK] key.

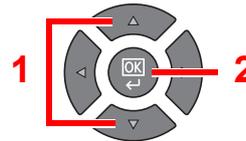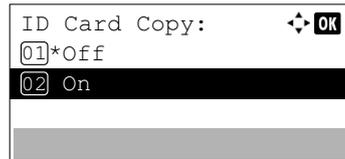


- 3 Press the [▲] or [▼] key to select [Align UpperRight] or [Align Center], and press the [OK] key.

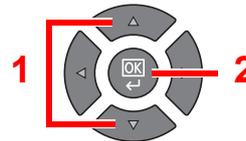

Item	Image	Description
Align UpperRight		Prints the document oriented to the upper right.
Align Center		Prints the document oriented to the center.

2 Place the originals.

Align with the ID Card marks on the Original Size Indicator Plates.

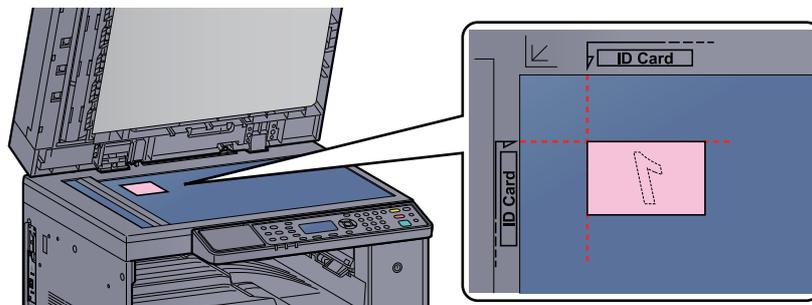

NOTE

For loading instructions, refer to [Loading Originals on page 5-2](#).

3 Select the functions.



Select the copier functions to use.

 [Using Various Functions \(page 5-12\)](#)

4 Use the numeric keys to enter the copy quantity.

Refer to [Basic Operation on page 5-6](#).

5 Press the [Start] key.


Start



One side of the card is scanned.

6 Turn the original over.

Align with the ID Card marks on the Original Size Indicator Plates.

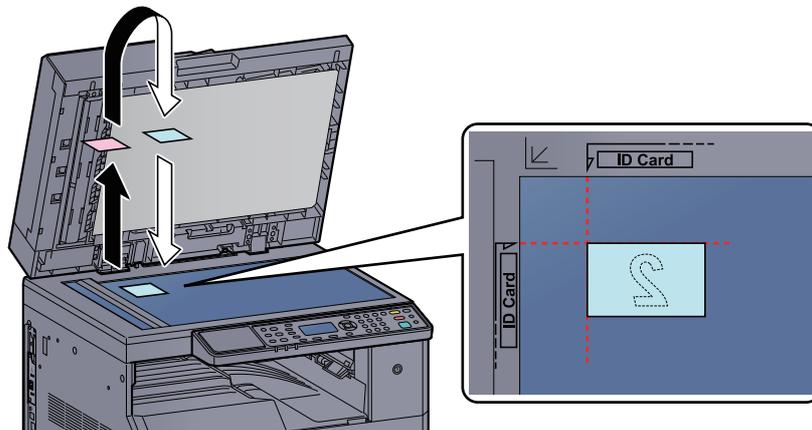

Turn over the card. Put it on same place.
Job No.: 0001
Page(s): 1
[Cancel]



Press Start key.
Job No.: 0001
Page(s): 1
[Cancel]

(Displayed alternately)

7 Press the [Start] key.

Start




The front and back sides of the card are copied on one sheet of paper.

Using Various Functions

To configure the settings for functions, press the key of the function you want to configure. You can also press the [Function Menu] key to select from other functions displayed on the message display.

 [Operation Method \(page 3-3\)](#)

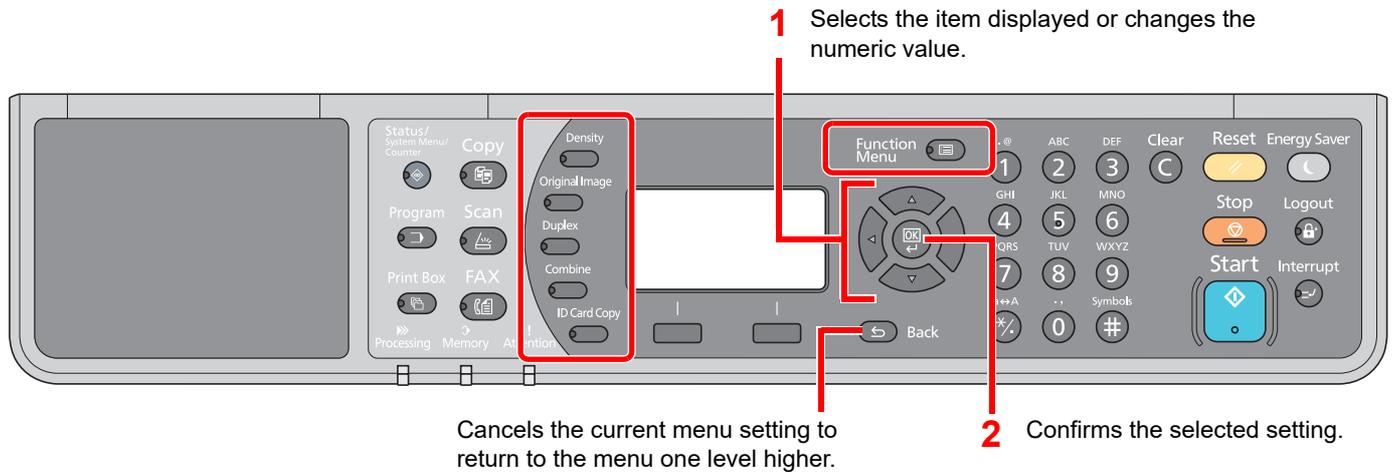

For details on each function, see the table below.

Key	Function	Description	Reference page
Density 	Density	Adjust density.	page 5-14
Original Image 	Original Image	Select original image type.	page 5-14
Duplex 	Duplex *1	Prints 1-sided or open book originals to 2-sided, or 2-sided or open book originals to 1-sided.	page 5-14
Combine 	Combine	Combines 2 or 4 original sheets into 1 printed page.	page 5-17
ID Card Copy 	ID Card Copy	Use to copy the front and back sides of a license or other ID card on one sheet of paper.	page 5-9

*1 The optional duplex unit and document processor are required for some of the duplex modes.



Function	Description	Reference page
Paper Selection	Select the cassette or multi-purpose tray that contains the required paper size.	page 5-19
Collate/Offset	Offsets the output by page or set.	page 5-20
Zoom	Adjusts the zoom to reduce or enlarge the image.	page 5-21
Original Size	Specify the original size to be scanned.	page 5-22
Orig.Orientation	Select the orientation of the original document top edge to scan correct direction.	page 5-22
Mixed Size Originals^{*1}	Scans all sheets in the document processor, even if they are of different sizes.	page 5-23
EcoPrint	Saves toner when printing.	page 5-23
Backgrnd Density	Removes dark background from originals, such as newspapers.	page 5-23
Margin	Adds margin (white space) when printing to allow you to bound copies.	page 5-24
Border Erase	Erases black borders around original when printing.	page 5-25
Continuous Scan	Scans a large number of originals in separate batches and then produce as one job.	page 5-26
Auto Rotation	Rotates image 90 degrees when original and paper source sizes are the same, but their orientation is different.	page 5-26
File Name Entry	Adds a file name.	page 5-26

*1 The optional document processor is required.

Density

Adjust density.

Press the [▲] or [▼] key to select [Darker +3] to [Lighter -3].



Original Image

Select original image type.


Item	Description
Text+Photo	Best for mixed text and photo documents.
Photo	Best for photos taken with a camera.
Text	Sharply renders pencil text and fine lines.

Duplex


Produces two-sided copies.

You can also create single-sided copies from two-sided originals or originals with facing pages such as books. The following modes are available.

One-sided to Two-sided

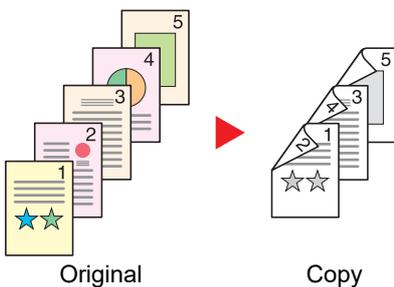


Produces two-sided copies from one-sided originals. In case of an odd number of originals, the back side of the last copy will be blank. The optional duplex unit is required.

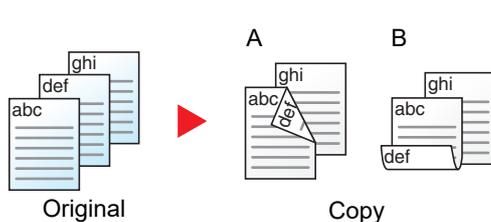

The following binding options are available.

- A Original Left/Right to Binding Left/Right: Images on the second sides are not rotated.
- B Original Left/Right to Binding Top: Images on the second sides are rotated 180 degrees. Copies can be bound on the top edge, facing the same orientation when turning the pages.

Two-sided to One-sided

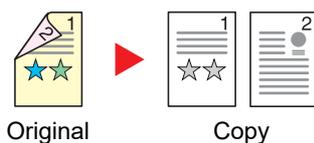


Copies each side of a two-sided original onto two individual sheets. The optional document processor is required.

The following binding options are available.

Binding Left/Right: Images on the second sides are not rotated.

Binding Top: Images on the second sides are rotated 180 degrees.

Two-sided to Two-sided

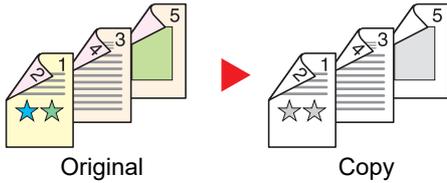


Produces two-sided copies from two-sided originals. The optional duplex unit and document processor are required.

NOTE

The paper sizes supported in Two-sided to Two-sided mode are A3, B4, A4, A4-R, B5, B5-R, A5-R, Ledger, Legal, Letter, Letter-R, Executive, Statement-R, Oficio II, 216 × 340 mm and Folio.

Book to One-sided

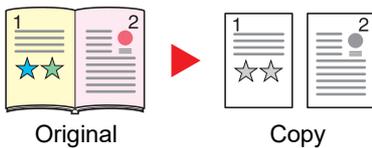

Produces a 1-sided copy of a 2-sided or open book original.

The following binding options are available.


Binding Left: Originals with facing pages are copied from left to right.

Binding Right: Originals with facing pages are copied from right to left.

NOTE

- The original sizes supported in Book to One-sided mode are Ledger, Letter-R, A3, A4-R, A5-R, B4, B5-R and 8K.
- The supported paper sizes are A4, B5, Letter and 16K. You may change paper size and reduce or enlarge copy to match that size.

Book to Two-sided

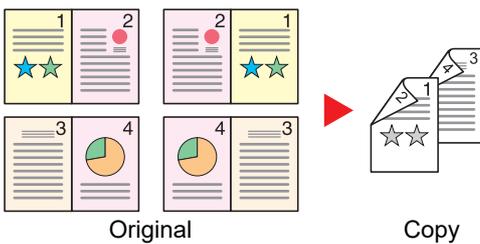

Produces two-sided copies from an open book original with facing pages. The optional duplex unit is required.

NOTE

- The original sizes supported in Book to Two-sided mode are A3, B4, A4-R, B5-R, A5-R, Ledger, Letter-R and 8K.
- The supported paper sizes are A4, B5 and Letter.

Prints 1-sided or open book originals to 2-sided, or 2-sided or open book originals to 1-sided. Select the binding orientation for original and finished documents.

Item	Value	Description
1-sided>>1-sided	—	Disables the function.
1-sided>>2-sided	—	Press the [OK] key to copy the original with the default setting. For the default settings, refer to Function Default on page 7-18 .
	Finish. Binding	Left/Right, Top Press [Detail] to display the [Finish. Binding] screen. Select the binding orientation of copies, and press the [OK] key.
	Orig. Orientation	Top Edge on Top, Top Edge on Left Select the orientation of the original document top edge to scan correct direction. Choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left]. Then press the [OK] key.
2-sided>>1-sided	—	Press the [OK] key to copy the original with the default setting. For the default settings, refer to Function Default on page 7-18 .
	Finish. Binding	Left/Right, Top Press [Detail] to display the [Finish. Binding] screen. Select the binding orientation of originals, and press the [OK] key.
	Orig. Orientation	Top Edge on Top, Top Edge on Left Select the orientation of the original document top edge to scan correct direction. Choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left]. Then press the [OK] key.

Item	Value	Description
2-sided>>2-sided	—	Press the [OK] key to copy the original with the default setting. For the default settings, refer to Function Default on page 7-18 .
Orig. Binding	Left/Right, Top	Press [Detail] to display the [Orig. Binding] screen. Select the binding direction of originals, and press the [OK] key.
Finish. Binding	Left/Right, Top	Select the binding orientation of copies, and press the [OK] key.
Orig. Orientation	Top Edge on Top, Top Edge on Left	Select the orientation of the original document top edge to scan correct direction. Choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left]. Then press the [OK] key.
Book>>1-sided	—	Press the [OK] key to copy the original with the default setting. For the default settings, refer to Function Default on page 7-18 .
Orig. Binding	Left, Right	Press [Detail] to display the [Orig. Binding] screen. Select the binding direction of originals, and press the [OK] key.
Book>>2-sided	—	Press the [OK] key to copy the original with the default setting. For the default settings, refer to Function Default on page 7-18 .
Orig. Binding	Left, Right	Press [Detail] to display the [Orig. Binding] screen. Select the binding direction of originals, and press the [OK] key.


When placing the original on the platen, consecutively replace each original and press the **[Start]** key.

After scanning all originals, press [End Scan]. Copying begins.

Combine

Combines 2 or 4 original sheets into 1 printed page. You can select the page layout and the type of boundary lines around the pages.

The following types of the boundary lines are available.

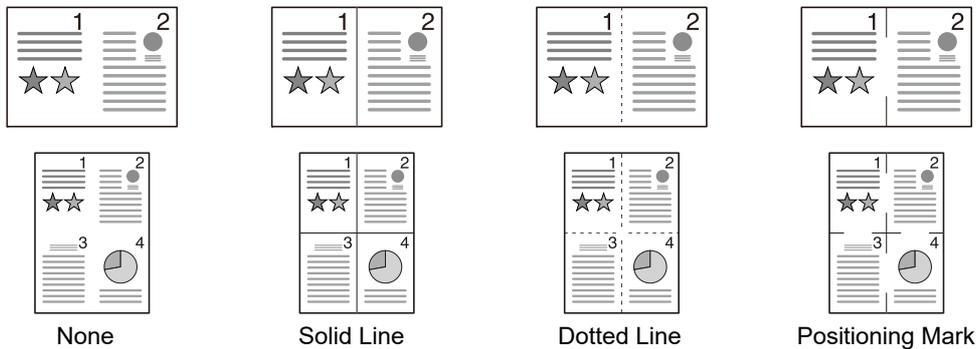

Item	Value	Description
Off	—	Disables the function.
2 in 1	—	Press the [OK] key to copy the original with the default setting. For the default settings, refer to Function Default on page 7-18 .
	2 in 1 Layout	L to R T to B, R to L Press [Detail] to display the [2 in 1 Layout] screen. Select the page layout of scanned originals, and press the [OK] key.
	Border Line	None, Solid Line, Dotted Line, Positioning Mark Select the page boundary line, and press the [OK] key.
	Original Orientation	Top Edge on Top, Top Edge on Left Select the orientation of the original document top edge to scan correct direction. Choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left]. Then press the [OK] key.
4 in 1	—	Press the [OK] key to copy the original with the default setting. For the default settings, refer to Function Default on page 7-18 .
	4 in 1 Layout	Right then Down, Down then Right, Left then Down, Down then Left Press [Detail] to display the [4 in 1 Layout] screen. Select the page layout of scanned originals, and press the [OK] key.
	Border Line	None, Solid Line, Dotted Line, Positioning Mark Select the page boundary line, and press the [OK] key.
	Original Orientation	Top Edge on Top, Top Edge on Left Select the orientation of the original document top edge to scan correct direction. Choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left]. Then press the [OK] key.

Layout image

Value		Image
2 in 1	L to R T to B	
	R to L	
4 in 1	Right then Down	
	Down then Right	
	Left then Down	
	Down then Left	

NOTE

- The paper sizes supported in Combine mode are A3, A4-R, A4, A5-R, B4, B5-R, B5, Folio, 216 × 340 mm, Ledger, Letter-R, Letter, Legal, Statement-R, Oficio II, 8K, 16K-R and 16K.
- When placing the original on the platen, be sure to copy the originals in page order.
- If the original size is not set, the screen for setting the original size is displayed. Refer to [Original Size on page 5-22](#).

Paper Selection

Select the cassette or multi-purpose tray that contains the required paper size.



NOTE

Specify in advance the size and type of the paper loaded in the cassette (refer to [Specifying Paper Size and Media Type on page 3-13](#)).

Item	Value	Description
Auto		The paper matching the size of the original is selected automatically.
Cassette 1 (to 4) ^{*1}		Feed paper from cassette 1 (to 4).
MP Tray		Feed paper from the multi purpose tray.
MP Tray Set.		Before selecting [MP Tray], you need to select [MP Tray Set.] and specify the paper size and media type.
Standard Size	A3, A4-R, A4, A5-R, A6-R, B4, B5-R, B5, B6-R, Folio, 216 × 340 mm, Ledger, Letter-R, Letter, Legal, Statement-R, Executive, Oficio II, 8K, 16K, 16K-R, ISO B5, Envelope #10, Envelope #9, Envelope #6, Envelope Monarch, Envelope DL, Envelope C5, Envelope C4, Hagaki, Oufukuhagaki, Youkei 4, Youkei 2, Custom ^{*2}	Select from the standard size.
Size Entry	Set the sizes of [Y] (vertical). Metric: 98 to 297 mm (in 1 mm increments) Inch: 3.86 to 11.69" (in 0.01" increments) Set the sizes of [X] (horizontal). Metric: 148 to 432 mm (in 1 mm increments) Inch: 5.83 to 17.00" (in 0.01" increments)	Enter the size not included in the standard size. ^{*3} Use the numeric keys or press the [▲] or [▼] key to set the sizes of [Y] (vertical) and press the [OK] key. Set the sizes of [X] (horizontal) as well.
Media Type	Plain, Transparency, Rough, Vellum, Labels, Recycled, Preprinted, Bond, Cardstock, Color, Prepunched, Letterhead, Envelope, Thick, High Quality, Custom 1 to 8	Select the media type. Displayed after [Standard Size] or [Size Entry] is set in [MP Tray Set.].

*1 Cassette 2 to Cassette 4 are displayed when the optional paper feeder is installed.

*2 For instructions on how to specify the custom paper sizes, refer to [Custom PaperSize on page 7-12](#).

*3 The input units can be changed in System Menu. For details, refer to [Measurement on page 7-16](#).






NOTE

- You can conveniently select in advance the size and type of paper that will be used often and set them as default (refer to [Specifying Paper Size and Media Type on page 3-13](#)).
- If the specified size of paper is not loaded in the paper source cassette or multi purpose tray, [Load paper in cassette # (MP tray).] appears. Refer to [Responding to Messages on page 9-11](#).


Collate/Offset

Offsets the output by page or set.

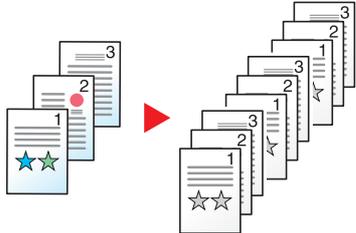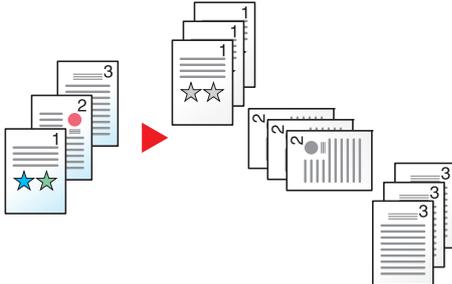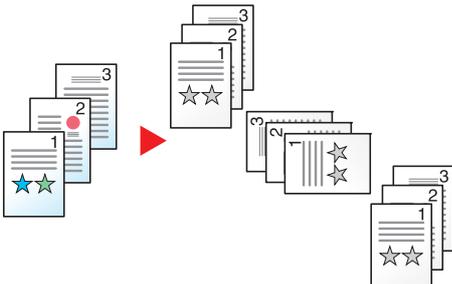Value	Image	Description
Off	—	Disables the function.
Collate Only		Scans multiple originals and delivers complete sets of copies as required according to page number.
Offset Each Page		<p>When offsetting is used, printed copies are produced after rotating each page by 90 degrees.</p> <p> NOTE</p> <p>To use offsetting, the same size of paper as the selected paper tray must be loaded in a different orientation in a different paper tray.</p> <p>The paper sizes supported in Offset are A4, B5, Letter and 16K.</p>
Offset Each Set		<p>When offsetting is used, printed copies are produced after rotating each set by 90 degrees.</p> <p> NOTE</p> <p>To use offsetting, the same size of paper as the selected paper tray must be loaded in a different orientation in a different paper tray.</p> <p>The paper sizes supported in Offset are A4, B5, Letter and 16K.</p>

Zoom

Adjust the zoom to reduce or enlarge the image. The following zoom options are available.

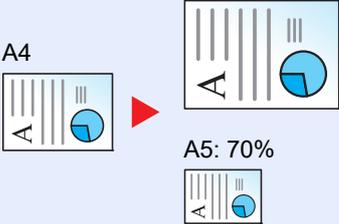Item	Value	Description									
100%		Reproduces the original size.									
Auto	 <p>A4</p> <p>A3: 141%</p> <p>A5: 70%</p>	Adjusts the image to match the paper size.									
Standard Zoom	<table border="1"> <tbody> <tr> <td>Metric</td> <td> 100% 90% Folio>>A4 75% 11×15" >>A4 70% A3>>A4 A4>>A5 50% 25% Min. </td> <td> 400% Max. 200% A5>>A3 141% A4>>A3 A5>>A4 127% Folio>>A3 106% 11×15">>A3 </td> </tr> <tr> <td>Metric (Asia Pacific)</td> <td> 100% 86% A3>>B4 A4>>B5 81% B4>>A4 B5>>A5 70% A3>>A4 B4>>B5 50% 25% Min. </td> <td> 400% Max. 200% A5 >> A3 141% A4>>A3 B5>>B4 122% A4>>B4 A5>>B5 115% B4>>A3 B5>>A4 </td> </tr> <tr> <td>Inch</td> <td> 100% 78% Legal>>Letter 77% Ledger>>Legal 64% Ledger>>Letter 50% Ledger>>STMT 25% Min. </td> <td> 400% Max. 200% STMT>>Ledger 154% STMT>>Legal 129% Letter>>Ledger 121% Legal>>Ledger </td> </tr> </tbody> </table>	Metric	100% 90% Folio>>A4 75% 11×15" >>A4 70% A3>>A4 A4>>A5 50% 25% Min.	400% Max. 200% A5>>A3 141% A4>>A3 A5>>A4 127% Folio>>A3 106% 11×15">>A3	Metric (Asia Pacific)	100% 86% A3>>B4 A4>>B5 81% B4>>A4 B5>>A5 70% A3>>A4 B4>>B5 50% 25% Min.	400% Max. 200% A5 >> A3 141% A4>>A3 B5>>B4 122% A4>>B4 A5>>B5 115% B4>>A3 B5>>A4	Inch	100% 78% Legal>>Letter 77% Ledger>>Legal 64% Ledger>>Letter 50% Ledger>>STMT 25% Min.	400% Max. 200% STMT>>Ledger 154% STMT>>Legal 129% Letter>>Ledger 121% Legal>>Ledger	Reduces or enlarges at preset magnifications. Press the [▲] or [▼] key to select the desired magnification.
Metric	100% 90% Folio>>A4 75% 11×15" >>A4 70% A3>>A4 A4>>A5 50% 25% Min.	400% Max. 200% A5>>A3 141% A4>>A3 A5>>A4 127% Folio>>A3 106% 11×15">>A3									
Metric (Asia Pacific)	100% 86% A3>>B4 A4>>B5 81% B4>>A4 B5>>A5 70% A3>>A4 B4>>B5 50% 25% Min.	400% Max. 200% A5 >> A3 141% A4>>A3 B5>>B4 122% A4>>B4 A5>>B5 115% B4>>A3 B5>>A4									
Inch	100% 78% Legal>>Letter 77% Ledger>>Legal 64% Ledger>>Letter 50% Ledger>>STMT 25% Min.	400% Max. 200% STMT>>Ledger 154% STMT>>Legal 129% Letter>>Ledger 121% Legal>>Ledger									
Zoom Entry	25 to 400% (in 1% increments)	Manually reduces or enlarges the original image in 1% increments between 25% and 400%. Use the numeric keys or press the [▲] or [▼] key to enter the any magnification.  Character Entry Method (page 10-4)									

Original Size

Specify the original size to be scanned.

Item	Description
Auto	Have the size of original detected automatically.
A3, A4-R, A4, A5-R, A5, A6-R, B4, B5-R, B5, B6-R, B6, Folio, 216 × 340 mm, Ledger, Letter-R, Letter, Legal, Statement-R, Statement, 11 × 15", Oficio II, 8K, 16K-R, 16K, Hagaki, Oufukuhagaki, Custom* ¹	Select from standard sizes.

*1 For instructions on how to specify the custom original sizes, refer to [Custom Orig.Size on page 7-12](#).

NOTE

Be sure to always specify the original size when using custom size originals.



Orig. Orientation (Original Orientation)

Select the orientation of the original document top edge to scan correct direction.

To use any of the following functions, the document's original orientation must be set.

- Duplex
- Margin
- Combine

Select original orientation from [Top Edge on Top] or [Top Edge on Left].

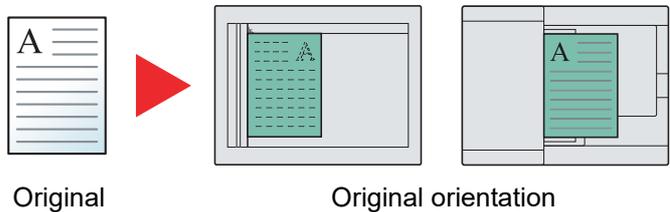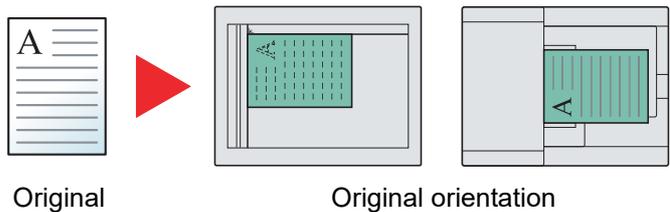
Item	Image
Top Edge on Top	 <p>Original Original orientation</p>
Top Edge on Left	 <p>Original Original orientation</p>

NOTE

The default setting for Original Orientation can be changed. Refer to [Function Default on page 7-18](#) for details.

Mixed Size Orig. (Mixed Size Originals)

Scans multiple sheets of the same width using the document processor.

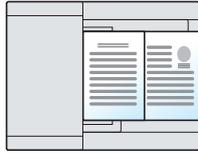


 **NOTE**

The optional document processor is required.

Value	Description
Off	Disables the function.
On	Enables Mixed Size Originals.

EcoPrint

EcoPrint saves toner when printing. Use this function for test prints or any other occasion when high quality print is not required.

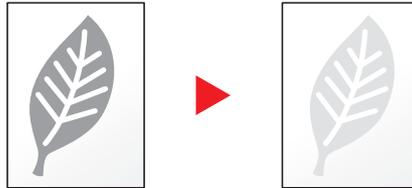

Value	Description
Off	Disables the function.
On	Enables EcoPrint.

Backgrnd Density (Background Density)

Removes dark background from originals, such as newspapers.


Value	Description
Off	Disables the function.
On	Enables Background Density.

Margin

Add margins (white space). In addition, you can set the margin width and the back page margin.

 **NOTE**

The default setting for margin width can be changed. For details, refer to [Margin on page 7-19](#).

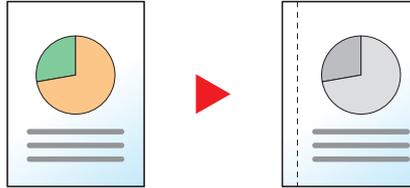

Item	Value	Description
Off	—	Disables the function.
On	—	Press the [OK] key to copy the original with the default setting. For the default settings, refer to Function Default on page 7-18 .
Left/Right	Metric: -18 mm to +18 mm (in 1 mm increments) Inch: -0.75 to +0.75" (in 0.01" increments)	Press [Detail] to display the [Left/Right] screen. Set the margin width.* ¹ Use the numeric keys or press the [▲] or [▼] key to enter the margins for [Left/Right] , and press the [OK] key.
Top/Bottom	Metric: -18 mm to +18 mm (in 1 mm increments) Inch: -0.75 to +0.75" (in 0.01" increments)	Set the margin width.* ¹ Use the numeric keys or press the [▲] or [▼] key to enter the margins for [Top/Bottom] , and press the [OK] key.
Orig. Orientation	Top Edge on Top, Top Edge on Left	Select the orientation of the original document top edge to scan correct direction. Choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left] . Then press the [OK] key.
Back Page Margin * ²	Auto, Manual	For duplex copying, select [Auto] or [Manual] . When [Auto] is selected, an appropriate margin is applied automatically on the rear page depending on a margin specified for the front page and a binding orientation. When [Manual] is set, you can set a different margin than the front on the back. Set the margin in the screen that is displayed. The setting selections are the same as for the front.


*¹ The input units can be changed in System Menu. For details, refer to [Measurement on page 7-16](#).

*² The optional duplex unit is required.

Border Erase


Erases the black border that forms around the image. The following modes are available.

Border Erase Sheet

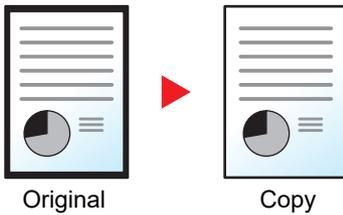

Erases black borders around the single sheet original.

Border Erase Book

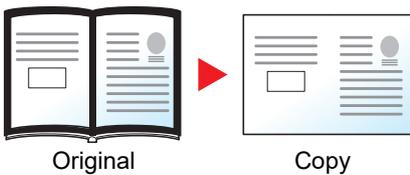

Erases black borders around the edges and in the middle of the original such as a thick book. You can specify the widths individually to erase the borders around the edges and in the center of the book.



NOTE

The default setting for border erase width can be changed. For details, refer to [Border Erase on page 7-19](#).

Item	Value	Description
Off	—	Disables the function.
Sheet	—	Press the [OK] key to copy the original with the default setting. For the default settings, refer to Function Default on page 7-18 .
Border	Metric: 0 mm to 50 mm (in 1 mm increments) Inch: 0.00 to 2.00" (in 0.01" increments)	Press [Detail] to display the [Border] screen. Set the border erase width.*1 Use the numeric keys or press the [▲] or [▼] key to enter the border erase width, and press the [OK] key.
Back Page *2	Same as FrontPage, Do Not Erase	For 2-sided originals, select [Same as FrontPage] or [Do Not Erase], and press the [OK] key.
Book	—	Press the [OK] key to copy the original with the default setting. For the default settings, refer to Function Default on page 7-18 .
Border	Metric: 0 mm to 50 mm (in 1 mm increments)	Press [Detail] to display the [Border] screen. Set the border erase width.*1 Use the numeric keys or press the [▲] or [▼] key to enter the border erase width, and press the [OK] key.
Gutter	Inch: 0.00 to 2.00" (in 0.01" increments)	
Back Page *2	Same as FrontPage, Do Not Erase	For 2-sided originals, select [Same as FrontPage] or [Do Not Erase], and press the [OK] key.

*1 The input units can be changed in System Menu. For details, refer to [Measurement on page 7-16](#).


*2 The optional duplex unit is required.

Continuous Scan

Scans a large number of originals in separate batches and then produce as one job.

To scan the next original, press the **[Start]** key.

After scanning all originals, press **[End Scan]**. Copying begins.

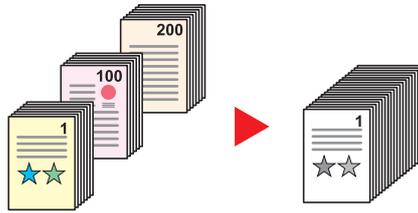

Value	Description
Off	Disables the function.
On	Enables Continuous Scan.

Auto Rotation

Automatically rotates the image 90 degrees when the sizes of the original and the loaded paper matches but the orientations are different.

Value	Description
Off	Disables the function.
On	Enables Auto Rotation.



NOTE

You can select whether to rotate the image automatically in the default settings. For details, refer to [Auto Rotation on page 7-19](#).

File Name Entry

Adds a file name. Additional information such as job number and date can also be set. You can check a job history or job status using the file name, date, or job number specified here.

Enter the file name (up to 32 characters), and press the **[OK]** key.

To specify a date or job number, select **[Additional Info.]** and press the **[OK]** key.



[Character Entry Method \(page 10-4\)](#)

Program

By registering sets of frequently used functions as a single program, you can simply select the program number as needed to recall those functions. You can also name the programs for easy identification when recalling.

NOTE


- Only copying functions can be registered and recalled as programs. The fax function can be registered or recalled when the optional FAX Kit has been installed.
- Up to 10 programs can be registered for the copying function and FAX function respectively.

Registering Program

Use the procedure below to register a program.

1 Configure the settings of the functions.

Configure the settings of the functions you want to register in a program.

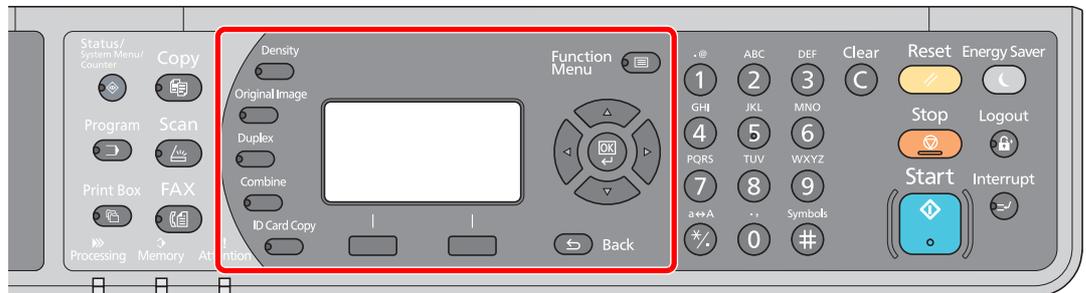

For the settings of functions, refer to [Using Various Functions on page 5-12](#).


2 Register the program.

- 1 Press the [Program] key.

Program





- 2 Press the [▲] or [▼] key to select a program number (01 to 10) to register, and press [Menu].

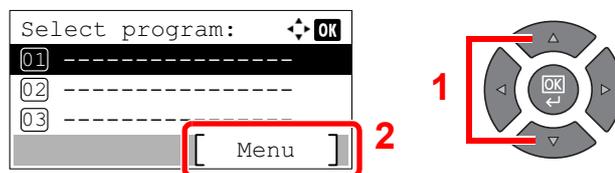

NOTE

- Unregistered program numbers are displayed with [-----].
- If you select a program number already registered, the currently registered functions can be replaced with a new set of functions.



- 3 Press the [▲] or [▼] key to select [Add], and press the [OK] key.

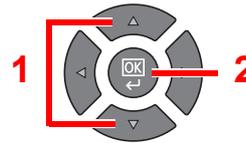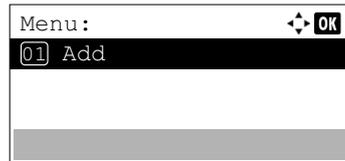

NOTE

When the screen for selecting job type appears, press the [▲] or [▼] key to select [Copy] and press the [OK] key.

- 4 Enter a program name using the numeric keys and press the [OK] key.

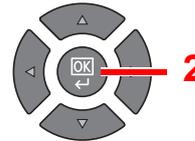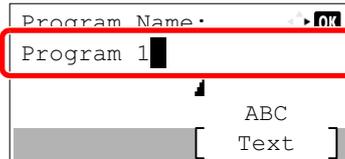

The program is registered.

 [Character Entry Method \(page 10-4\)](#)

NOTE

- Up to 32 characters can be entered.
- If the program number is already used in any of the existing programs, the change confirmation screen appears. Press [Yes].
- The settings can be confirmed by recalling the program. Refer to [Recalling Program on page 5-28](#).

Confirming the Registered Program

The settings of the registered program can be confirmed by recalling the program. Refer to [Recalling Program on page 5-28](#).

Recalling Program

Use the procedure below to recall a registered program.



1 Recall the program.

- 1 Press the [Program] key.



Program



- 2 Press the [▲] or [▼] key to select a program number (01 to 10) to recall, and press [Menu].

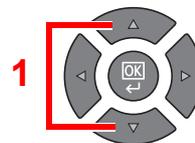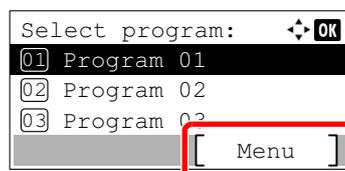

- 3 Press the [▲] or [▼] key to select [Recall], and press the [OK] key.

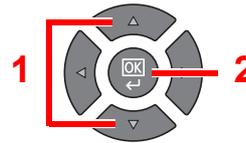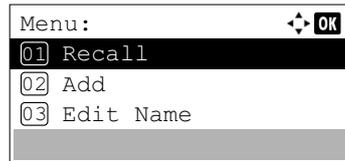

2 Execute the program.

Place the originals and press the [Start] key.

Overwriting Program

Programs can be changed with the same procedures as those for registering programs. When selecting the program number to be registered, select the program to be changed and overwrite the program number. Refer to [Registering Program on page 5-27](#).

Changing the Program Name

Use the procedure below to change the program name.



1 Display the screen.

- 1 Press the [Program] key.

Program





- 2 Press the [▲] or [▼] key to select a program number (01 to 10) to edit, and press [Menu].

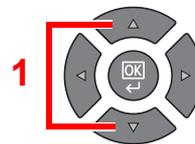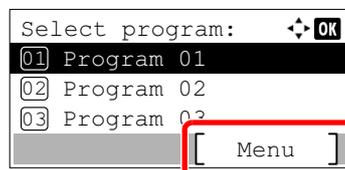

2 Edit the program name.

- 1 Press the [▲] or [▼] key to select [Edit Name], and press the [OK] key.

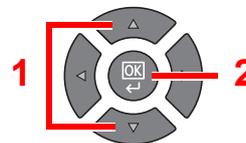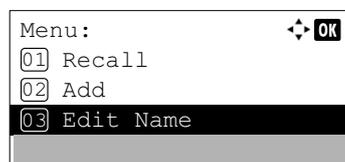

- 2 Enter a program name using the numeric keys and press the [OK] key.



[Character Entry Method \(page 10-4\)](#)

- 3 Press [Yes] in the confirmation screen.

Deleting Program

Use the procedure below to delete a program.



1 Display the screen.

- 1 Press the [Program] key.

Program





- 2 Press the [▲] or [▼] key to select a program number (01 to 10) to delete, and press [Menu].

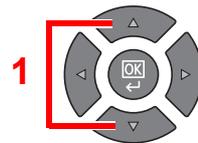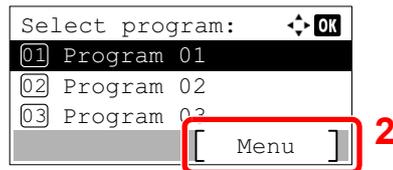

2 Delete the program.

- 1 Press the [▲] or [▼] key to select [Delete], and press the [OK] key.

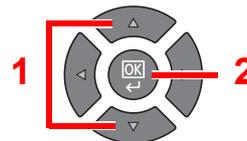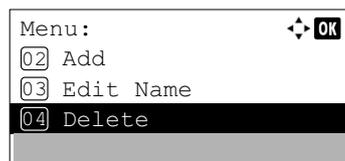

- 2 Press [Yes] in the confirmation screen.

Select Key Settings

Commonly used copying functions can be registered to the Select key. Functions can be easily configured by pressing the Select key.

The following functions are available:

- Paper Selection
- Collate/Offset
- Zoom
- Original Size
- Orig. Orientation
- Mixed Size Orig.*¹
- EcoPrint
- Backgrnd Density
- Margin
- Border Erase
- Continuous Scan
- Auto Rotation
- File Name Entry

For information on registering functions, refer to [Select Key Set. on page 7-20](#).

*¹ The optional document processor is required.


Canceling Jobs

You can cancel jobs by pressing the **[Stop]** key.

Stop



If **[Cancel]** is displayed on the message display, jobs can be canceled by pressing **[Cancel]**.

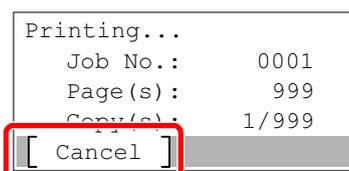

When a job is being executed


The copy job is canceled.

When there are waiting jobs

[Print Job List] is displayed.

NOTE

When the optional FAX Kit is installed, [Job Cancel List] is displayed. Press the [**▲**] or [**▼**] key to select [Print Job List], and press the [**OK**] key.

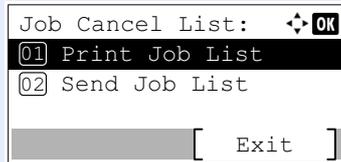

FAX jobs that are being transmitted can be canceled by selecting [Send Job List].


- 1 Press the [**▲**] or [**▼**] key to select the job to cancel, and press [Menu].



NOTE

Two jobs are displayed in the order of reception by the machine.


- 2 Press the [**▲**] or [**▼**] key to select [Cancel Job], and press the [**OK**] key.

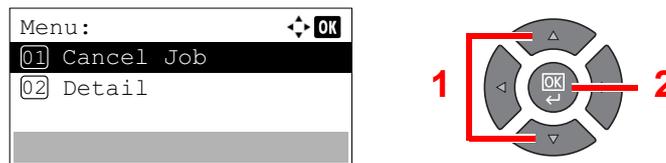

NOTE

Select [Detail] and press the [**OK**] key to show the detailed information of the job.

- 3 Press [Yes] in the confirmation screen.

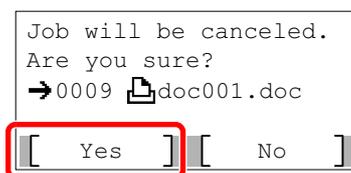

The job is canceled.

Scanning


You can scan originals using the machine and save the scanned images on your computer. The following three types of scan are available.

Flow of Scan Operations


When connecting the machine to the PC via USB: [page 5-33](#)

When connecting the machine to the PC on the network: [page 5-34](#)

Flow of Scan operation when the machine and a PC are connected via USB

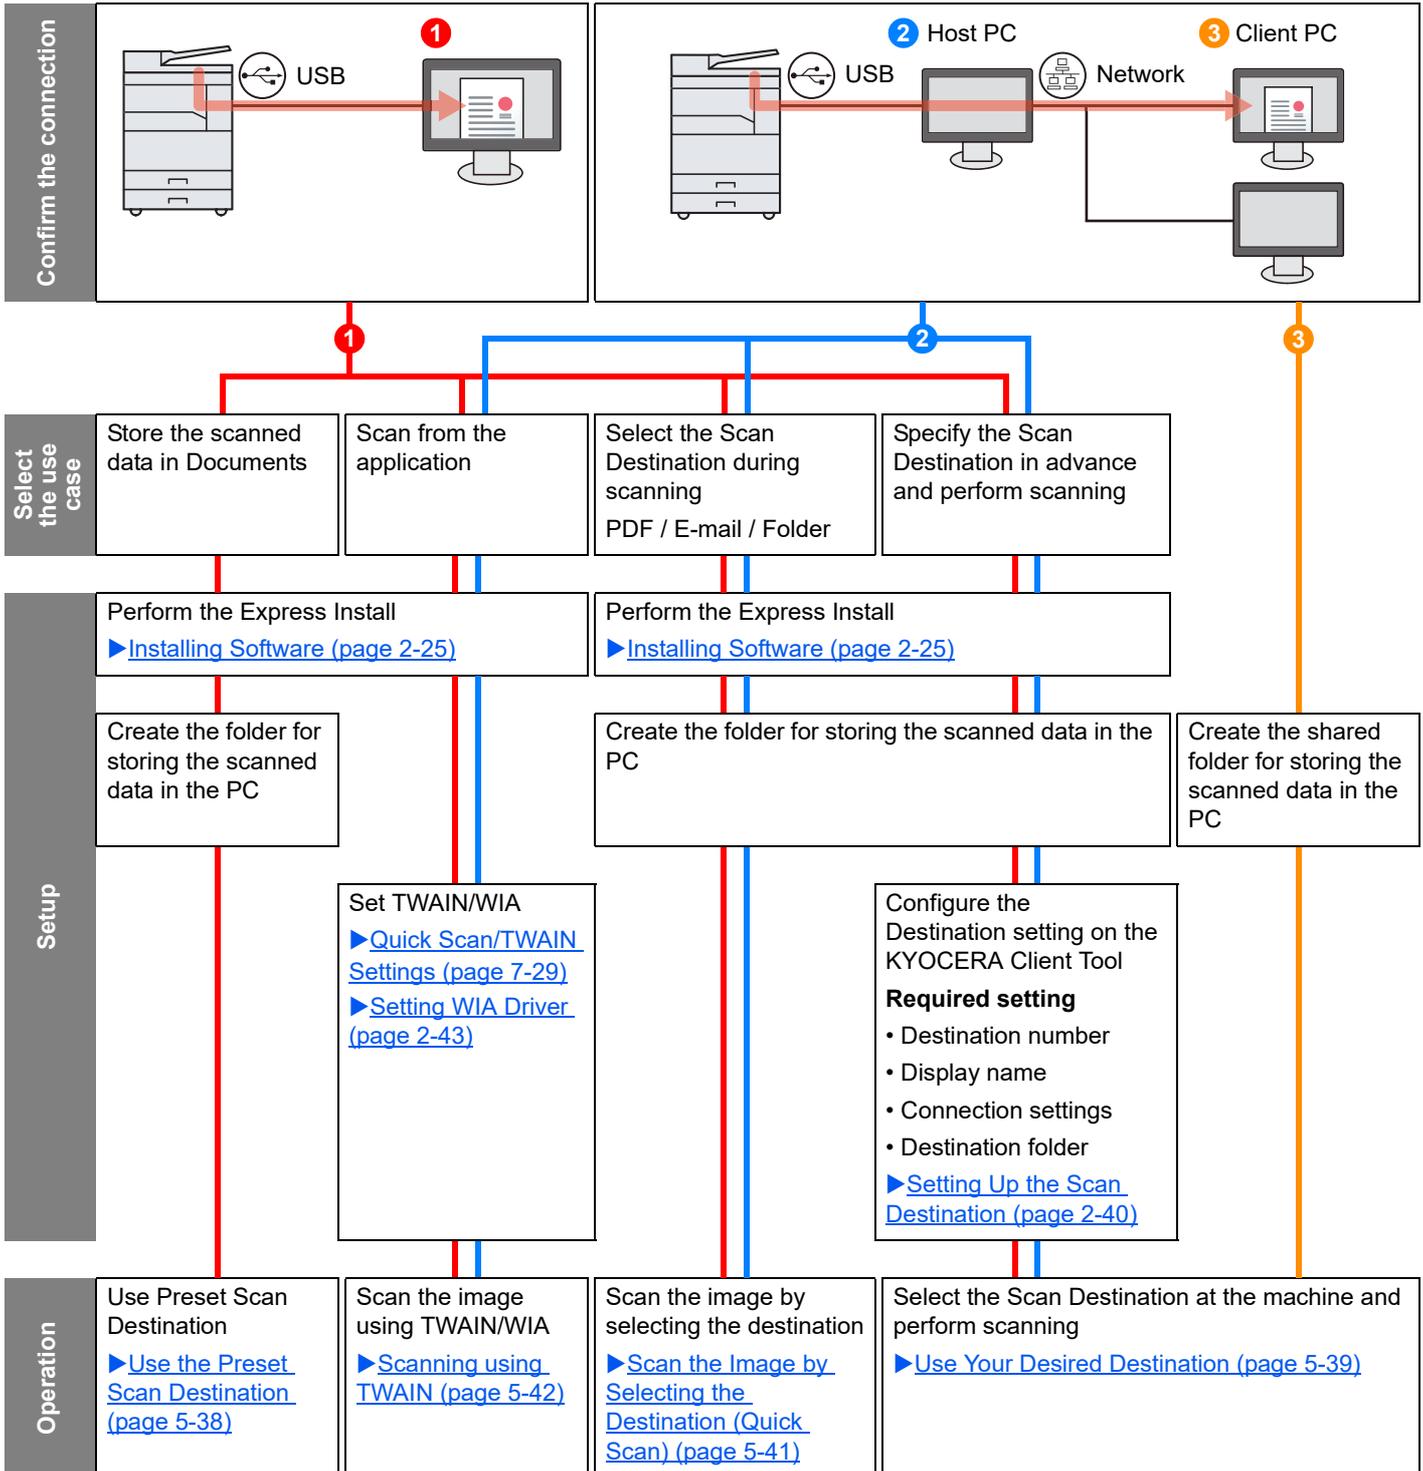

Flow of Scan operation when the machine and a PC are connected on the network

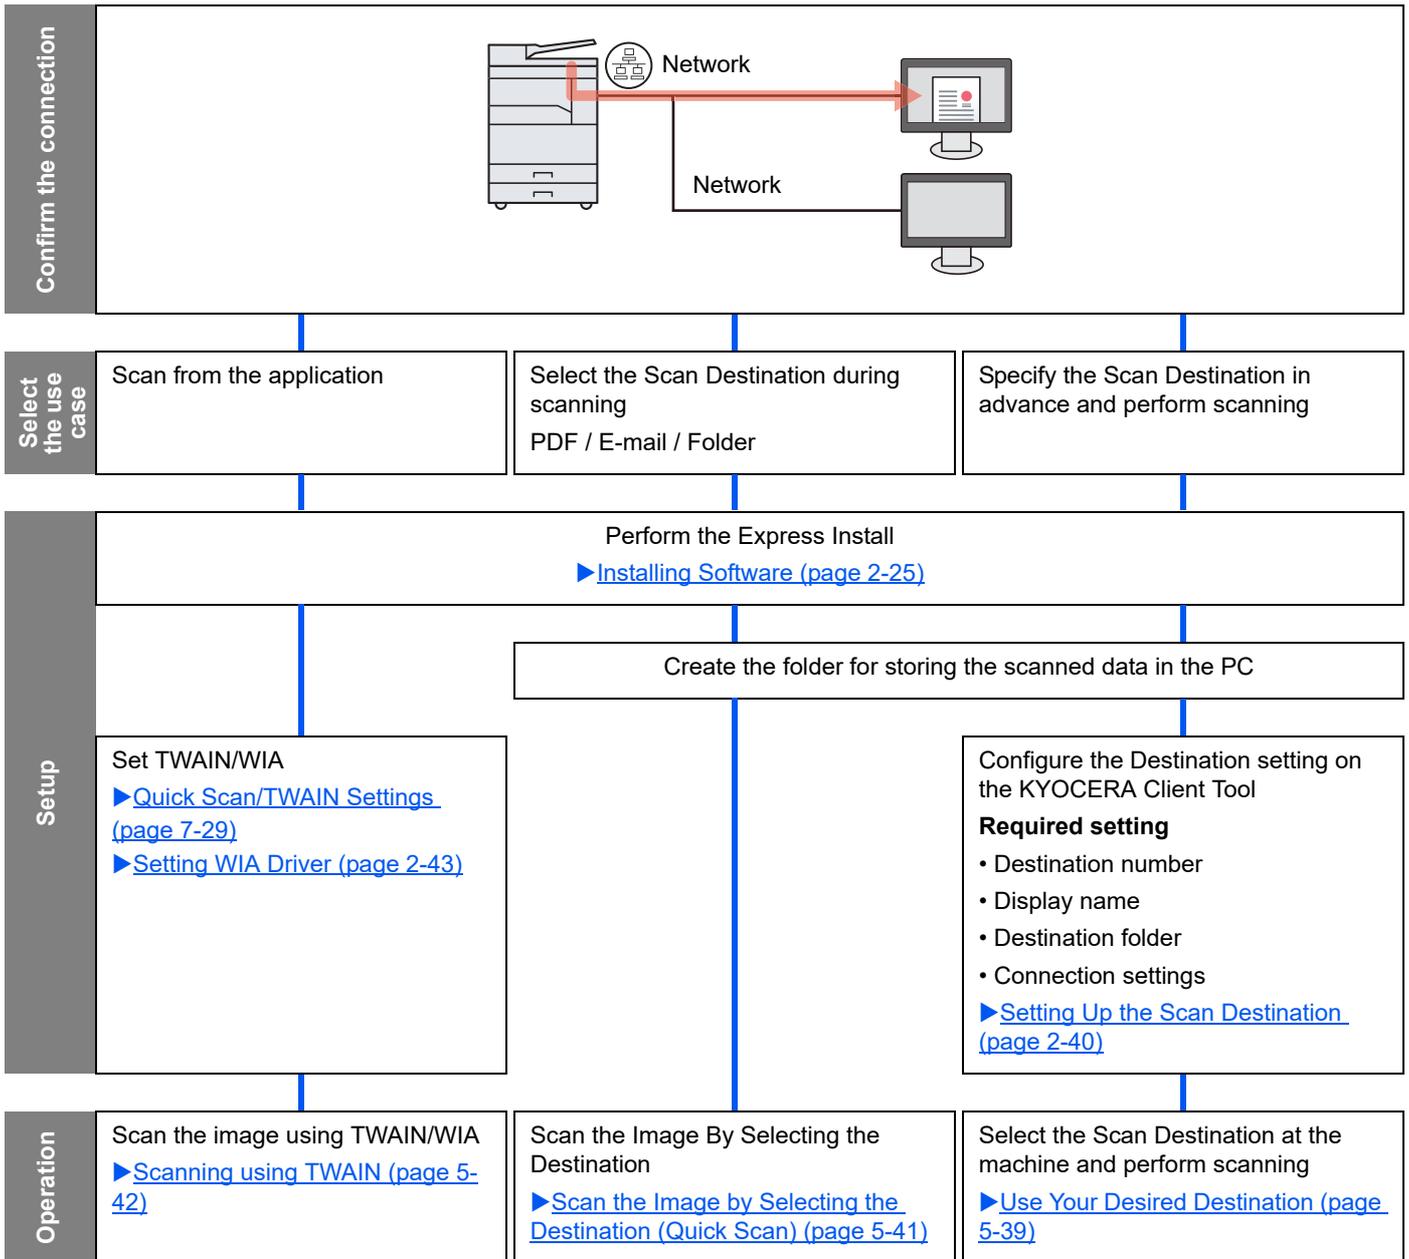


Scan the Image by Selecting the Destination (Quick Scan)

Select the scan method and destination for each job by using KYOCERA Client Tool.


When Connecting the Machine to the PC via USB

Perform a scan by operating the computer (Host PC) connected to the machine via USB. If the shared folder in the computer (Client PC) on the network is selected for the destination, an image can be saved on the computer that is not connected to the machine via USB.

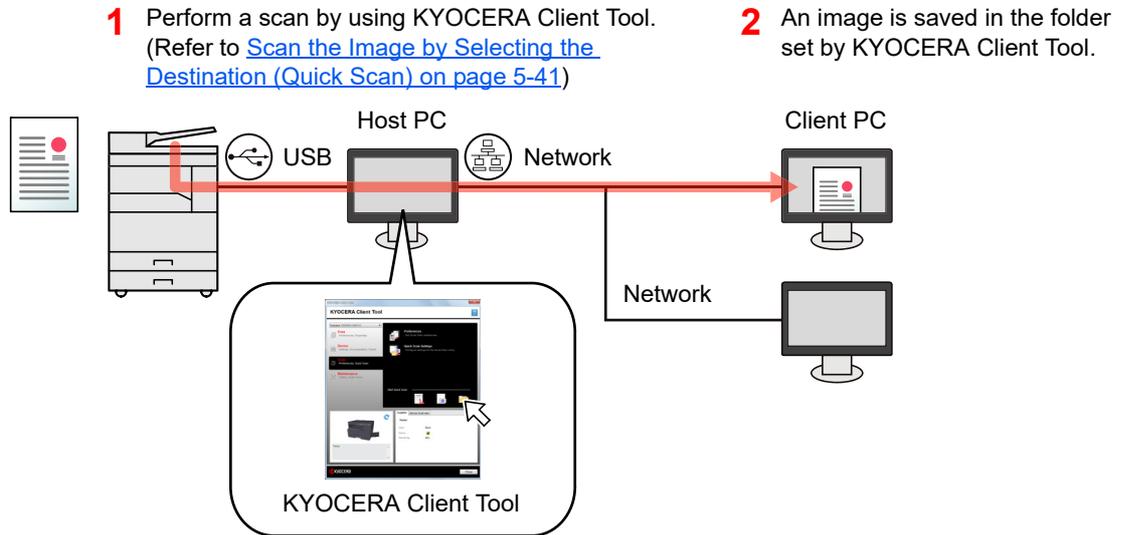

When Connecting the Machine to the PC on the Network *1

If the machine is connected to the PC on the network, an image can be saved in the PC on the network.

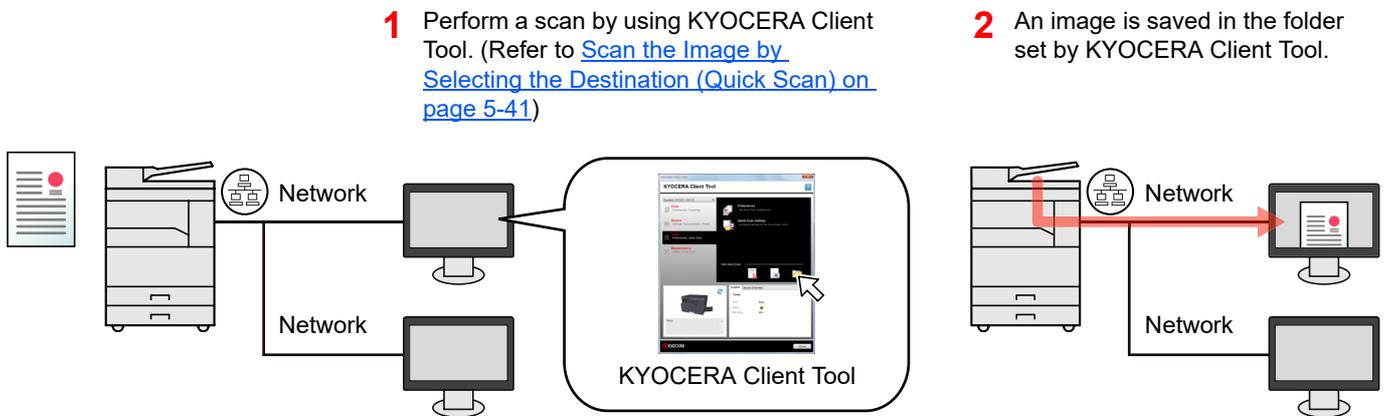

*1 The optional Network Interface Kit is required.

With Quick Scan, the following 3 types of scan are possible.


- Scan to PDF: Saves the scanned image in PDF format.
- Scan to E-mail: Attaches the scanned image to a new E-mail message.
- Scan to Folder: Saves the scanned image to a specified folder.

Scan the Image to the Specified Destination

Use the Preset Scan Destination (When Connecting the Machine to the PC via USB)

If originals are scanned after selecting [Local PC] as the destination, an image is saved in "Documents" in the computer (Host PC) connected to the machine via USB. If KYOCERA Client Tool is activated on the Host PC, originals can be scanned only by operating the machine.

- 1** Scan the originals at the machine.
(Refer to [Scan the Image to the Specified Destination on page 5-38.](#))
- 2** An image is saved in "My Documents."

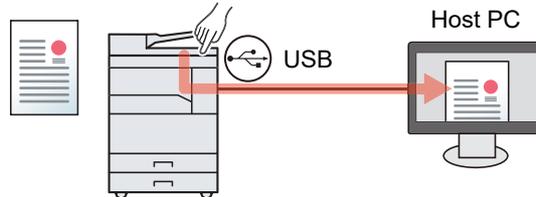


Use Your Desired Destination

When saving an image in a location other than "Documents", the destination needs to be set beforehand by using KYOCERA Client Tool.

- When Connecting the Machine to the PC via USB

When the shared folder in the computer (Client PC) on the network is selected for the destination, an image can be saved on the computer that is not connected to the machine via USB.


- 1** Configure the destination by using KYOCERA Client Tool. (Refer to [Setting Up the Scan Destination on page 2-40.](#))
- 2** Scan the originals at the machine. (Refer to [Use Your Desired Destination on page 5-39.](#))
- 3** An image is saved in the folder set by KYOCERA Client Tool.

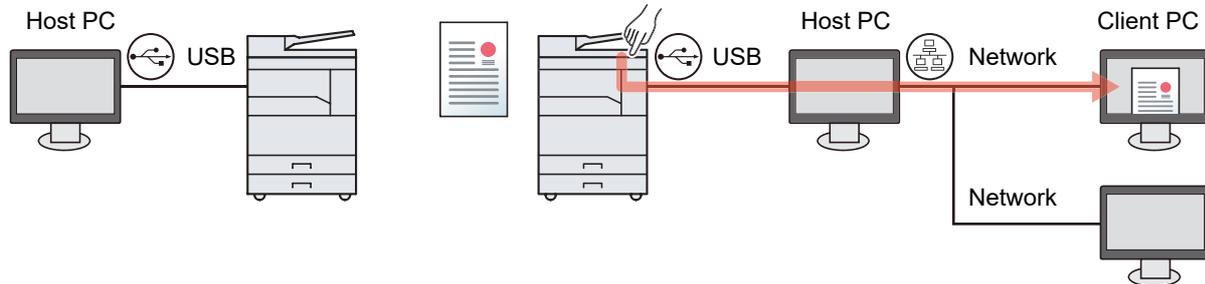

- When Connecting the Machine to the PC on the Network ^{*1}

When the machine is connected to the PC on the network, an image can be saved in the PC on the network.

- 1** Configure the destination on the PC on the network by using KYOCERA Client Tool. (Refer to [Setting Up the Scan Destination on page 2-40.](#))
- 2** Scan the originals at the machine. (Refer to [Use Your Desired Destination on page 5-39.](#))
- 3** An image is saved in the folder set by KYOCERA Client Tool.

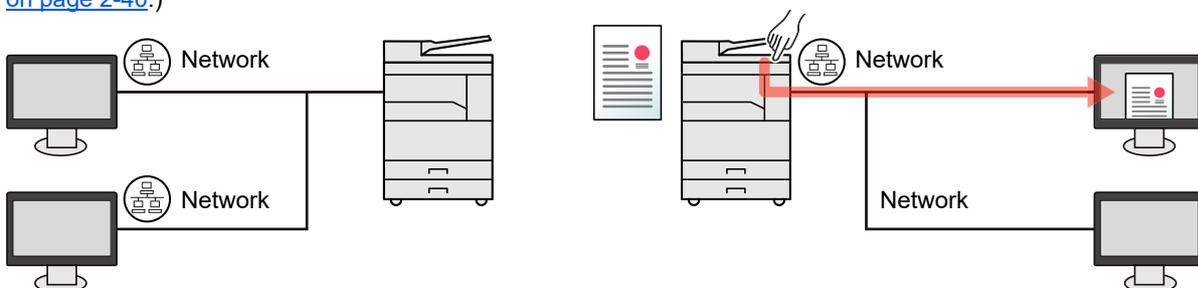

*1 The optional Network Interface Kit is required.

NOTE

The administrator of the machine needs to set the destination number in such a manner that the destination number does not overlap on the network.

Scanning using TWAIN

Make the image processing application read the scanned image. (Refer to [Scanning using TWAIN on page 5-42.](#))

Scan the Image to the Specified Destination

It is easy to scan from the operation panel on the machine. Before using this function, you need to preset the destination folder where to save scanned image and image quality using KYOCERA Client Tool. Refer to [Default Settings on the PC \(KYOCERA Client Tool\) on page 7-22](#).

Use the Preset Scan Destination

Save the scanned image in the preset scan destination. Documents is set for the destination. Scanning can be performed without preparing the destination.


1 Start KYOCERA Client Tool on the computer.

Click **[Start]** button on the Windows and then select **[Kyocera]** and **[KYOCERA Client Tool]** to start KYOCERA Client Tool.



NOTE

In Windows 8.1, select **[Search]** in charms, **[Apps]**, and then **[KYOCERA Client Tool]**.

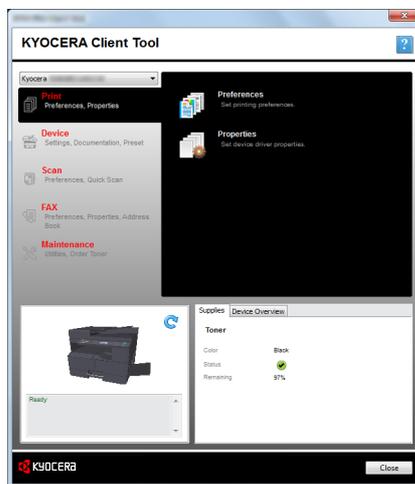


2 Press the **[Scan]** key on the machine.

Scan



3 Place the originals.

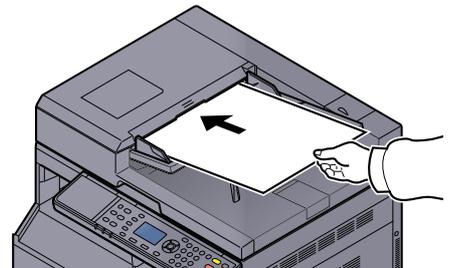

[Loading Originals \(page 5-2\)](#)

4 Press the **[Start]** key.


Start



Scanning starts.



NOTE

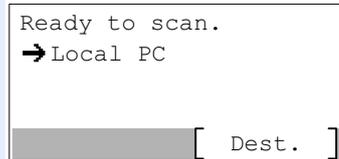

- If [Local PC] is selected as the destination, an image is saved in "Documents" in the computer (Host PC) connected to the machine via USB.
C:\Users\- When the scan ends, the folder in which an image is saved opens on the Host PC.

Use Your Desired Destination

If there are settings that you change from "Documents" in the computer (Host PC) connected to the machine via USB, set the destination by using KYOCERA Client Tool. You can simply select the destination number as needed to recall those functions.

30 destinations including the default [Local PC] can be registered. Refer to [Default Settings on the PC \(KYOCERA Client Tool\) on page 7-22.](#)


1 Start **KYOCERA Client Tool** on the computer.

Click **[Start]** button on the Windows and then select **[Kyocera]** and **[KYOCERA Client Tool]** to start KYOCERA Client Tool.



NOTE

In Windows 8.1, select **[Search]** in charms, **[Apps]**, and then **[KYOCERA Client Tool]**.

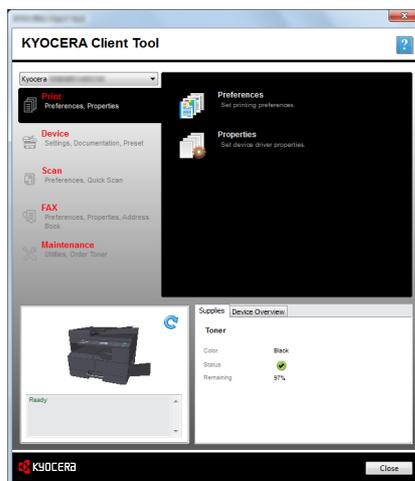


If the machine is connected to the PC on the network, "Connection Settings" need to be configured by using KYOCERA Client Tool. Refer to [When Connecting the Machine to the PC on the Network on page 2-41.](#)

2 Press the **[Scan]** key on the machine.

Scan




3 Place the originals.

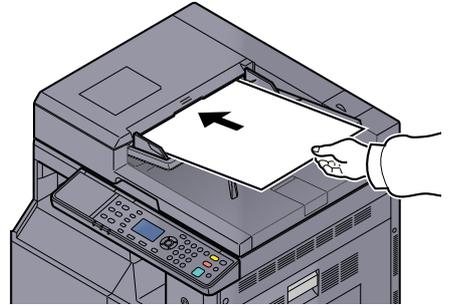



 [Loading Originals \(page 5-2\)](#)

4 Select the destination number.

1 Press [Dest.].

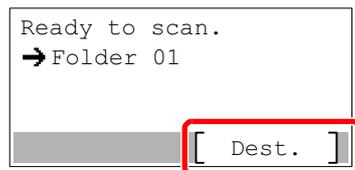

2 Press the [▲] or [▼] key to select a destination number (01 to 30) to recall, and press the [OK] key.

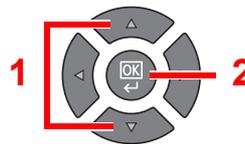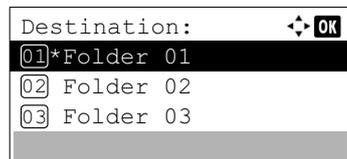

NOTE

The name set by using KYOCERA Client Tool appears. [-----] appears for the destination for which no name is set.

5 Press the **[Start]** key.

Start



Scanning starts.

When the scanning ends, the folder in which an image is saved opens on the computer.


Scan the Image by Selecting the Destination (Quick Scan)

Execute scanning from KYOCERA Client Tool.

 **NOTE**

You need to configure the settings of Quick Scan and TWAIN using KYOCERA Client Tool. Refer to [Default Settings on the PC \(KYOCERA Client Tool\) on page 7-22](#).

1 Place the originals on the machine.

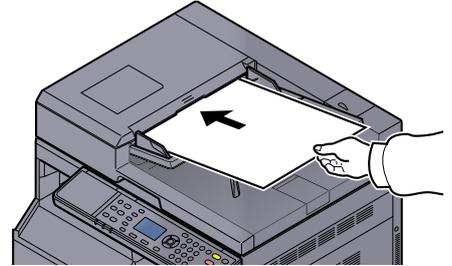

 [Loading Originals \(page 5-2\)](#)


2 Execute scanning on the Host PC.

- 1 Click [**Start**] button on the Windows and then select [**Kyocera**] and [**KYOCERA Client Tool**] to start KYOCERA Client Tool.

 **NOTE**

In Windows 8.1, select [**Search**] in charms, [**Apps**], and then [**KYOCERA Client Tool**].

- 2 Click [**Scan to PDF**], [**Scan to E-mail**] or [**Scan to Folder**] icon on the [**Scan**] tab.

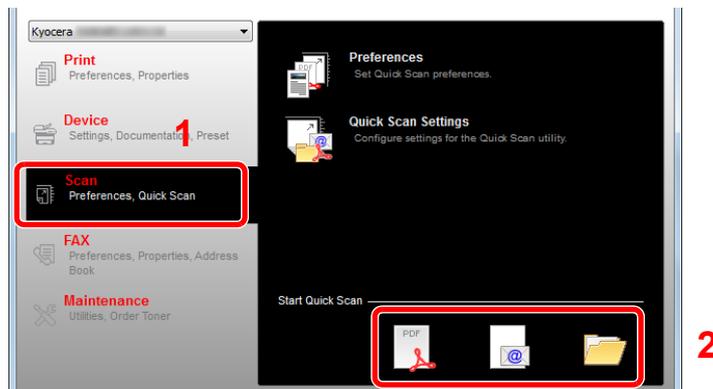


- Scan to PDF  Scanning starts. When scanning finishes, the [**Save PDF File As**] dialog appears. Specify the PDF file name and the folder in which the image will be saved.
- Scan to E-mail  Scanning starts. When scanning finishes, the mailer starts and the scanned image is attached. Enter the address, subject and message, and then send.
- Scan to Folder  The [**Browse for Folder**] dialog appears. Specify the folder in which the image will be saved, and click [**OK**]. Scanning starts.

Scanning using TWAIN

This section explains how to scan an original using TWAIN.

The procedure for scanning using the TWAIN driver is explained as an example. The WIA driver is used in the same way.

1 Place the originals.

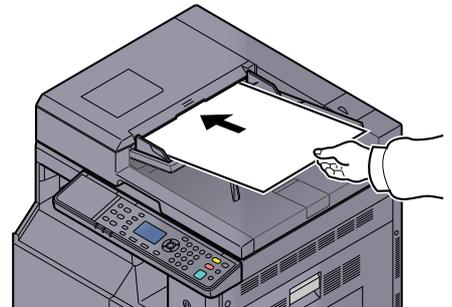

 [Loading Originals \(page 5-2\)](#)

2 Display the screen.

- 1 Activate the TWAIN compatible application software.
- 2 Select the machine using the application and display the [TWAIN] dialog box.




NOTE

For selecting the machine, see the Operation Guide or Help for each application software.

3 Configure the scan settings.

Select scanning settings in the TWAIN dialog box that opens.

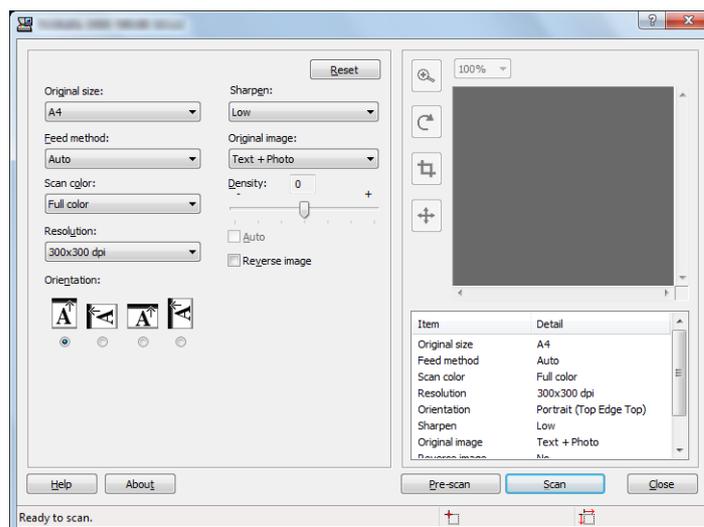

Configure the scan settings as needed. For details, refer to Help.

4 Scan the originals.

Click [Scan]. The document data is scanned.


Canceling Jobs

You can cancel jobs by pressing the **[Stop]** key.

Stop



If **[Cancel]** is displayed on the message display, jobs can be canceled by pressing **[Cancel]**.

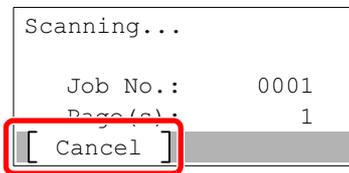


How to use the FAX Function

By installing the optional FAX Kit in the machine you can use the fax function. This section describes the basic method for sending a FAX. For more information on using the FAX, refer to the **FAX Operation Guide** *1.


*1 FAX is an option.

1 Press the [FAX] key.

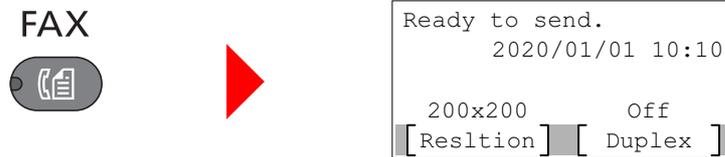

The base screen for fax appears.

2 Place the originals.

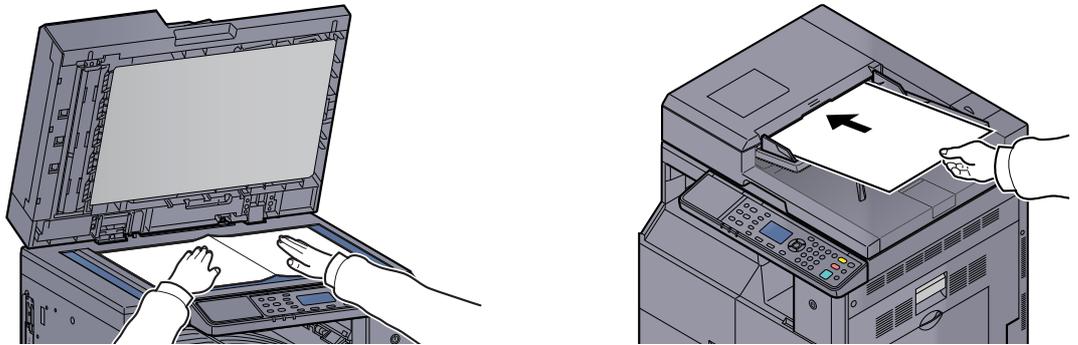

NOTE

For loading instructions, refer to [Loading Originals on page 5-2](#).

3 Select the transmission method.

There are two transmission methods: memory transmission and direct transmission.

Memory transmission: The original is scanned into memory before communication starts. Memory transmission is selected by default.


Direct transmission: The destination is dialed and communication starts before the original is scanned.



For details, refer to **FAX Operation Guide** *1.

*1 FAX is an option.

4 Specify the transmission destination.

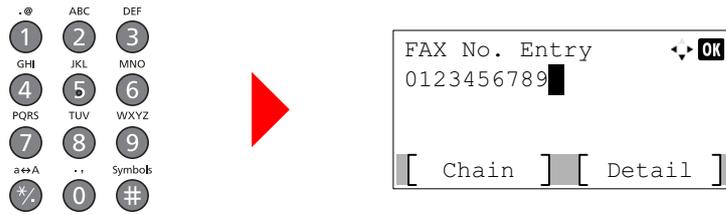

Enter the fax number of the receiving system using the numeric keys.




NOTE

The destination can be set by using the Address Book and One Touch Keys. For details, refer to **FAX Operation Guide**^{*1}.

*1 FAX is an option.

5 Select the functions.

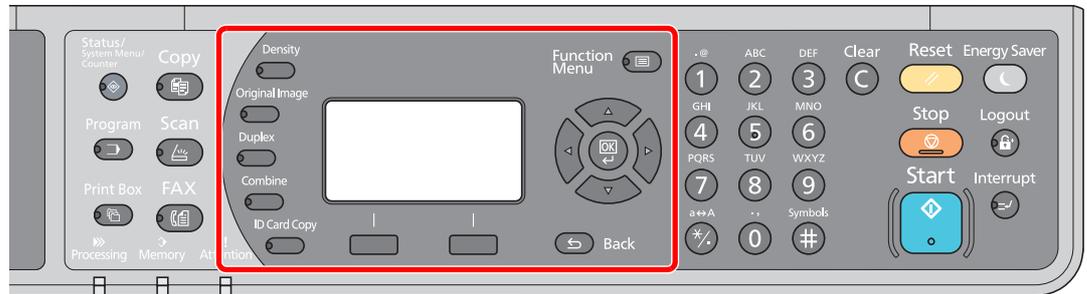

Select the FAX functions to use.

 For details, refer to **FAX Operation Guide**^{*1}.

*1 FAX is an option.

6 Press the [Start] key.

Start



Transmission starts.

6 Checking the Status

This chapter explains the following topics:

Checking Job Status	6-2
Checking Job History	6-6
Pause and Resumption of Jobs	6-9
Canceling the Jobs in Printing/Waiting	6-10
Checking Device Status	6-12
Checking the Remaining Amount of Toner and Paper	6-13
Checking from KYOCERA Client Tool	6-14

Checking Job Status

Check the status of jobs being processed or waiting to be printed.

Available Status Screens

You can check the status of jobs being processed or waiting on the message display. The following job statuses are available.

Status Display	Job status to be displayed
Print Job Status	<ul style="list-style-type: none"> • Copy • Printer • Printing from Print Box • FAX reception *1 • Job Report/List
Send Job Status *1	<ul style="list-style-type: none"> • FAX transmission
Scheduled Job *1	<ul style="list-style-type: none"> • Sending Job FAX using Delayed transmission

*1 Displayed only when the optional FAX Kit is installed.

Displaying Status Screens



1 Display the screen.

- 1 Press the [Status/System Menu/Counter] key.



Status/
System Menu/
Counter



- 2 Press the [▲] or [▼] key to select [Status], and press the [OK] key.

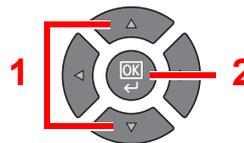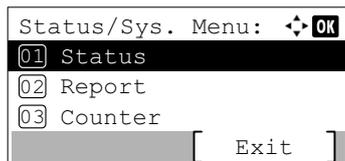


- 3 Press the [▲] or [▼] key to select [Print Job Status], [Send Job Status] or [Scheduled Job], and press the [OK] key.

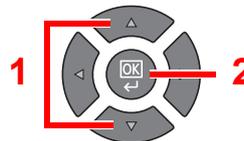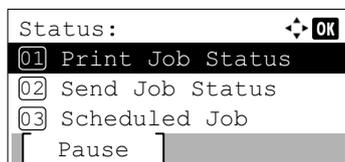

2 Select the job you want to check.

- 1 Press the [▲] or [▼] key to select the job you want to check, and press [Menu].

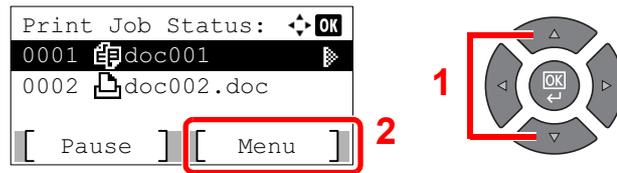


- 2 Press the [▲] or [▼] key to select [Detail], and press the [OK] key.



Jobs Detail Status is displayed.

3 Check the status.

Press the [▶] key to view the next screen. Press the [◀] key to return to the previous screen.

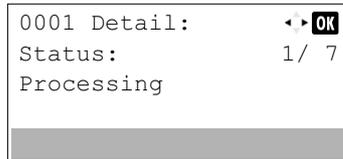

Print Job Status

Item	Description
Status	Status of job [Processing]: The status before starting to print. [Waiting]: Print Waiting [Pause]: Pausing print job or error [Canceling]: Canceling the job [Interrupt]: Printing has been suspended due to interrupt copy operation. [----]: The job is finished.
Accepted Time	Accepted Time of job
Job Name	When the job name in Job Name is displayed in a short form, press [Detail] to see the complete job name. Press the [OK] key to return to the previous screen.
Job Type	[Copy]: Copy job [Printer]: Printer job [FAX] ^{*1} : FAX reception [Report]: Report/List
Page and Copy	<ul style="list-style-type: none"> • Number of pages printed • Number of copies printed / Total number of copies to be printed
Original Pages	Number of original pages

*1 Displayed only when the optional FAX Kit is installed.

Item	Description
Sender Info.	<p>If the name of the sender is provided when receiving a FAX, the name is displayed. If only the number of the sender is provided, the number is displayed.</p> <p>If there is no information about the sender or if a FAX is not received, [----] appears.</p> <p>When the sender Information is displayed in a short form, press [Detail] to see the complete sender Information. Press the [OK] key to return to the previous screen.</p>

Send Job Status

Item	Description
Status	<p>Status of job</p> <p>[Processing]: The status before starting sending such as during scanning originals</p> <p>[Waiting]: Waiting Sending</p> <p>[Pause]: Pausing the job</p> <p>[Canceling]: Canceling the job</p> <p>[----]: The job is finished.</p>
Accepted Time	Accepted Time of job
Job Name	When the job name in Job Name is displayed in a short form, press [Detail] to see the complete job name. Press the [OK] key to return to the previous screen.
Job Type	[FAX] is displayed.
Original Pages	Number of original pages
Color/B & W	[Black & White] is displayed.
Destination	<p>The destination is displayed.</p> <p>If there is one destination:</p> <p>The FAX number is displayed.</p> <p>When the FAX number is displayed in a short form, press [Detail] to see the complete FAX number. Press the [OK] key to return to the previous screen.</p> <p>If there are multiple destinations:</p> <p>[Broadcast] is displayed.</p> <p>When [List] is pressed, all FAX numbers of destinations are displayed.</p> <p>When the FAX number in a short form, select the FAX number and then press the [OK] key to see the complete FAX number. Press the [OK] key to return to the previous screen.</p> <p>Press [Exit] to return to the original screen.</p>

Scheduled Job Status

Item	Description
Status	<p>Status of job</p> <p>[Waiting]: Waiting Sending</p>
Start Time	Time to start the scheduled job
Job Name	When the job name in Job Name is displayed in a short form, press [Detail] to see the complete job name. Press the [OK] key to return to the previous screen.

Item	Description
Job Type	[FAX] is displayed.
Original Pages	Number of original pages
Color/B & W	[Black & White] is displayed.
Destination	The destination is displayed.  Destination (page 6-4) .

Checking Job History

Check the history of completed jobs.

Available Job History Screens

The following job histories are available.

Screen	Job histories to be displayed
Print Job Log	<ul style="list-style-type: none"> • Copy • Printer • Printing from Print Box • FAX reception*¹ • Job Report/List
Send Job Log	<ul style="list-style-type: none"> • Scan (only for TWAIN) • FAX*¹

*¹ Displayed only when the optional FAX Kit is installed.

Displaying Job History Screen



1 Display the screen.

- 1 Press the [Status/System Menu/Counter] key.



Status/
System Menu/
Counter



- 2 Press the [▲] or [▼] key to select [Status], and press the [OK] key.

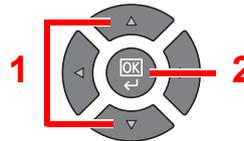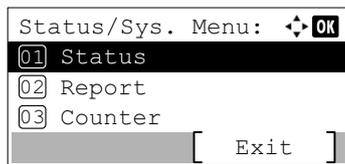


- 3 Press the [▲] or [▼] key to select [Print Job Log] or [Send Job Log], and press the [OK] key.

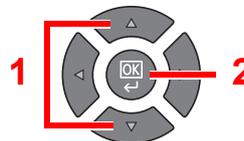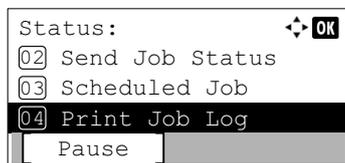

2 Select the job you want to check.

Press the [▲] or [▼] key to select the job you want to check, and press [Detail].

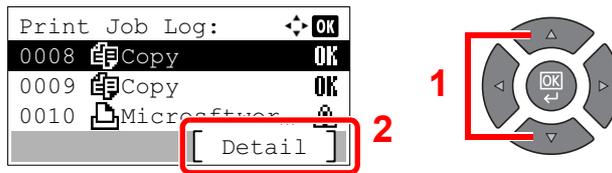


A job result icon is displayed on the extreme right of each job.

- **OK**: The job has been completed.
- : An error has occurred.
- : The job has been canceled.

3 Check the job history.

Press the [▶] key to view the next screen. Press the [◀] key to return to the previous screen.

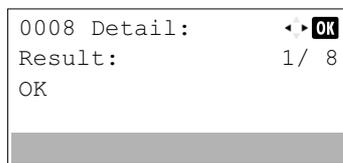

Print Job Log

Item	Description
Result	Result of job [OK]: The job has been completed. [Error]: An error has occurred. [Cancel]: The job has been canceled.
Accepted Time	Accepted time of job
End Time	Completed time of job
Job Name	When the job name in Job Name is displayed in a short form, press [Detail] to see the complete job name. Press the [OK] key to return to the previous screen.
Job Type	[Copy]: Copy job [Printer]: Printer job [FAX] ^{*1} : FAX reception [Report]: Report/List
Page and Copy	<ul style="list-style-type: none"> • Number of pages printed • Number of copies printed / Total number of copies to be printed
Original Pages	Number of original pages
Sender Info.	<p>If the name of the sender is provided when receiving a FAX, the name is displayed. If only the number of the sender is provided, the number is displayed.</p> <p>If there is no information about the sender or if a FAX is not received, [----] appears.</p> <p>When the sender Information is displayed in a short form, press [Detail] to see the complete sender Information. Press the [OK] key to return to the previous screen.</p>

*1 Displayed only when the optional FAX Kit is installed.

Send Job Log

Item	Description
Result	Result of job [OK]: The job has been completed. [Error]: An error has occurred. [Cancel]: The job has been canceled.
Accepted Time	Accepted Time of job
End Time	Completed time of job
Job Name	When the job name in Job Name is displayed in a short form, press [Detail] to see the complete job name. Press the [OK] key to return to the previous screen.
Job Type	[Application]: Scan job (TWAIN) [FAX] ^{*1} : FAX transmission
Original Pages	Number of original pages
Color/B & W	Color mode of scan data [Full Color] [Black & White] [Grayscale]
Destination	For FAX, the destination is displayed.  Destination (page 6-4) . For Scan, [-----] is displayed.

*1 Displayed only when the optional FAX Kit is installed.



NOTE

If the login user name entry screen appears during operations, log in by referring to [Administrator User Name and Password on page 2-10](#).

The factory default login user name and login password are set as shown below.

Login User Name	Login Password
Admin ^{*1}	Admin ^{*1}

*1 Upper case and lower case letters are distinguished (case sensitive).

Pause and Resumption of Jobs

Pause/resume all printing jobs in printing/waiting.



1 Display the screen.

- 1 Press the [Status/System Menu/Counter] key.


Status/
System Menu/
Counter



- 2 Press the [▲] or [▼] key to select [Status], and press the [OK] key.

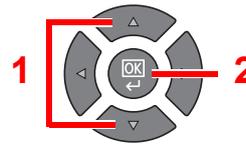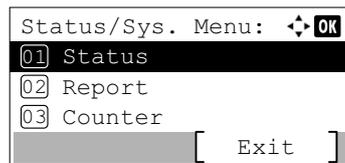

2 Press [Pause].

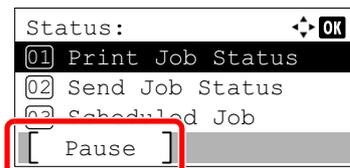

Printing is paused.

When resuming the printing of jobs that have been paused, press [Resume].



NOTE

If the [Back] key or other function key, such as the [Copy] key, is pressed during Pause, [Resume paused job] appears. If [Yes] is selected and then the [OK] key is pressed, the job is resumed and the following screen appears. If [No] is selected and then the [OK] key is pressed, the following screen appears while the job is paused.

Canceling the Jobs in Printing/Waiting

Cancel the printing jobs in printing/waiting.



1 Display the screen.

- 1 Press the [Status/System Menu/Counter] key.



Status/
System Menu/
Counter



- 2 Press the [▲] or [▼] key to select [Status], and press the [OK] key.

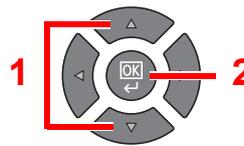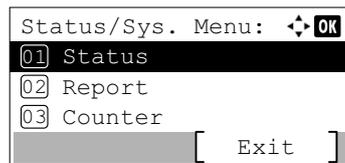


- 3 Press the [▲] or [▼] key to select [Print Job Status], [Send Job Status] or [Scheduled Job], and press the [OK] key.

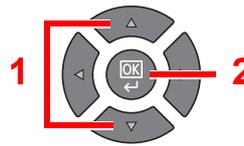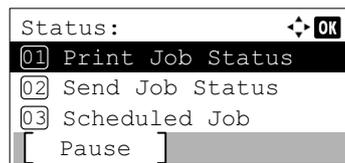

2 Cancel a job.

Print Job Status



- 1 Press the [▲] or [▼] key to select the job to be canceled, and press [Menu].

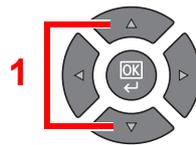

NOTE

Two jobs are displayed in the order of reception by the machine.

- 2 Press the [▲] or [▼] key to select [Cancel Job], and press the [OK] key.

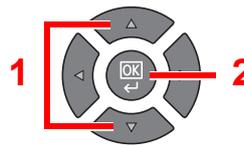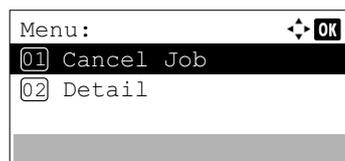



NOTE

When FAX reception job is selected, [Cannot delete FAX reception jobs.] is displayed and the job cannot be canceled.

- 3 Press [Yes] in confirmation screen.

Send Job Status or Scheduled Job Status

- 1 Press the [▲] or [▼] key to select the job to be canceled, and press [Cancel].

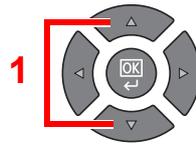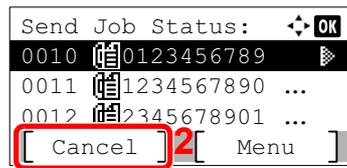

NOTE

A job can be canceled by pressing [Menu], selecting [Cancel Job] and then pressing the [OK] key.

- 2 Press [Yes] in confirmation screen.

Checking Device Status

Configure the devices or check their status.

 **NOTE**

For checking the FAX status, refer to the **FAX Operation Guide**^{*1}.

*1 FAX is an option.



1 Display the screen.

- 1 Press the [Status/System Menu/Counter] key.

Status/
System Menu/
Counter





- 2 Press the [▲] or [▼] key to select [Status], and press the [OK] key.

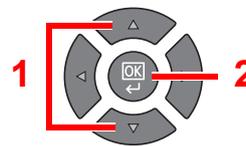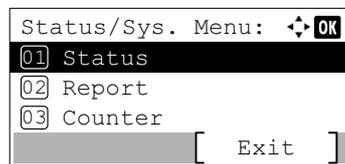

2 Check the status.

Press the [▲] or [▼] key to select [Scanner] or [Printer]. Then, press the [OK] key to show the status of the selected device.

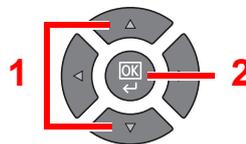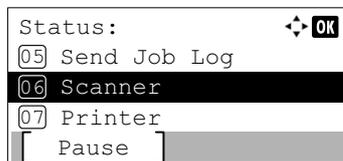

Scanner

Item	Description
Ready.	The device is ready.
Pausing...	The device is being paused.
Scanning...	The device is scanning.
Please wait.	The device is initializing.

Printer

Item	Description
Ready.	The device is ready.
Pausing...	The device is being paused.
Printing...	The device is printing.
Please wait.	The device is initializing.
Processing...	The device is processing print job.

Checking the Remaining Amount of Toner and Paper

Check the remaining amount of toner and paper on the message display.



1 Display the screen.

- 1 Press the [Status/System Menu/Counter] key.

Status/
System Menu/
Counter





- 2 Press the [▲] or [▼] key to select [Status], and press the [OK] key.

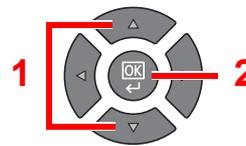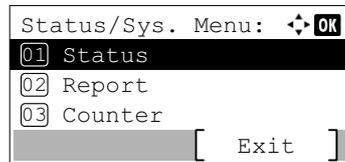

2 Check the status.

Press the [▲] or [▼] key to select [Toner Status] or [Paper Status], and press the [OK] key.

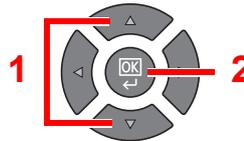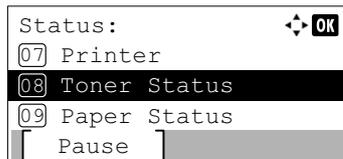


Toner Status

You can check the remaining amount of toner level from 100 to 0% (10% increments).

Paper Status

The status of the source is displayed. Press the [▶] key to view the next source. Press the [◀] key to return to the previous screen.

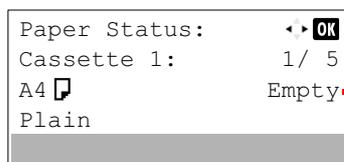

If paper has run out or the cassette is not installed, [Empty] is displayed.




NOTE

- If the paper size is unclear, [-----] appears.
- [Cassette 2 (to 4)] are displayed when the optional paper feeder is installed.

Checking from KYOCERA Client Tool

You can check the current status of the machine from the KYOCERA Client Tool.

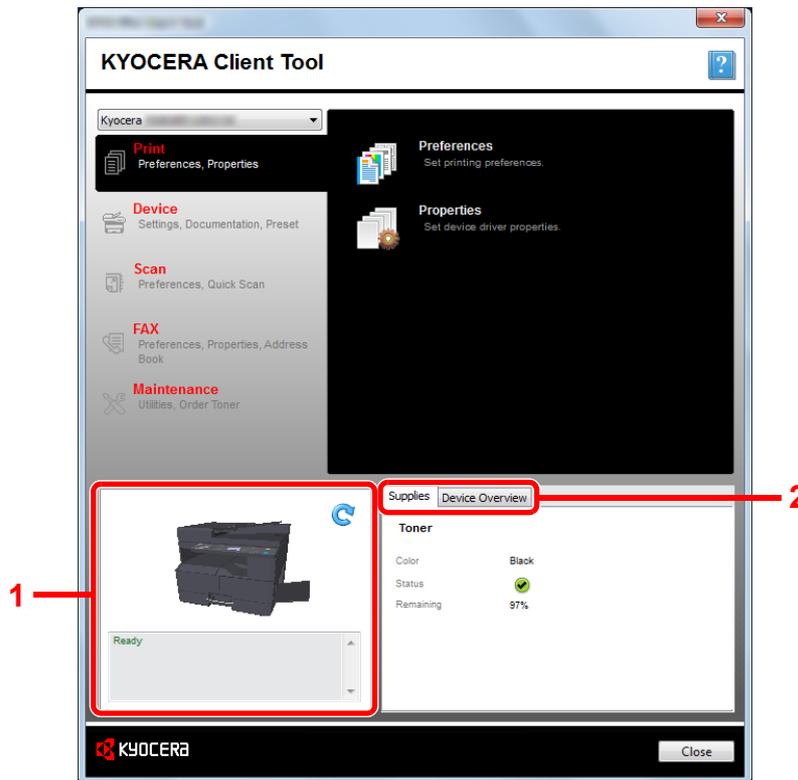

No.	Item	Description
1	Machine status	Show a 3D image of the selected machine and its current status. Click  (Refresh) to refresh the machine status.
2	Supplies	Show the toner status.
	Device Overview	Show the machine settings.

7 System Menu and KYOCERA Client Tool

This chapter explains the following topics:


Default Settings on the Machine (System Menu)	7-2
System Menu Settings	7-3
Report	7-5
System	7-6
Admin/Accounting	7-10
Common Settings	7-10
Copy	7-20
Printer	7-20
FAX	7-20
Edit Destination	7-21
Adjust/Maint. (Adjustment/Maintenance)	7-21
Default Settings on the PC (KYOCERA Client Tool)	7-22
Operation Method	7-22
Screen Overview	7-23
Configuring the Administrative Settings	7-25
Scan Destination Settings	7-26
Quick Scan/TWAIN Settings	7-29
Print Box Settings	7-32

Default Settings on the Machine (System Menu)

Configure settings related to overall machine operation.

Press the [**Status/System Menu/Counter**] key to show the settings on the message display. Then, select from the settings displayed.

 [Operation Method \(page 3-3\).](#)

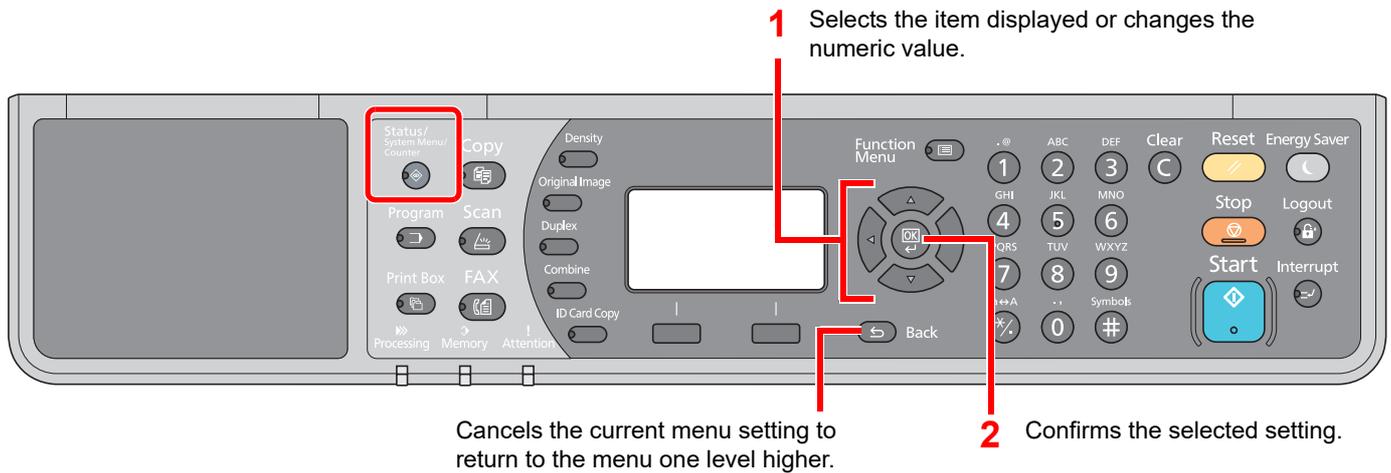

NOTE

- If the login user name entry screen appears during operations, log in by referring to [Administrator User Name and Password on page 2-10](#).

The factory default login user name and login password are set as shown below.

Login User Name	Login Password
Admin*1	Admin*1

*1 Upper case and lower case letters are distinguished (case sensitive).

- If settings are changed, the changes are immediately reflected when the [**Reset**] key is pressed.

Refer to [System Menu Settings](#) on the following page and configure as needed.

System Menu Settings

This section explains the functions that can be configured in System Menu. To configure the settings, select the item in System Menu and press the setting item. For details on each function, see the table below.

Item	Description	Reference Page
Status	Check job statuses and histories, machine statuses, and the remaining amount of paper and toner. Pausing or canceling of jobs can also be executed.	page 6-1
Report	Print reports to check the machine settings, status, and history. Settings for printing reports can also be configured.	page 7-5
Report Print	Print reports.	page 7-5
Admin Rpt Set.		Refer to the FAX Operation Guide *1.
Result Rpt Set.		
Counter	Check the number of sheets printed and scanned.	page 2-44
System	Configure machine system settings.	page 7-6
Network Setting	Configure network settings.	page 7-6
I/F Block Set.	Protect this machine by blocking the interface with external devices such as USB device or optional interfaces.	page 7-9
Admin/Accounting	Configure settings related to machine management. For details on Administrator Setting, refer to Administrator Setting on page 2-11 , and for details on Job Accounting, refer to Enabling Job Accounting on page 8-4 .	—
Common Settings	Configure overall machine operation.	page 7-10
Language	Select the language displayed on the message display.	page 7-10
Default Screen	Select the screen appearing right after start-up (default screen).	page 7-10
Sound	Set options for buzzer sound during the machine operations.	page 7-11
Display Bright.	Set the brightness of the message display.	page 7-11
Quiet Mode	Make after-printing process run more quietly. Select this mode when the running noise is uncomfortable.	page 7-11
Orig./Paper Set.	Configure settings for originals and paper.	page 7-12
Preset Limit	Restrict the number of copies that can be made at one time.	page 7-16
Measurement	Select inch or metric for the unit for paper dimensions.	page 7-16
Error Handling	Select whether to cancel or continue the job when error has occurred.	page 7-16
Date Setting	Configure settings related to the date and time.	page 7-17
Timer Setting	Configure settings related to the time.	page 7-17
Function Default	Defaults are the values automatically set after the warm-up is completed or the [Reset] key is pressed. Set the defaults for available settings. Setting the frequently-used values as defaults makes subsequent jobs easier.	page 7-18
Copy	Configure settings for copying functions.	page 7-20
Printer	When printing from computers, settings are generally made on the application software screen. However, the following settings are available for configuring the defaults to customize the machine.	page 7-20

*1 FAX is an option.

Item	Description	Reference Page
FAX	Configure settings for fax functions. For details, refer to the FAX Operation Guide ^{*1} .	—
Edit Destination	Configure settings for Address Book. For details, refer to the FAX Operation Guide ^{*1} .	—
Adjust/Maint.	Adjust printing quality and conduct machine maintenance.	page 7-21

*1 FAX is an option.

**NOTE**

If the machine is connected to the PC on the network, the machine can be configured from Command Center RX on the PC. ^{*1} For details on Command Center RX, refer to **Command Center RX User Guide**.

*1 The optional Network Interface Kit is required.

Report

Print reports to check the machine settings and status.




Report Print

Status/
System Menu/
Counter

▶ Report

▶ Report Print

If the system menu is operated without a login (account ID is not entered) while job accounting is enabled, the account ID must be entered before the report can be printed.

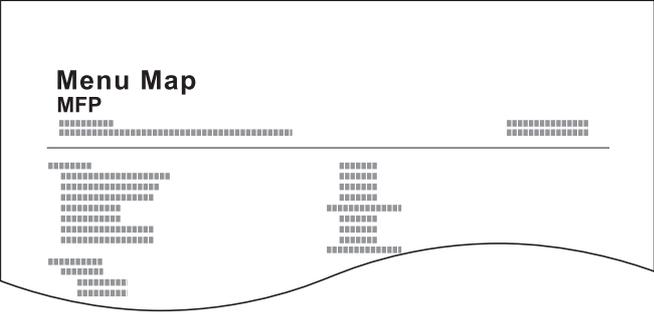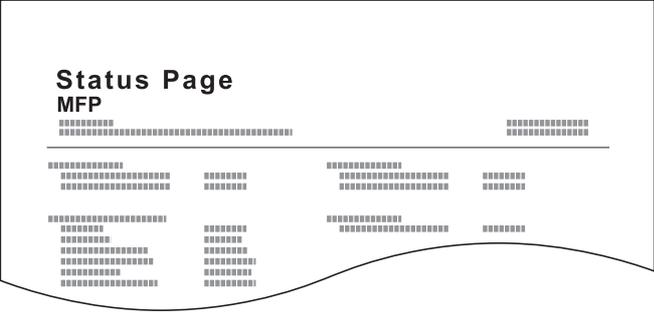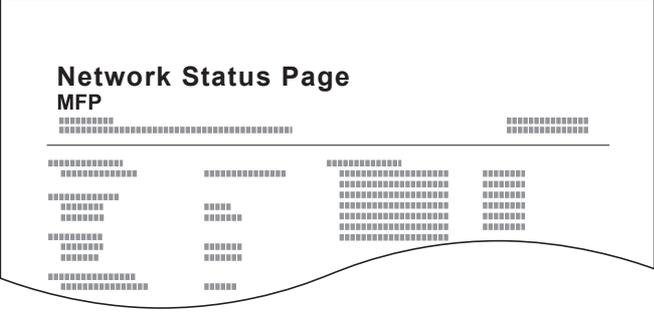Item		Description
Report Print	Menu Map	Prints Menu Map to check the settings of the machine. 
	Status Page	Prints the status page, allowing you to check the information including current settings, available memory space, and optional equipment installed. 
	Network Status	Prints the network status, allowing you to check the information including network interface firmware version, network address and protocol.  <p> NOTE This function is displayed when the optional Network Interface Kit is installed.</p>
	Service Status	Prints the service status. More detailed information is available than on the Status Page. Service personnel usually print the service status pages for maintenance purpose.

Admin Rpt Set. (Admin Report Settings) / Result Rpt Set. (Result Report Settings)

Status/
System Menu/
Counter

 **Report** **Admin Rpt Set.** **Result Rpt Set.**

Configure settings for fax functions. For details, refer to the **FAX Operation Guide**^{*1}.

*1 FAX is an option.

System

Configure machine system settings.

Network Setting

Configure network settings.



NOTE

This function is displayed when the optional Network Interface Kit is installed.

TCP/IP Settings

Status/
System Menu/
Counter

 **System** **Network Setting** **TCP/IP Settings**

Item		Description
TCP/IP Settings	TCP/IP	Select whether to use TCP/IP Protocol. Value: Off, On
	IPv4 Setting	Set up TCP/IP (IPv4) to connect to the network. This setting is available when [TCP/IP] is set to [On].
	DHCP	Select whether to use the DHCP (IPv4) server. Value: Off, On
	Auto-IP	Select whether to use Auto-IP. Value: Off, On
	IP Address	Set the IP addresses. Value: ###.###.###.###  NOTE If DHCP is set to [On], this item is displayed only and cannot be entered.
	Subnet Mask	Set the IP subnet masks. Value: ###.###.###.###  NOTE If DHCP is set to [On], this item is displayed only and cannot be entered.
	Default Gateway	Set the IP gateway addresses. Value: ###.###.###.###  NOTE If DHCP is set to [On], this item is displayed only and cannot be entered.

Item		Description
TCP/IP Settings	IPv6 Setting	Set up TCP/IP (IPv6) to connect to the network. This setting is available when [TCP/IP] is [On].
	IPv6	Select whether to use IPv6. Value: Off, On  NOTE Selecting [On] displays IP address in [Link Local] after restarting the network.
	Manual Settings	Manually specify the IP address, prefix length, and gateway address of TCP/IP (IPv6). Value IP Address: (numbers (128 bit in total) separated by colons) Prefix Length: 0 to 128 Default Gateway: (numbers (128 bit in total) separated by colons)  NOTE This function is displayed when [IPv6] is set to [On]. To enter "Default Gateway", set [RA (Stateless)] to [Off].
	RA (Stateless)	Select whether to use RA (Stateless). Value: Off, On  NOTE This function is displayed when [IPv6] is set to [On]. Selecting [On] displays IP address in [IP Address 1 (to 5)] after restarting the network.
	DHCPv6 Setting	Select whether to use the DHCP (IPv6) server. Value: Off, On  NOTE This function is displayed when [IPv6] is set to [On]. Selecting [On] displays IP address in [IP Address] after restarting the network.
	Bonjour	Select whether to use Bonjour. Value: Off, On

Item		Description
TCP/IP Settings	Protocol Detail	Select the settings for Protocol Detail.
	SMTP	Select whether to send E-mail using SMTP. Value: Off, On
	WSD-PRINT	Select whether to use WSD Print.* ¹ Value: Off, On
	LPD	Select whether to receive documents using LPD.* ¹ Value: Off, On
	RAW Port	Select whether to receive documents using Raw Port.* ¹ Value: Off, On
	IPP	Select whether to receive documents using IPP.* ¹ Value: Off, On
	IPP over SSL	Select whether to receive documents using IPP over SSL.* ¹ Value: Off, On
	HTTP	Select whether to communicate using HTTP.* ¹ Value: Off, On
	HTTPS	Select whether to communicate using HTTPS.* ¹ Value: Off, On
	SNMP	Select whether to communicate using SNMP.* ¹ Value: Off, On
	SNMPv3	Select whether to communicate using SNMPv3.* ¹ Value: Off, On
	Enhanced WSD	Select whether to use Enhanced WSD.* ¹ Value: Off, On
EnhancedWSD (SSL)	Select whether to use Enhanced WSD (SSL). ¹ Value: Off, On  NOTE Selecting [Off] will disable the SSL capability of TWAIN drivers.	

*¹ The setting will be changed after restarting the device or network.

 **IMPORTANT**

After changing the setting, restart the network or turn the machine OFF and then ON.

Secure Protocol

Status/
System Menu/
Counter



System



Network Setting



Secure Protocol

Item		Description
Secure Protocol	SSL	Select whether to use SSL for communication. Value: Off, On

LAN Interface

Status/
System Menu/
Counter



▶ System

▶ Network Setting

▶ LAN Interface

Item	Description
LAN Interface	Specify the settings for the LAN interface to be used. Value: Auto, 10Base-Half, 10Base-Full, 100Base-Half, 100Base-Full

✔ IMPORTANT

After changing the setting, restart the network or turn the machine OFF and then ON.

Host Name

Status/
System Menu/
Counter



▶ System

▶ Network Setting

▶ Host Name

Item	Description
Host Name	Check the host name of the machine. Host name can be changed from Command Center RX.

Restart Network

Status/
System Menu/
Counter



▶ System

▶ Network Setting

▶ Restart Network

Item	Description
Restart Network	Restarts the network.

I/F Block Set. (Interface Block Setting)

Status/
System Menu/
Counter



▶ System

▶ I/F Block Set.

Protect this machine by blocking the interface with external devices such as USB device or optional interfaces.

Item	Description
I/F Block Set.	USB Device This locks and protects the USB interface connector (USB Device). Value: Unblock, Block
	Option I/F This locks and protects the network interface connector. Value: Unblock, Block  NOTE This function is displayed when the optional Network Interface Kit is installed.
	Option I/F-FAX *1 This locks and protects the FAX. Value: Unblock, Block

*1 Displayed only when the optional FAX Kit is installed.

✔ IMPORTANT

After changing the setting, restart the system or turn the machine OFF and then ON.

Admin/Accounting

Status/
System Menu/
Counter



▶ **Admin/Accounting**

Configure settings related to machine management.



[Administrator Setting \(page 2-11\)](#)

[Job Accounting \(page 8-1\)](#)

[Unknown ID Job \(page 8-16\)](#)

Common Settings

Configure overall machine operation.

Language

Status/
System Menu/
Counter



▶ **Common Settings**

▶ **Language**

Item	Description
Language	Select the language displayed on the message display.

Default Screen

Status/
System Menu/
Counter



▶ **Common Settings**

▶ **Default Screen**

Item	Description
Default Screen	Select the screen appearing right after start-up (default screen). Value: Copy, Scan, FAX*1, Print Box, Program

*1 Displayed only when the optional FAX Kit is installed.

Sound

Status/
System Menu/
Counter

Common Settings



Sound

Item	Description
Sound	
Buzzer	Set options for buzzer sound during the machine operations.
Key Confirmation	Emit a sound when a key is pressed on the operation panel. Value: Off, On
Job Finish	Emit a sound when a print job is normally completed. Value: Off, On, FAX RX Only*¹
Ready	Emit a sound when the warm-up is completed. Value: Off, On
Warning	Emit a sound when errors occur. Value: Off, On
FAX Speaker*¹	For details, refer to the FAX Operation Guide .
FAX Monitor*¹	For details, refer to the FAX Operation Guide .

*¹ Displayed only when the optional FAX Kit is installed.

Display Bright. (Display Brightness)

Status/
System Menu/
Counter

Common Settings



Display Bright.

Item	Description
Display Bright.	Set the brightness of the message display. Value: Lighter +3, Lighter +2, Lighter +1, Normal 0, Darker -1, Darker -2, Darker -3

Quiet Mode

Status/
System Menu/
Counter

Common Settings



Quiet Mode

Item	Description
Quiet Mode	Make after-printing process run more quietly. Select this mode when the running noise is uncomfortable. Value: Off, On
	 NOTE When [On] is selected, preparation for the next printing may take longer.





Orig./Paper Set. (Original/Paper Settings)




Status/
System Menu/
Counter



▶ Common Settings

▶ Orig./Paper Set.

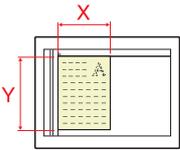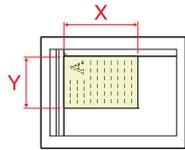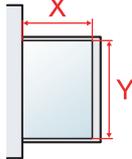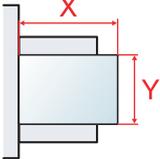Item	Description
Orig./ Paper Set. Custom Orig.Size	<p>Set up frequently-used custom original size.</p> <p>To register a custom original size, enter the desired size. The custom size options are displayed on the screen to select original size.</p> <p>Value X: Width / Y: Length</p> <p>Metric X: 50 to 432 mm (in 1 mm increments) Y: 50 to 297 mm (in 1 mm increments)</p> <p>Inch X: 2.00 to 17.00" (in 0.01" increments) Y: 2.00 to 11.69" (in 0.01" increments)</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>Vertical</p>  </div> <div style="text-align: center;"> <p>Horizontal</p>  </div> </div>
Custom PaperSize	<p>Set up frequently-used custom paper size.</p> <p>To register a custom paper size, enter the desired size. The custom size option is displayed on the screen to select the paper size set in the multi purpose tray.</p> <p>Value X: Width / Y: Length</p> <p>Metric X: 148 to 432 mm (in 1 mm increments) Y: 98 to 297 mm (in 1 mm increments)</p> <p>Inch X: 5.83 to 17.00" (in 0.01" increments) Y: 3.86 to 11.69" (in 0.01" increments)</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>Vertical</p>  </div> <div style="text-align: center;"> <p>Horizontal</p>  </div> </div>
Cassette 1 (to 4) Set.	<p>Select the paper size and media type for cassettes. For information on how to select the paper size and media type, refer to Cassette 1 (to 4) Set. (Cassette 1 (to 4) Settings) on page 7-14.</p>
MP Tray Set.	<p>Select the paper size and media type for the multi purpose tray. For information on how to select the paper size and media type, refer to MP Tray Set. (MP Tray Settings) on page 7-14.</p>
Media Type Set.	<p>Set weight for each media type.</p> <p>For Custom 1-8, settings for duplex printing and media type name can be changed.</p> <p>For details on setting value, refer to Media Type Set. (Media Type Settings) on page 7-15.</p>

   Item	Description
Orig./ Paper Set.	<p>Auto Detect Orig.</p> <p>Select whether to automatically detect originals of special or non-standard size.</p> <p> NOTE For Auto Detect Orig., this change is available for some countries.</p>
	<p>A6/Hagaki</p> <p>As A6 and Hagaki are similar in size, select either one of them for automatic detection. Value: A6, Hagaki</p>
	<p>Folio</p> <p>Select whether to enable automatic detection of Folio. Value: Off, On</p>
	<p>11 × 15"</p> <p>Select whether to enable automatic detection of 11 × 15" size. Value: Off, On</p>
<p>Media for Auto</p> <p>Select a default media type for auto paper selection when [Auto] is selected of Paper Selection. If [Plain] is selected, the paper source with plain paper loaded in the specific size is selected. Select [All Media Types] for the paper source with any kind of paper loaded in the specific size. Value: All Media Types, Plain, Transparency, Rough, Vellum, Labels, Recycled, Preprinted, Bond, Cardstock, Color, Prepunched, Letterhead, Envelope, Thick, High Quality, Custom 1-8</p>	
<p>Def. PaperSource</p> <p>Select paper cassette for default setting. Value: Cassette 1 to 4, MP Tray</p> <p> NOTE [Cassette 2], [Cassette 3] and [Cassette 4] are displayed when the optional paper feeder is installed.</p>	
<p>SpacialPaper Act.</p> <p>When printing on Prepunched, Preprint, and Letterhead, punch-holes might not be aligned or the print direction might be upside-down depending on how originals are set and the combination of copying functions. In such a case, select [Adj. PrintDirect] to adjust the print direction. When paper orientation is not important, select [Speed Priority].</p> <p>If [Adj. PrintDirect] is selected, load paper according to the steps below. Example: copying on Letterhead</p> <div style="display: flex; justify-content: space-around; align-items: flex-end;"> <div style="text-align: center;">  Original </div> <div style="text-align: center;">  Paper </div> <div style="text-align: center;">  Finishing </div> <div style="text-align: center;">  Cassette </div> <div style="text-align: center;">  MP Tray </div> </div> <div style="display: flex; justify-content: space-around; align-items: flex-end; margin-top: 10px;"> <div style="text-align: center;">  Original </div> <div style="text-align: center;">  Paper </div> <div style="text-align: center;">  Finishing </div> <div style="text-align: center;">  Cassette </div> <div style="text-align: center;">  MP Tray </div> </div> <p>Value: Adj. PrintDirect, Speed Priority</p>	

Cassette 1 (to 4) Set. (Cassette 1 (to 4) Settings)

Status/
System Menu/
Counter

▶ Common Settings ▶ Orig./Paper Set. ▶ **Cassette 1 (to 4) Set.**

To fix the type of paper to be used in cassettes 1 or the optional paper feeders (cassettes 2 to 4), specify the paper size and media type.

Item		Description
Cassette 1 (to 4) Set.	Cassette 1 (to 4) Size	Auto Paper size is automatically detected and selected. Value: Metric, inch
		Standard Size Available options are as follows: Value: A3, A4-R, A4, A5-R, B4, B5-R, B5, Folio, 216 × 340 mm, Ledger, Letter-R, Letter, Legal, Statement-R, Oficio II, 8K, 16K-R, 16K
	Cassette 1 (to 4) Type Select the media type. Value: Plain (52 to 105 g/m ²), Rough* ¹ , Vellum (52 to 105 g/m ²), Recycled, Preprinted* ² , Bond, Color, Prepunched* ² , Letterhead* ² , Thick (106 to 128 g/m ²)* ¹ , High Quality, Custom 1-8* ¹	

*1 To change to a media type other than [Plain], refer to [Media Type Set. on page 7-12](#). When the paper weight settings shown below are selected, the media indicated for each setting cannot be selected.
Plain, Preprinted, Recycled, Vellum, Rough, Letterhead, Color, Preprinted, High Quality: [Heavy 1], [Heavy 2] or [Extra Heavy]
Bond, Thick: [Heavy 2] or [Extra Heavy]
Custom 1 to 8: [Extra Heavy]

*2 To print on preprinted or prepunched paper or on letterhead, refer to [SpecialPaper Act. on page 7-13](#).


MP Tray Set. (MP Tray Settings)

Status/
System Menu/
Counter

▶ Common Settings ▶ Orig./Paper Set. ▶ **MP Tray Set.**

To fix the type of paper to be used in the multi purpose tray, specify the paper size.

Item		Description
MP Tray Set.	MP Tray Size	Standard Size Available options are as follows: Value: A3, A4-R, A4, A5-R, A6-R, B4, B5-R, B5, B6-R, Folio, 216 × 340 mm, Ledger, Letter-R, Letter, Legal, Statement-R, Executive, Oficio II, 8K, 16K-R, 16K, ISO B5, Envelope #10, Envelope #9, Envelope #6, Envelope Monarch, Envelope DL, Envelope C5, Envelope C4, Hagaki, Oufukuhagaki, Youkei 4, Youkei 2, Custom* ¹
		Size Entry Enter the size not included in the standard size. Value X: Width / Y: Length Metric X: 148 to 432 mm (in 1 mm increments) Y: 98 to 297 mm (in 1 mm increments) Inch X: 5.83 to 17.00" (in 0.01" increments) Y: 3.86 to 11.69" (in 0.01" increments)
	MP Tray Type* ² Select the media type. Value: Plain (52 to 105 g/m ²), Transparency, Rough, Vellum (52 to 105 g/m ²), Labels, Recycled, Preprinted* ³ , Bond, Cardstock, Color, Prepunched* ³ , Letterhead* ³ , Envelope, Thick (106 to 163 g/m ²), High Quality, Custom 1-8	

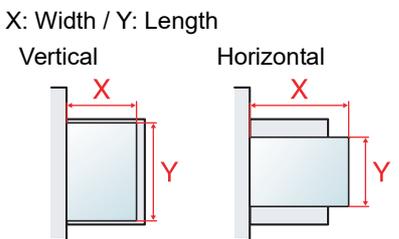

*1 For instructions on how to specify the custom paper size, refer to [Custom PaperSize on page 7-12](#).

*2 To change to a media type other than [Plain], refer to [Media Type Set. on page 7-12](#).

*3 To print on preprinted or prepunched paper or on letterhead, refer to [SpecialPaper Act. on page 7-13](#).

Media Type Set. (Media Type Settings)

Status/
System Menu/
Counter

 **Common Settings** **Orig./Paper Set.** **Media Type Set.**

The following settings can be selected. Y (default): Default setting, Y: Available, N: Not available

Paper Weight	Light	Normal 1	Normal 2	Normal 3	Heavy 1	Heavy 2	Extra Heavy
Weight (g/m²), Media Type	52 g/m ² to 59 g/m ²	60 g/m ² to 74 g/m ²	75 g/m ² to 90 g/m ²	91 g/m ² to 105 g/m ²	106 g/m ² to 128 g/m ²	129 g/m ² to 163 g/m ²	Transparencies
Plain	Y	Y	Y (default)	Y	N	N	N
Transparency	N	N	N	N	Y ^{*1}	Y ^{*1}	Y ^{*1} (default)
Rough	Y	Y	Y	Y (default)	Y ^{*1}	Y ^{*1}	N
Vellum	Y (default)	Y	Y	Y	N	N	N
Labels	Y ^{*1}	Y ^{*1}	Y ^{*1}	Y ^{*1}	Y ^{*1} (default)	Y ^{*1}	Y ^{*1}
Recycled	Y	Y	Y (default)	Y	N	N	N
Preprinted	Y	Y	Y (default)	Y	N	N	N
Bond	Y	Y	Y	Y (default)	Y	Y ^{*1}	N
Cardstock	N	N	N	N	Y ^{*1}	Y ^{*1} (default)	Y ^{*1}
Color	Y	Y	Y (default)	Y	N	N	N
Prepunched	Y	Y	Y (default)	Y	N	N	N
Letterhead	Y	Y	Y (default)	Y	N	N	N
Envelope	N	N	N	N	Y ^{*1}	Y ^{*1} (default)	Y ^{*1}
Thick	N	N	N	N	Y	Y ^{*1} (default)	Y ^{*1}
High Quality	Y	Y	Y (default)	Y	N	N	N
Custom 1-8	Y	Y	Y (default)	Y	Y	Y	Y ^{*1}

*1 The media type cannot be selected for the cassettes.

For Custom 1-8, settings for duplex printing and media type name can be changed.

Item		Description
Custom 1 (to 8)	Duplex	Select the setting for duplex. Value Prohibit: Duplex printing not allowed. Permit: Duplex printing allowed.
	Name	Change names for Custom 1-8. Names should be not more than 16 characters. Selecting media type at multi purpose tray, the name after change will be displayed.  Character Entry Method (page 10-4)

Preset Limit

Status/
System Menu/
Counter



Common Settings



Preset Limit

Item	Description
Preset Limit	Restrict the number of copies that can be made at one time. Value: 1 to 999 copies

Measurement

Status/
System Menu/
Counter



Common Settings



Measurement

Item	Description
Measurement	Select inch or metric for the unit for paper dimensions. Value: inch, mm

Error Handling

Status/
System Menu/
Counter



Common Settings



Error Handling

Item	Description
Error Handling	<p>DuplexPaperError</p> <p>Set what to do when duplex printing is not possible for the selected paper sizes and media types. Value 1-sided: Printed in 1-sided Display Error: Message to cancel printing is displayed.</p>
	<p>PaperMismatchErr</p> <p>Set what to do when the selected paper size or type does not match paper size or type loaded in the specified paper source while printing from the computer by specifying the cassette or multi-purpose tray. Value Ignore: The setting is ignored and the job is printed. Display Error: Message to cancel printing is displayed.</p>

Date Setting

Status/
System Menu/
Counter

▶ Common Settings

▶ Date Setting

Configure settings related to the date and time.

Item		Description
Date Setting	Date/Time	Set the date and time for the location where you use the machine. Value: Year (2000 to 2037), Month (01 to 12), Day (01 to 31), Hour (00 to 23), Minute (00 to 59), Second (00 to 59)  Setting Date and Time (page 2-13)
	Date Format	Select the display format of year, month, and date. The year is displayed in Western notation. Value: Month/Day/Year, Day/Month/Year, Year/Month/Day
	Time Zone	Set the time difference from GMT. Choose the nearest listed location from the list. If you select a region that utilizes summer time, configure settings for summer time.
	Summer Time	 Setting Date and Time (page 2-13)

Timer Setting

Status/
System Menu/
Counter

▶ Common Settings

▶ Timer Setting

Configure settings related to the time.

Item		Description
Timer Setting	Err. Clear Timer	If you select [On] for Auto Error Clear, set the amount of time to wait before automatically clearing errors. Value: 5 to 495 seconds (in 5 second increments)  NOTE This function is displayed when [Auto Err. Clear] is set to [On].
	Sleep Timer	Set amount of time before entering Sleep. Value For Europe: 1 to 60 minutes (1 minute increments) Except for Europe: 1 to 240 minutes (1 minute increments)  NOTE Refer to Sleep and Sleep Timer on page 2-20 for Sleep.
	PanelReset Timer	If you select [On] for Auto Panel Reset, set the amount of time to wait before Auto Panel Reset. Value: 5 to 495 seconds (in 5 second increments)  NOTE This function is displayed when [Auto Panel Reset] is set to [On].
	Interrupt Clear	Set the period after which the machine reverts to Normal mode when it has been set to Interrupt Copy mode and then left unused. Value: 5 to 495 seconds (in 5 second increments)

Item		Description
Timer Setting	Power Off Rule	Select whether to turn off the power automatically for the following function: <ul style="list-style-type: none"> FAX *1 USB Cable NIC *2 Value: Off, On
	Power Off Timer	Select whether to turn off the power automatically after a period of inactivity. Value: 1 hour, 2 hours, 3 hours, 4 hours, 5 hours, 6 hours, 9 hours, 12 hours, 1 day, 2 days, 3 days, 4 days, 5 days, 6 days, 1 week
	Auto Err. Clear	If an error occurs during processing, processing stops to wait for the next step to be taken by the user. In the Auto Error Clear mode, automatically clear the error after a set amount of time elapses. For details, refer to Responding to Messages on page 9-11 . Value: Off, On
	Auto Panel Reset	If no jobs are run for a certain period of time, automatically reset settings and return to the default setting. Select to use Auto Panel Reset or not. Value: Off, On  NOTE The time allowed to elapse before the panel is reset is set with the PanelReset Timer on page 7-17 .
	Unusable Time *1	For details, refer to the FAX Operation Guide .

*1 Displayed only when the optional FAX Kit is installed.

*2 Displayed only when the optional Network Interface Kit is installed.

Function Default



Set the defaults for the following functions.

Item		Description
Function Default	FAX Resolution *1	For details, refer to the FAX Operation Guide .
	Original Image	Set the default original document type. Value: Text+Photo, Photo, Text
	Zoom	Select the enlarged/reduced default when paper size/sending size changed after the originals set. Value: 100%, Auto
	Collate/Offset	Set the defaults for Collate/Offset. Value: Off, Collate Only, Offset Each Page, Offset Each Set
	Orig. Orientation	Set the original orientation defaults. Value: Top Edge on Top, Top Edge on Left

*1 Displayed only when the optional FAX Kit is installed.

Function Default	Item	Description												
	Border Erase	Set the default width to be erased as a border. Value Metric: 0 to 50 mm (in 1 mm increments) Inch: 0 to 2" (in 0.01" increments)  NOTE To specify border erase widths around original, set the value in [Border]. To specify border erase widths in the middle of original, set the value in [Gutter].												
	Margin	Set the default margin. Value Metric Left/Right: -18 to 18 mm (in 1 mm increments) Top/Bottom: -18 to 18 mm (in 1 mm increments) Inch Left/Right: -0.75 to 0.75" (in 0.01" increments) Top/Bottom: -0.75 to 0.75" (in 0.01" increments)												
	Backgrnd Density	Set the default Background Density (Copy). Value: Off, On												
	EcoPrint	Select the EcoPrint default. Value: Off, On												
	Auto Rotation	Select the default Auto Rotation setting. Value: Off, On												
	File Name Entry	Set an automatically entered name (default) for jobs. Additional information such as Date and Job No. can also be set. Value File Name Entry: Up to 32 characters can be entered. Additional Info.: None, Date, Job No., Job No. + Date, Date + Job No.												
	Continuous Scan	Set the continuous scan defaults. Value: Off, On												
	Detail Setting	Set the defaults for the following detail settings: <table border="1" data-bbox="320 1402 1501 1982"> <tbody> <tr> <td data-bbox="320 1402 547 1491">2 in 1 Layout</td> <td data-bbox="547 1402 1501 1491"> Set the default for the 2-in-1 layout of Combine copies. Value: L to R T to B, R to L </td> </tr> <tr> <td data-bbox="320 1491 547 1581">4 in 1 Layout</td> <td data-bbox="547 1491 1501 1581"> Set the default for the 4-in-1 layout of Combine copies. Value: Right then Down, Down then Right, Left then Down, Down then Left </td> </tr> <tr> <td data-bbox="320 1581 547 1671">Border Line</td> <td data-bbox="547 1581 1501 1671"> Set the default for the border line of Combine copies. Value: None, Solid Line, Dotted Line, Positioning Mark </td> </tr> <tr> <td data-bbox="320 1671 547 1783">Orig. Binding^{*1}</td> <td data-bbox="547 1671 1501 1783"> Set the default for the binding orientation of two-sided originals to produce two-sided copies. Value: Left/Right, Top </td> </tr> <tr> <td data-bbox="320 1783 547 1895">BookOrg. Binding</td> <td data-bbox="547 1783 1501 1895"> Set the default for the binding orientation of open book originals to produce two-sided copies. Value: Left, Right </td> </tr> <tr> <td data-bbox="320 1895 547 1982">Finish. Binding</td> <td data-bbox="547 1895 1501 1982"> Set the default for the binding orientation of finished two-sided copies. Value: Left/Right, Top </td> </tr> </tbody> </table>	2 in 1 Layout	Set the default for the 2-in-1 layout of Combine copies. Value: L to R T to B, R to L	4 in 1 Layout	Set the default for the 4-in-1 layout of Combine copies. Value: Right then Down, Down then Right, Left then Down, Down then Left	Border Line	Set the default for the border line of Combine copies. Value: None, Solid Line, Dotted Line, Positioning Mark	Orig. Binding^{*1}	Set the default for the binding orientation of two-sided originals to produce two-sided copies. Value: Left/Right, Top	BookOrg. Binding	Set the default for the binding orientation of open book originals to produce two-sided copies. Value: Left, Right	Finish. Binding	Set the default for the binding orientation of finished two-sided copies. Value: Left/Right, Top
2 in 1 Layout	Set the default for the 2-in-1 layout of Combine copies. Value: L to R T to B, R to L													
4 in 1 Layout	Set the default for the 4-in-1 layout of Combine copies. Value: Right then Down, Down then Right, Left then Down, Down then Left													
Border Line	Set the default for the border line of Combine copies. Value: None, Solid Line, Dotted Line, Positioning Mark													
Orig. Binding^{*1}	Set the default for the binding orientation of two-sided originals to produce two-sided copies. Value: Left/Right, Top													
BookOrg. Binding	Set the default for the binding orientation of open book originals to produce two-sided copies. Value: Left, Right													
Finish. Binding	Set the default for the binding orientation of finished two-sided copies. Value: Left/Right, Top													

*1 Displayed only when the optional document processor is installed.

Copy



Configure settings for copying functions.

Item		Description
Copy	Paper Selection	Set the default paper selection. Value: Auto, Def. PaperSource
	AutoPaperSelect.	If [Auto] is selected for Paper Selection, set the paper size selection method when the zoom changes. Value MostSuitableSize: Selects paper size based on the current zoom and the size of the original. Same as OrigSize: Selects paper that matches the size of the original, regardless the zoom.
	Auto % Priority	When a paper source of different size from the original is selected, select whether automatic zoom (reduce/zoom) is performed. Value: Off, On
	Select Key Set.	Commonly used copying functions can be registered to the Select key. Functions can be easily configured by pressing the Select key. Value: None, Paper Selection, Collate/Offset, Zoom, Original Size, Orig. Orientation, Mixed Size Orig.*1, EcoPrint, Backgrnd Density, Margin, Border Erase, Continuous Scan, Auto Rotation, File Name Entry

*1 The optional document processor is required.

Printer



When printing from computers, settings are generally made on the application software screen. However, the following settings are available for configuring the defaults to customize the machine.

Item		Description
Printer	FormFeed TimeOut	Receiving print data from the computer, the machine may sometimes wait if there is no information signaling that the last page does not have any more data to be printed. When the preset timeout passes, the machine automatically prints the document. The options are between 5 and 495 seconds. Value: 5 to 495 seconds

FAX



Configure settings for fax functions. For details, refer to the **FAX Operation Guide** *1.

*1 FAX is an option.

Edit Destination

Status/
System Menu/
Counter
 **Edit Destination**

Configure settings for Address Book. For details, refer to the **FAX Operation Guide**^{*1}.

*1 FAX is an option.

Adjust/Maint. (Adjustment/Maintenance)

Status/
System Menu/
Counter
 **Adjust/Maint.**

Adjust printing quality and conduct machine maintenance.

Item		Description
Adjust/ Maint.	Density Adj.	Adjust density.
	Copy	Adjust copy density. Adjustment can be made in 7 levels. Value: +3 Darker, +2, +1, 0 Normal, -1, -2, -3 Lighter
	Scan/FAX	Adjust scan density. Adjustment can be made in 7 levels. Value: +3 Darker, +2, +1, 0 Normal, -1, -2, -3 Lighter
	Backgrnd Density	Darkens or lightens overall background density adjustment.
	Copy	Darkens or lightens overall background density adjustment during copying. Adjustment can be made in 7 levels. Value: +3 Darker, +2, +1, 0 Normal, -1, -2, -3 Lighter
	Scan/FAX	Darkens or lightens overall background density when scanning images. Adjustment can be made in 7 levels. Value: +3 Darker, +2, +1, 0 Normal, -1, -2, -3 Lighter
	Print Density	Adjust print density. Adjustment can be made in 5 levels. Value: 5 (Darker), 4, 3, 2, 1 (Lighter)
	Correct. Bk Line	Correct fine lines (streaks caused by contamination), which may appear on the image, when the document processor is used. Value Off: No correction performed. On: Correction performed. The reproduction of fine lines on the original may become lighter than when using [Off].
	Service Setting	—
	Drum Refresh	Remove white lines from the image. Press the [OK] key and then press [Yes] to perform Drum Refresh.

Default Settings on the PC (KYOCERA Client Tool)

Various machine settings can be configured from a computer using KYOCERA Client Tool. Install KYOCERA Client Tool from the provided Product Library disc.



NOTE

For the detailed functions of KYOCERA Client Tool, refer to **KYOCERA Client Tool User Guide**.

Operation Method

Configure the settings on the KYOCERA Client Tool as follows:


- 1 Click [**Start**] button on the Windows and then select [**Kyocera**] and [**KYOCERA Client Tool**] to start KYOCERA Client Tool.



NOTE

In Windows 8.1, select [**Search**] in charms, [**Apps**], and then [**KYOCERA Client Tool**].


- 2 Select the desired tab.

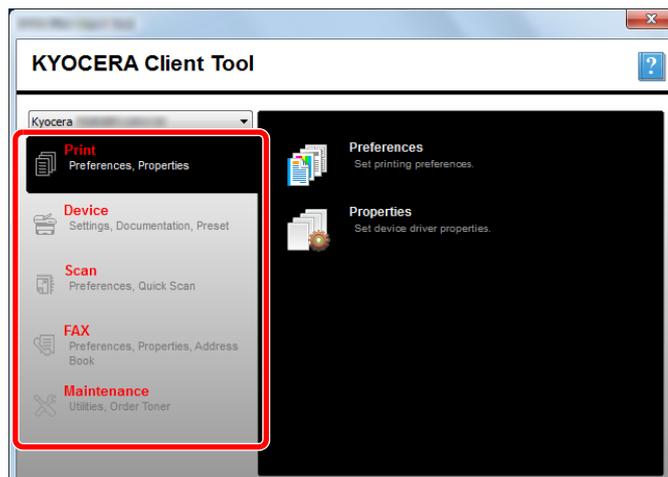

- 3 Configure the settings.

Screen Overview

The screen overview of the KYOCERA Client Tool is as follows.

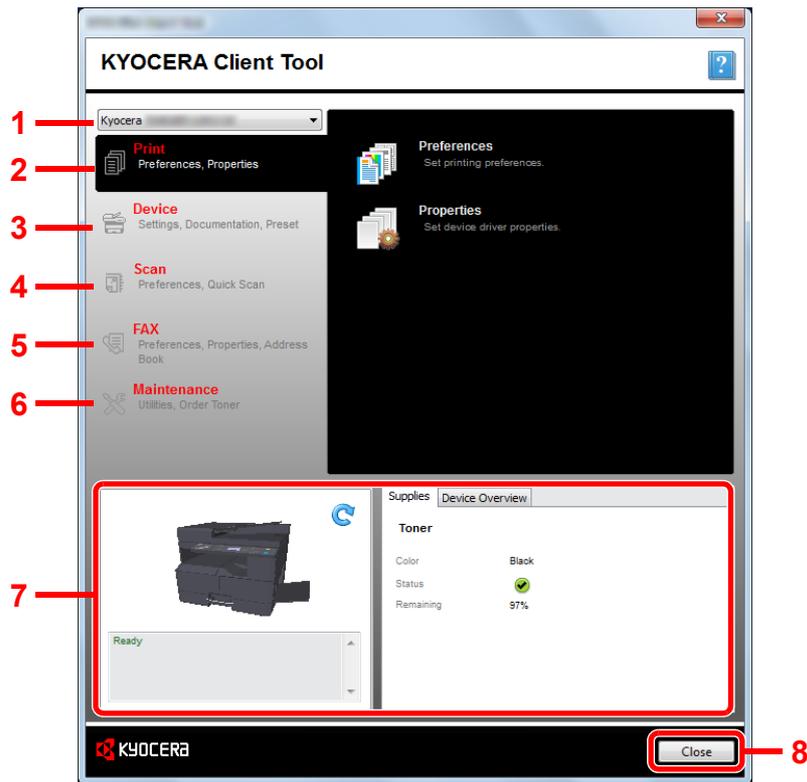

No.	Item	Description	Reference Page
1	Machine list	The list at the top of KYOCERA Client Tool screen includes all of the supported machines installed on your computer. You can select a machine from this list to view its properties and select available options, such as configuration, maintenance, and driver download.	—
2	Print	Access to printing preferences and machine driver properties.	—
	Preferences	Open the "Printing Preferences" screen for the selected machine.	—
	Properties	Open the "Properties" screen for the selected machine.	—
3	Device	Configure Status Monitor, Scan Destination, and Print Box settings.	—
	Configuration	Open the "Configuration" screen for the selected machine.	page 7-25
	Scan Destination	Configure the Scan Destination settings.	page 7-26
	Print Box Destination	Configure the Print Box settings.	page 7-32

No.	Item	Description	Reference Page
4	Scan	Configure TWAIN and Quick Scan settings. Scan to PDF, Scan to E-mail and Scan to Folder can also be executed from this tab.	—
	Preferences	Open "TWAIN Driver" screen. Set the default value for the TWAIN scan.	page 7-29
	Quick Scan Settings	Open "Quick Scan Settings" screen.	page 7-29
	Scan to PDF 	This is one of the Quick Scan function. Performing this function saves the scanned image in PDF format.	page 5-41
	Scan to E-mail 	This is one of the Quick Scan function. Performing this function attaches the scanned image to a new E-mail message.	page 5-41
	Scan to Folder 	This is one of the Quick Scan function. Performing this function saves the scanned image to a specified folder.	page 5-41
5	FAX^{*1}	Access to FAX settings.	Refer to FAX Operation Guide .
	Preferences	Open "FAX Printing Preferences" screen.	
	Properties	Open "FAX Properties" screen.	
6	Maintenance	Order replacement toner, view our web site, and download software.	—
	KYOCERA Net Viewer	Open KYOCERA Net Viewer.	Refer to KYOCERA Net Viewer User Guide .
	Order Toner 	You can order replacement toner by e-mail or on the web. Click the [Order Toner] icon for these options: <ul style="list-style-type: none"> Send e-mail Use the default e-mail address or type another e-mail address and then click [OK] to open your default e-mail program. Open Web page Use the default web address or type another web address and then click [OK] to open the web page in your default web browser. 	—
	Kyocera Online 	Open our website.	—
	Driver Download 	Click to open the download page of our website. You can download software and find an authorized dealer.	—
7	Machine status	You can check the current status of the machine.	page 6-14
8	Close	Exit from KYOCERA Client Tool.	—

*1 Displayed only when the optional FAX Kit is installed.

Configuring the Administrative Settings

Configure the administrative settings on [[Configuration](#)] of the [[Device](#)] tab.

Configure screen has the followings tabs.

- [[Device Defaults](#)] tab: Select inches or millimeters as the unit of measurement for page sizes, watermark, poster, and gutter settings in the printer driver.
- [[Communication](#)] tab: Enter the Read community and Write community up to 16 characters. The default community is public. If the computer is not connected, you can still type Read community and Write community settings.
- [[Status Monitor](#)] tab: Select toner level alert and event notification settings for the Status Monitor. The Status Monitor displays device status messages.

Item	Description
Set toner level alert	Select to create an alert when the toner starts running low, and then select a percentage between 0 and 100. If the toner level goes below this percentage, an alert icon is displayed on the [Supplies] tab at the bottom of KYOCERA Client Tool screen.
Enable event notification	Select to activate the notification feature for selected machine events. When selected, notification options are available.
Enable pop-up notification	When selected, a pop-up message appears in the lower right corner of the screen for each selected event as it occurs.
Events list	Select one or more events for the notification. To select all events, select [Events].
Sound file	With one or more events selected, select to enable sound notification. Type the location of a sound file (.WAV), or click [Browse] to find a sound file located on your computer. You can press the arrow button to hear the selected sound.
Use Text to Speech	With one or more events selected, select and type your preferred text. The Microsoft Text to Speech utility reads the text and plays it in a spoken voice. You can press the arrow button to hear the selected text.

Scan Destination Settings

Configure the Scan Destination settings on [Scan Destination] of the [Device] tab.

✔ IMPORTANT

To reflect settings in the machine, the [Reset] key on the operation panel of the machine needs to be pressed.

💡 NOTE

Scan, Print Box, and device monitoring will be disabled while the [Scan] window is open.


Item	Description
Destination number	Select the destination number (1 to 30) to be registered. When a destination number is selected, the settings registered in that number appear in the right-hand screen.
Summary	Shows a list of the settings of the selected program.
Display name	Set a name for the destination. Up to 16 characters can be entered. This name is displayed when you select a destination on the machine operation panel.
Connection Settings	Select the interface used to connect with the machine. When connecting the machine to the PC on the network, configure the host name or IP address of the PC in use.*1 Refer to When Connecting the Machine to the PC on the Network on page 2-41 .
Original size	Specify the size of originals being scanned. Value: Auto, A3, A4, A5, A6, B4, B5 (JIS), B6, Folio, 216 × 340 mm, Ledger, Letter, Legal, Statement, 11 × 15", Oficio II, 8K, 16K, Hagaki, Ofuku Hagaki, Custom 💡 NOTE Refer to Custom Orig.Size on page 7-12 for selecting [Custom].
Original image	Select image quality suited to the type of original. Value:    Text + Photo Photo Text
Duplex*2	Set duplex of original. Value:    Off Binding left/right Binding top
Original orientation	Select the orientation of the original document top edge to scan correct direction. Value:     Portrait Portrait Landscape Landscape Top edge top Top edge left Top edge top Top edge left
Sharpen	Adjust the sharpness of the image. Value: None, Low, Medium, High, Descreen (Blurs the outlines and reduces the sharpness.)
Scan color	Select the color mode setting. Value: Monochrome, Grayscale, Full color

*1 The optional Network Interface Kit is required.

*2 The optional document processor is required.

Item	Description
Density	Select the density. Value: Lighter (-3), Lighter (-2), Lighter (-1), Normal (0), Darker (+1), Darker (+2), Darker (+3) To automatically set the density depending on the density of originals, select the [Auto] checkbox. (This item can be set only if [Monochrome] is set for Scan color.)
Resolution	Select fineness of scanning resolution. Value:  200×200 dpi  300×300 dpi  400×400 dpi  600×600 dpi  NOTE [400×400dpi] and [600×600dpi] can be set only if [Monochrome] is set for Scan color.
Reverse image	When this is selected, the image color reverses.
File name	Assign a document name to scanned images. When there are multiple pages, a three-digit incrementing number such as Scan_001, Scan_002... is appended to the end of the file name. Up to 16 characters can be entered.
File format	Specify the image file format. Value: BMP, JPEG, PNG, TIFF, PDF, "High Compression PDF, CCITT Group 4, Image Mask", "High Compression PDF, JBIG2, Mask +Image Mask"
File format settings (The item displayed changes depending on the value specified for File format.)	
Quality	Set the image quality. Increasing the number results in higher quality and decreasing the number results in lower quality. Higher quality will make the stored files larger. Value: 1 to 100  NOTE <ul style="list-style-type: none"> This setting is valid for PDF, TIFF, and JPEG file formats. Non-numeric characters cannot be entered. If entered number is beyond range, the max/min value will be restored.
PDF/A-1	Set PDF/A-1 format type. Value: Off, PDF/A-1a, PDF/A-1b
High Compression PDF Quality	Set the quality level for High Compression PDF. Value: Standard, Compression Ratio Priority, Quality Priority
File separation ^{*1}	When this is selected, scanned data is separated into files page by page.

*1 The optional document processor is required.

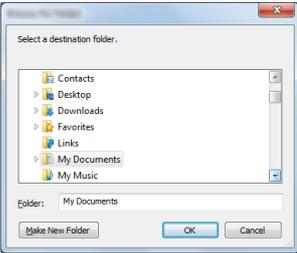
Item	Description
<p>Destination folder</p>	<p>Specified folder where the scanned image will be saved. To select the folder, click [Browse] to open "Browse for Folder".</p>  <p>The default settings are shown below: C:\Users\<user>\documents< p=""> </user>\documents<></p>
<p>Reset</p>	<p>Reset the destination to default values.</p>
<p>Save</p>	<p>Save your settings.</p>

Quick Scan/TWAIN Settings

Configure the Quick Scan/TWAIN settings on [Preferences] or [Quick Scan Settings] of the [Scan] tab.

Item	Description
Preferences	Change the TWAIN scan settings. This setting is effective for Quick Scan only.
Quick Scan Settings	Change the settings for Scan to PDF, Scan to E-mail and Scan to Folder.

TWAIN Settings

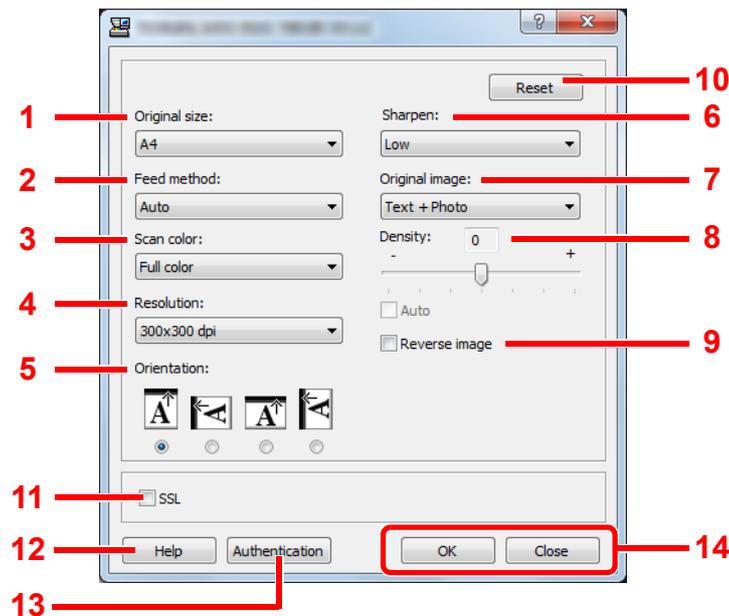


No.	Item	Description
1	Original size	Specify the size of originals being scanned. Value: Auto, A3, A4, A5, A6, B4, B5 (JIS), B6, Folio, 216 × 340 mm, Ledger, Letter, Legal, Statement, 11 × 15", Oficio II, 8K, 16K, Hagaki, Oufukuhagaki, Custom NOTE Refer to Custom Orig. Size on page 7-12 for selecting [Custom].
2	Feed method*1	Select the original feed method. Value: Auto, Document Processor, Platen, 2-sided (Binding Top), 2-sided (Binding Left/Right)
3	Scan color	Select the color mode setting. Value: Monochrome, Grayscale, Full color
4	Resolution	Select fineness of scanning resolution. Value: 200 × 200 dpi, 300 × 300 dpi, 400 × 400 dpi, 600 × 600 dpi NOTE [400×400dpi] and [600×600dpi] can be set only if [Monochrome] is set for Scan color.
5	Orientation	Select the Orientation of the original document top edge to scan correct direction. Value: Portrait (Top Edge Top), Portrait (Top Edge Left), Landscape (Top Edge Top), Landscape (Top Edge Left)
6	Sharpen	Adjust the sharpness of the image. Value: None, Low, Medium, High, Descreen (Blurs the outlines and reduces the sharpness.)

*1 The optional document processor is required.

No.	Item	Description
7	Original image	Select original image type. Value: Text, Photo, Text+Photo
8	Destiny	Select the density. Value: -3 (Lighter) to 3 (Darker) To automatically set the density depending on the density of originals, select the [Auto] checkbox. (This item can be set only if [Monochrome] is set for Scan color.)
9	Reverse image	When this is selected, the image color reverses.
10	Reset	Reset the settings to the previous settings.
11	SSL^{*1}	Select whether to use SSL.
12	Help	Displays the Help screen.
13	Authentication	Enter assigned account ID to manage the scan count accumulated of Quick Scan/TWAIN jobs by using job accounting.
14	OK/Close	Clicking [OK] exits the TWAIN Settings after applying the modified scan settings. Clicking [Close] exits the TWAIN Settings without applying the modified scan settings.

*1 Displayed only when the optional Network Interface Kit is installed.

Quick Scan Settings

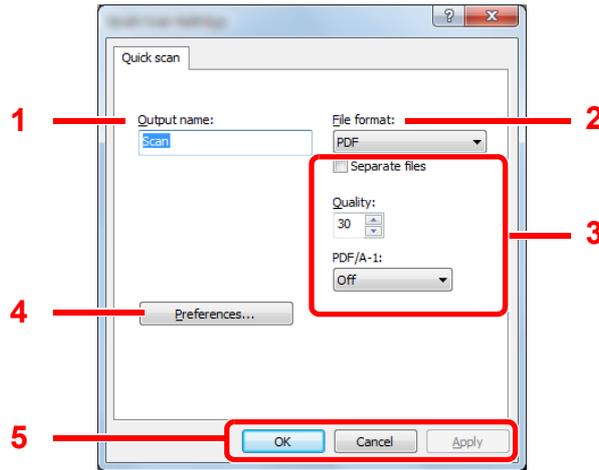

No.	Item	Description
1	Output name	Assign a document name to scanned images. When multiple images are saved in the same folder, a three-digit incrementing number such as Scan_001, Scan_002... is appended to the end of the file name. Up to 16 characters can be entered.
2	File format	Specify the image file format. Value: BMP, JPEG, PNG, TIFF, PDF, "High Compression PDF, CCITT Group 4, Image Mask", "High Compression PDF, JBIG2, Mask +Image Mask"
3	File format settings (The item displayed changes depending on the value specified for File format.)	
	Separate files	When this is selected, scanned data is separated into files page by page.
	Quality	Set the image quality. Increasing the number results in higher quality and decreasing the number results in lower quality. Higher quality will make the stored files larger. Value: 1 to 100  NOTE <ul style="list-style-type: none">This setting is valid for PDF, TIFF, and JPEG file formats.Non-numeric characters cannot be entered. If entered number is beyond range, the max/min value will be restored.
	PDF/A-1	Set PDF/A-1 format type. Value: Off, PDF/A-1a, PDF/A-1b
	Quality Stage	Set the quality level for High Compression PDF. Value: Standard, Compression Ratio Priority, Quality Priority
4	Preferences	Displays the TWAIN settings screen. For detail, refer to TWAIN Settings on page 7-29 .
5	OK/Cancel/Apply	Clicking [OK] exits the Quick Scan Settings after applying the modified scan settings. Clicking [Cancel] exits the Quick Scan Settings without applying the modified scan settings. Clicking [Apply] applies the modified scan settings without exiting the Quick Scan Settings.

Print Box Settings

Configure the Print Box settings on [[Print Box Destination](#)] of the [[Device](#)] tab.
A maximum of 30 Print Boxes can be created.

IMPORTANT

- When sending a print job from the Client PC via a network, Box, Destination folder and PIN Code set by KYOCERA Client Tool need to be assigned to each Client PC.
- To reflect settings in the machine, the [[Reset](#)] key on the operation panel of the machine needs to be pressed.

NOTE

Scan, Print Box, and device monitoring will be disabled while the [[Print Box](#)] window is open.

Item	Description
Box number	Select the box number (1 to 30) to be registered. When a box number is selected, the settings registered in that number appear in the right-hand screen.
Summary	Shows a list of the settings of the selected box.
Name	Set a name for the Print Box. Up to 16 characters can be entered. This name is displayed when you select a Print Box on the machine operation panel.  NOTE If a document is stored in the box for which no Box name is set, printing from the box is not available.
PIN Code	With a PIN code assigned to the Print Box, executing the print jobs in the Print Box from the machine requires entry of the PIN code, thereby restricting user access to the print jobs. Since third parties who do not know the PIN cannot print, security is enhanced. (Entering a password is not mandatory.) Select the checkbox to assign a PIN code to and enter a 4-digit numeric value.
Connection Settings	Select the interface used to connect with the machine. When connecting the machine to the PC on the network, configure the host name or IP address of the PC in use.*1 Refer to When Connecting the Machine to the PC on the Network on page 2-37 .
Destination folder	Specify the path for the folder to be used as the Print Box. To select the folder, click [Browse] to open "Browse for Folder".  IMPORTANT No folder can be created in a machine other than the PC in use.
Reset	Reset the Print Box to default values.
Save	Save your settings.

*1 The optional Network Interface Kit is required.

8 Job Accounting




This chapter explains the following topics:

Overview of Job Accounting	8-2
To manage the job account from PC	8-2
Enabling Job Accounting	8-4
Setting an Account	8-5
Adding an Account	8-5
Restricting the Use of the Machine	8-7
Editing an Account	8-8
Deleting an Account	8-9
Job Accounting when Sharing the Printer	8-10
Job Accounting for Network Printing	8-12
Job Accounting for Scan Using Quick Scan/TWAIN	8-13
Job Accounting for Scan Using WIA	8-14
Job Accounting for the FAX Transmitted from a PC	8-15
Unknown ID Job	8-16
Configuring Job Accounting	8-17
Default Setting	8-17
Counting the Number of Pages Printed	8-19
Account. Report (Accounting Report)	8-20
Using Job Accounting	8-22
Login/Logout	8-22
Password Protect Administrator Settings	8-22

Overview of Job Accounting

Job accounting manages the copy/print/scan/FAX count accumulated by individual accounts by assigning an ID to each account.

- 1** Enable job accounting. (Refer to [page 8-4.](#))
- 2** Setting an account. (Refer to [page 8-5.](#))
- 3** Enter the assigned account ID when performing the job. (Refer to [Using Job Accounting on page 8-22.](#))
- 4** Count the number of pages copied, printed, scanned and faxed.

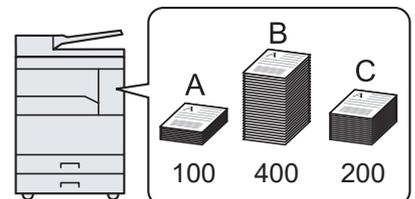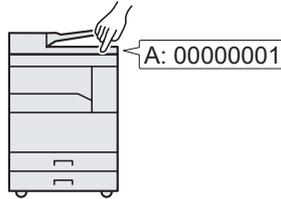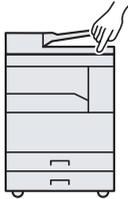


To manage the job account from PC

In addition to the above settings, the following are necessary to manage the job account from PC.

When Using the Machine as the Shared Printer

To manage the print job account by using the machine as the shared printer, you need to configure the printer settings on the computer (Host PC) connected to the machine via USB.

- 1** Set the job accounting of the shared printer by using the Host PC. (Refer to [Job Accounting when Sharing the Printer on page 8-10.](#))
- 2** Enter the Account ID from the Client PC and execute printing. (Refer to [Password Protect Administrator Settings on page 8-22.](#))
- 3** Count the number of pages printed.

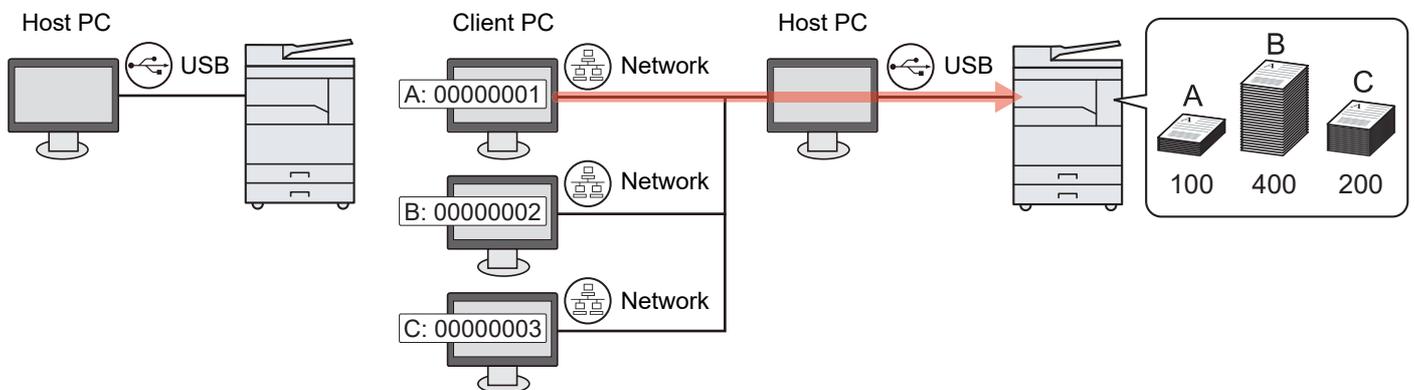


NOTE

When using the machine as a shared printer, settings must be made for the shared printer. Refer to [Setting the Shared Printer and FAX on page 2-33.](#)

When Using the Machine as a Network Printer ^{*1}

To manage the number of jobs to be printed from the PC on the network, you need to configure settings by using the printer driver on the PC.

- 1** Set Job Accounting for the PC on the network by using the printer driver.
(Refer to [Job Accounting for Network Printing on page 8-12.](#))
- 2** Execute printing.
- 3** Count the number of pages printed.

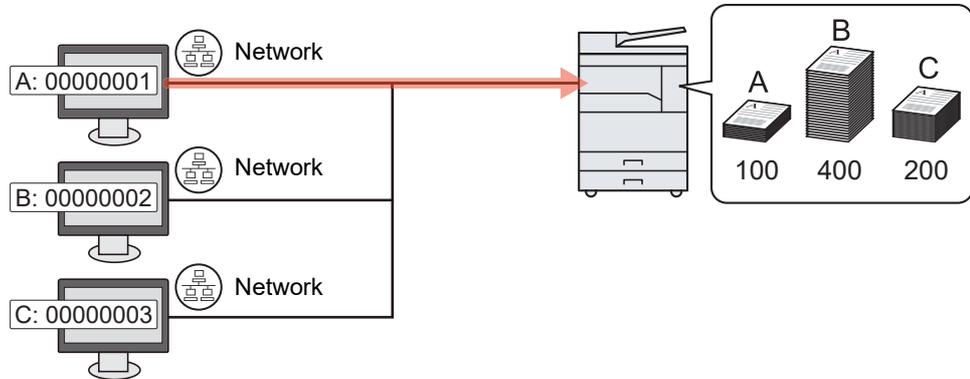

*1 The optional Network Interface Kit is required.

To Manage the Scan Job Account by Using Quick Scan/TWAIN

To manage the scan job account by using Quick Scan or TWAIN, you need to configure KYOCERA Client Tool settings on the computer connected to the machine. (Refer to [Job Accounting for Scan Using Quick Scan/TWAIN on page 8-13.](#))

To Manage the Scan Job Account by Using WIA

To manage the scan job account by using WIA, you need to configure the WIA driver settings on the computer (Host PC) connected to the machine via USB. (Refer to [Job Accounting for Scan Using WIA on page 8-14.](#))

To Manage the FAX Job Transmitted from a PC ^{*2}

To manage the number of FAX jobs transmitted from the PC, you need to configure the settings by using the FAX Driver on the PC. (Refer to [Job Accounting for the FAX Transmitted from a PC on page 8-15.](#))

*2 The optional FAX Kit is required.

Enabling Job Accounting

Enable job accounting. Use the procedure below.


1 Display the screen.

- 1 Press the [**Status/System Menu/Counter**] key.

Status/
System Menu/
Counter



- 2 Press the [**▲**] or [**▼**] key to select [Admin/Accounting], and press the [**OK**] key.

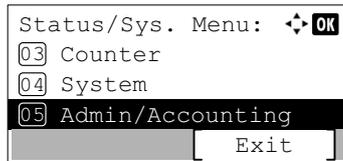

NOTE

If the login user name entry screen appears during operations, log in by referring to [Administrator User Name and Password on page 2-10](#).

The factory default login user name and login password are set as shown below.

Login User Name	Login Password
Admin*1	Admin*1

*1 Upper case and lower case letters are distinguished (case sensitive).

- 3 Press the [**▲**] or [**▼**] key to select [Job Account.Set.], and press the [**OK**] key.

2 Enable job accounting.

- 1 Press the [**▲**] or [**▼**] key to select [Job Accounting], and press the [**OK**] key.
- 2 Press the [**▲**] or [**▼**] key to select [On], and press the [**OK**] key.

NOTE

- To disable job accounting, select [Off].
- If job accounting setting is completed by selecting other function keys, such as the [**Copy**] key, a logout is automatically executed and the screen to enter the Account ID appears. To continue the operation, enter the Account ID.

Setting an Account

You can add, change and delete an account and set the restriction for each account.

Adding an Account

Up to 30 individual accounts can be added. The following entries are required.

Item	Descriptions
Account Name	Enter the account name (up to 32 characters).
Account ID	Enter the account ID as many as eight digits (between 0 and 99999999).
Restriction	This prohibits printing/scanning or restricts the number of sheets to load. Refer to Restricting the Use of the Machine on page 8-7 .

1 Display the screen.

- 1 Press the [**Status/System Menu/Counter**] key.

Status/
System Menu/
Counter



- 2 Press the [**▲**] or [**▼**] key to select [Admin/Accounting], and press the [**OK**] key.

```

Status/Sys. Menu:  ↵ OK
03 Counter
04 System
05 Admin/Accounting
Exit
  
```



NOTE

If the login user name entry screen appears during operations, log in by referring to [Administrator User Name and Password on page 2-10](#).

The factory default login user name and login password are set as shown below.

Login User Name	Login Password
Admin*1	Admin*1

*1 Upper case and lower case letters are distinguished (case sensitive).

- 3 Press the [**▲**] or [**▼**] key to select [Job Account.Set.], and press the [**OK**] key.
- 4 Press the [**▲**] or [**▼**] key to select [Account. List], and press the [**OK**] key.

```

Job Account.Set.:  ↵ OK
03 Total Accounting
04 Each Job Account
05 Account. List
Exit
  
```

- 5 Press [Menu].

- 6 Press the [▲] or [▼] key to select [Add Account], and press the [OK] key.

2 Enter the account information.

- 1 Enter the account name and press the [OK] key.



NOTE

Refer to [Entering Characters on page 10-6](#) for details on entering characters.

- 2 Enter the account ID and press the [OK] key.



NOTE

Any "Account ID" that has already registered cannot be used. Enter any other account ID.

- 3 To apply restriction to the account ID, press the [▲] or [▼] key to select [Detail] and press the [OK] key.
To exit the operation, press the [▲] or [▼] key to select [Exit] and press the [OK] key.



[Restricting the Use of the Machine \(page 8-7\)](#)

Restricting the Use of the Machine

This section explains how to restrict the use of the machine by account or the number of sheets available. The items that can be restricted differ depending on whether [Split] or [Total] is selected for [Copy/Print Count on page 8-17](#). Press [Edit] to change the restrictions.

- [Split] selected for Copy/Printer Count

Item	Descriptions
Print Restrict.Copier	Limits the number of sheets used for copying. Value Off: No restriction is applied. Counter Limit: Restricts the counter in one-page increments up to 9,999,999 copies. *1 Reject Usage: Restriction is applied.
Print Restrict.	Limits the number of sheets used for printing. Value Off: No restriction is applied. Counter Limit: Restricts the counter in one-page increments up to 9,999,999 copies. *1 Reject Usage: Restriction is applied.
Scan Restrict.	Limits the number of sheets scanned (excludes copying). Value Off: No restriction is applied. Counter Limit: Restricts the counter in one-page increments up to 9,999,999 copies. *1 Reject Usage: Restriction is applied.
FAX TX Restrict	Limits the number of sheets sent by fax. This is displayed when the optional FAX Kit is installed. Value Off: No restriction is applied. Counter Limit: Restricts the counter in one-page increments up to 9,999,999 copies. *1 Reject Usage: Restriction is applied.

- [Total] selected for Copy/Printer Count

Item	Descriptions
Print Restrict.	Limits the total number of sheets used for copying and printing. Value Off: No restriction is applied. Counter Limit: Restricts the counter in one-page increments up to 9,999,999 copies. *1 Reject Usage: Restriction is applied.
Scan Restrict.	Limits the number of sheets scanned (excludes copying). Value Off: No restriction is applied. Counter Limit: Restricts the counter in one-page increments up to 9,999,999 copies. 1 Reject Usage: Restriction is applied.
FAX TX Restrict	Limits the number of sheets sent by fax. This is displayed when the optional FAX Kit is installed. Value Off: No restriction is applied. Counter Limit: Restricts the counter in one-page increments up to 9,999,999 copies. 1 Reject Usage: Restriction is applied.

*1 If [Counter Limit] is selected, the [Limit Pages] screen appears after the [OK] key is pressed. Enter a counter limit on pages using the numeric keys, and press the [OK] key.

Editing an Account

This changes the registered account information.

1 Display the screen.

- 1 Press the [Status/System Menu/Counter] key.

Status/
System Menu/
Counter



- 2 Press the [▲] or [▼] key to select [Admin/Accounting], and press the [OK] key.

Status/Sys. Menu:	↔ OK
03 Counter	
04 System	
05 Admin/Accounting	
	Exit



NOTE

If the login user name entry screen appears during operations, log in by referring to [Administrator User Name and Password on page 2-10](#).

The factory default login user name and login password are set as shown below.

Login User Name	Login Password
Admin*1	Admin*1

*1 Upper case and lower case letters are distinguished (case sensitive).

- 3 Press the [▲] or [▼] key to select [Job Account.Set.], and press the [OK] key.
- 4 Press the [▲] or [▼] key to select [Account. List], and press the [OK] key.

2 Change account information.

- 1 Press the [▲] or [▼] key to select the account you want to change and press the [OK] key.

Account. List:	↔ OK
01 Account	
02 Account	
03 Account	
	Menu



NOTE

The account information can be changed by pressing [Menu], selecting [Detail/Edit] and then pressing the [OK] key.

- 2 Press the [▶] or [◀] key to select the item you want to change and press [Edit].
- 3 Refer to step 2 of [Adding an Account on page 8-5](#) and [Restricting the Use of the Machine on page 8-7](#) to change account information.

Deleting an Account

This deletes the account.


1 Display the screen.

- 1 Press the [Status/System Menu/Counter] key.

Status/
System Menu/
Counter



- 2 Press the [▲] or [▼] key to select [Admin/Accounting], and press the [OK] key.

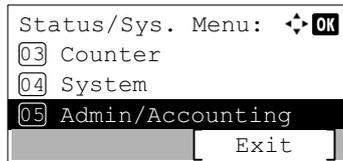

NOTE

If the login user name entry screen appears during operations, log in by referring to [Administrator User Name and Password on page 2-10](#).

The factory default login user name and login password are set as shown below.

Login User Name	Login Password
Admin*1	Admin*1

*1 Upper case and lower case letters are distinguished (case sensitive).

- 3 Press the [▲] or [▼] key to select [Job Account.Set.], and press the [OK] key.
- 4 Press the [▲] or [▼] key to select [Account. List], and press the [OK] key.

2 Delete an account.

- 1 Press the [▲] or [▼] key to select the account you want to delete and press [Menu].
- 2 Press the [▲] or [▼] key to select [Delete], and press the [OK] key.
- 3 Press [Yes] in confirmation screen.

The account is deleted.

Job Accounting when Sharing the Printer

When using the machine as the shared printer, printing from the computer (Client PC) on the network can be managed with job accounting by configuring job accounting for the computer (Host PC) connected to the machine via USB.

Settings when Sharing the Printer

When using the machine as a shared printer and managing the printing from the Client PC by using job accounting, configure the Host PC as follows.

1 Display the screen.

- 1 Click [**Start**] button on the Windows and then select [**Windows System**], [**Control Panel**], and [**View devices and printers**].


NOTE

In Windows 8.1, select [**Settings**] in charms on Desktop, and select [**Control Panel**], and then [**Devices and Printers**].

- 2 Right-click the printer driver icon of the machine, and click the [**Printer properties**] menu of the printer driver.
- 3 Click [**Administrator**] on the [**Device Settings**] tab.

2 Configure the settings.

- 1 Select [**Password protect administrator settings**] on the [**General**] tab. The "Password" window appears.

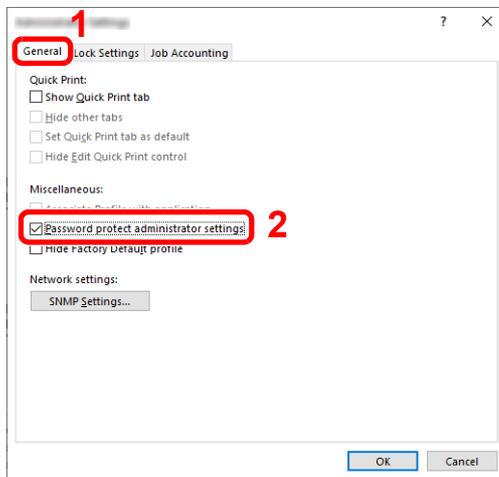

- 2 Enter the same password (optional) in [**Password**] and [**Confirm password**], and then click [**OK**].



The password is required for opening the Administrator Settings window.

- 3 Select [Job accounting] and [Prompt for account ID] on the [Job Accounting] tab.

The screenshot shows a dialog box with tabs: General, Lock Settings, User Log, and Job Accounting. The Job Accounting tab is selected. The 'Job accounting' checkbox is checked. Below it, the 'Prompt for account ID' radio button is selected. A table titled 'Account IDs:' is empty. To the right of the table are buttons: Retrieve..., Add..., Delete, Edit..., Import..., and Export... At the bottom, there are three radio buttons: 'Prompt for account ID and validate', 'Display account ID list', and 'Validate user name (computer) or prompt for account ID'.

1: Job Accounting tab
2: Job accounting checkbox
3: Prompt for account ID radio button

- 4 Click [OK].



NOTE

- If [Prompt for account ID] is set, the screen for entering the Account ID appears when printing from the Client PC. When printing from the Client PC, refer to [Password Protect Administrator Settings on page 8-22](#).
- For other settings of job accounting, refer to **Printer Driver User Guide**.

Job Accounting for Network Printing

The number of jobs to be printed from the PC on the network can be managed by Job Accounting.

NOTE

The optional Network Interface Kit is required.

Setting Printer Driver

To manage the number of jobs to be printed from the PC on the network, you need configure the following settings by using the printer driver on the PC.

1 Display the screen.

- 1 Click [**Start**] button on the Windows and then select [**Windows System**], [**Control Panel**], and [**View devices and printers**].


NOTE

In Windows 8.1, select [**Settings**] in charms on Desktop, and select [**Control Panel**], and then [**Devices and Printers**].

- 2 Right-click the printer driver icon of the machine, and click the [**Printer properties**] menu of the printer driver.
- 3 Click [**Administrator**] on the [**Device Settings**] tab.

2 Configure the settings.

- 1 Select [**Job accounting**] on the [**Job Accounting**] tab.

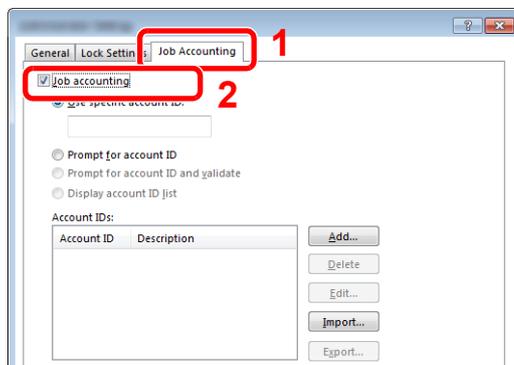

- 2 Set the Account ID.

[Use specific account ID]: Enter the Account ID. Printing will be performed using the entered Account ID.

[Prompt for account ID]: A screen for entering the Account ID will be displayed when attempting a printing. The Account ID must be entered each time a printing is attempted.

[Prompt for account ID and validate]: A screen for entering the Account ID will be displayed when attempting a printing. The Account ID stored in the Account ID list needs to be entered. The Account ID must be entered each time a printing is attempted.

[Display account ID list]: The Account ID list is displayed when printing. The Account ID to be used needs to be selected from the list.

- 3 Click [**OK**].

NOTE

For other settings of job accounting, refer to **Printer Driver User Guide**.

Job Accounting for Scan Using Quick Scan/TWAIN

The number of jobs scanned by using Quick Scan/TWAIN can be managed by Job Accounting.

Setting TWAIN Driver

To manage the number of jobs scanned by using Quick Scan/TWAIN, you need to configure the following settings by using the TWAIN Driver on the PC connected to the machine.


1 Display the screen.

- 1 Click **[Start]** button on the Windows and then select **[Kyocera]** and **[KYOCERA Client Tool]** to start KYOCERA Client Tool.

NOTE


In Windows 8.1, select **[Search]** in charms, **[Apps]**, and then **[KYOCERA Client Tool]**.

- 2 Select **[Preferences]** of the **[Scan]** tab.

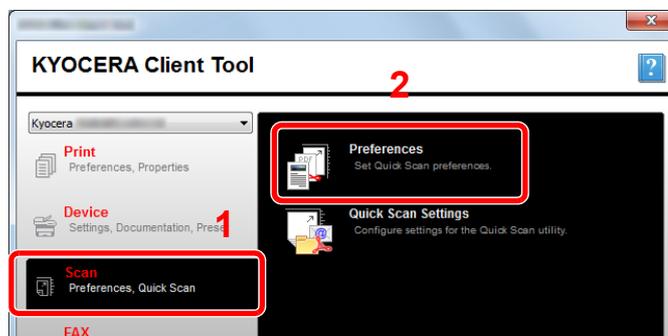


2 Configure TWAIN Driver.

- 1 Click **[Authentication]**.

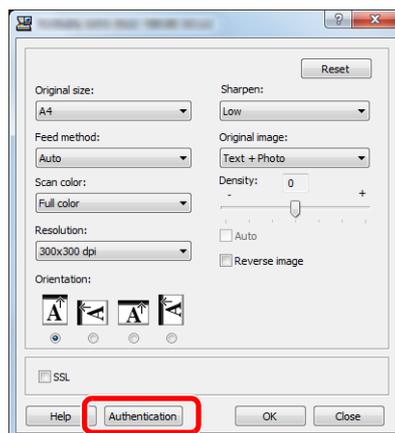

- 2 Select the checkbox beside **[Account ID]**, and enter the Account ID containing as many as eight digits.

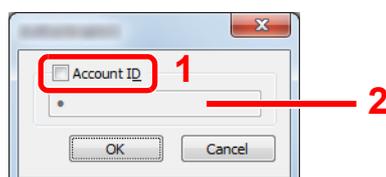

- 3 Click **[OK]**.

Job Accounting for Scan Using WIA

The number of jobs scanned by using WIA can be managed by Job Accounting.

Setting WIA Driver

To manage the number of jobs scanned by using WIA, you need to configure the following settings by using the WIA Driver on the PC (Host PC) connected to the machine via USB.


1 Display the screen.

- 1 Click [**Start**] button on the Windows and then select [**Windows System**], [**Control Panel**], and [**View devices and printers**].

NOTE


In Windows 8.1, click [**Search**] in charms, and then [**Settings**], and enter "Scanner" in the search box. Click [**View scanners and cameras**] in the search list then the Scanners and Cameras screen appears.

- 2 Select the same name as this machine from WIA Drivers, and press [**Properties**].

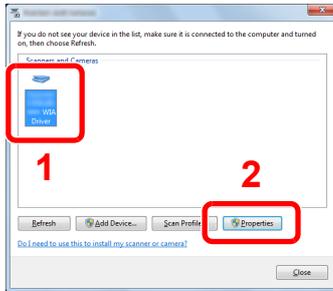

2 Configure WIA Driver.

- 1 Select the checkbox beside [**Account ID**] on the [**Settings**] tab, and enter the Account ID containing as many as eight digits.

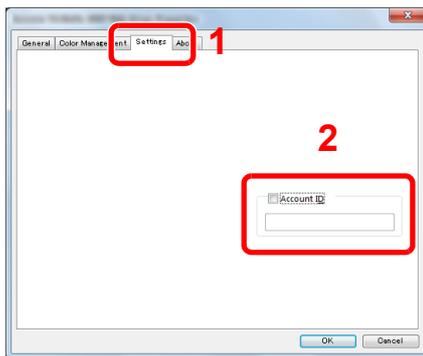

- 2 Click [**OK**].

Job Accounting for the FAX Transmitted from a PC

The number of FAX jobs transmitted from the PC can be managed by Job Accounting.

NOTE

The optional FAX Kit is required.

Setting FAX Driver

To manage the number of FAX jobs transmitted from the PC, you need to configure the following settings by using the FAX Driver on the PC.

1 Display the screen.

- 1 Click **[Start]** button on the Windows and then select **[Windows System]**, **[Control Panel]**, and **[View devices and printers]**.


NOTE

In Windows 8.1, select **[Settings]** in charms on Desktop, and select **[Control Panel]**, and then **[Devices and Printers]**.

- 2 Right click the name of the machine to be used as the FAX Driver and select **[Printing preferences]** from the resulting pull-down menu. Click **[FAX TX Setting]** in the **[Printing Preferences]** window.

2 Configure the settings.

- 1 Select **[Job Accounting]** on the **[Authentication]** tab.

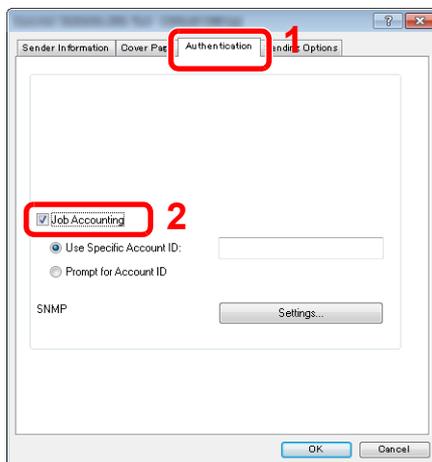

- 2 Select either **[Use Specific Account ID]** or **[Prompt for Account ID]** as desired.

[Use Specific Account ID]: Enter the Account ID. Transmission will be performed using the entered Account ID.

[Prompt for Account ID]: A screen for entering the Account ID will be displayed when attempting a transmission. The Account ID must be entered each time a transmission is attempted.

- 3 Click **[OK]**.

Unknown ID Job

This specifies the behavior for handling the jobs sent with unknown account IDs (i.e., unspent IDs). The setting items are as follows.

Item	Descriptions
Permit	The job is permitted to be printed.
Reject	The job is rejected (not printed).

1 Display the screen.

- 1 Press the [**Status/System Menu/Counter**] key.

Status/
System Menu/
Counter



- 2 Press the [**▲**] or [**▼**] key to select [Admin/Accounting], and press the [**OK**] key.



NOTE

If the login user name entry screen appears during operations, log in by referring to [Administrator User Name and Password on page 2-10](#).

The factory default login user name and login password are set as shown below.

Login User Name	Login Password
Admin* ¹	Admin* ¹

*¹ Upper case and lower case letters are distinguished (case sensitive).

2 Configure the settings.

- 1 Press the [**▲**] or [**▼**] key to select [Unknown ID Job], and press the [**OK**] key.
- 2 Press the [**▲**] or [**▼**] key to select [Reject] or [Permit], and press the [**OK**] key.

Configuring Job Accounting

Default Setting

Set the defaults for job accounting. To configure the settings, select the item in Default Setting and press the setting item.



For details on each function, see the table below.

Item	Description
Apply Limit	This specifies how the machine behaves when the counter has reached the limit of restriction. The table below describes the action taken. Value Immediately: Job stops when the counter reaches its limit. Subsequently: Printing/scanning of the job continues but the subsequent job will be rejected. Alert Only: Job continues while displaying an alert message.
Copy/Print Count	You can select how the copying and printing page counts are shown - either the total of both or each of copying and printing individually (Split). The selection may influence restriction on the count and count method. For details, refer to Restricting the Use of the Machine (page 8-7) and Account. Report (Accounting Report) (page 8-20) . Value: Total, Split
Counter Limit	When you add a new account, you can change the default restrictions on the number of sheets used. You can set any number from 1 to 9,999,999. The items that can be set differ depending on whether [Split] or [Total] is selected for [Copy/Print Count].
[Split] selected for Copy/Printer Count	
Copy Restriction	Sets the default restriction on the number of sheets used for copying.
Print Restrict.	Sets the default restriction on the number of sheets used for printing.
ScanRest. (Other)	Sets the default restriction on the number of sheets used for scanning (excludes copying).
FAX Restriction ^{*1}	Sets the default restriction on the number of sheets used for sending faxes.
[Total] selected for Copy/Printer Count	
Print Restrict.	Sets the default restriction on the total number of sheets used for copying and printing.
ScanRest. (Other)	Sets the default restriction on the number of sheets used for scanning (excludes copying).
FAX Restriction	Sets the default restriction on the number of sheets used for sending faxes.

*1 Displayed only when the optional FAX Kit is installed.

Item	Description
<p>Cnt by PaperSize</p> <p>Paper Size 1 (to 5)</p>	<p>This counts the number of pages by paper size (e.g. Letter).</p> <p>In addition to paper size, media type can also be specified (e.g. count the letter-size color paper used). If you do not specify the media type, the number of used sheets will be counted for the specified sheet size, regardless of the media type.</p> <p> NOTE</p> <p>Paper size is available in five types, 1 to 5. These types are specified in accounting reports. Refer to Account. Report (Accounting Report) on page 8-20.</p> <p>Value: Off, On</p> <p>Paper Size: A3, A4, A5, B4, B5, Folio, Ledger, Legal, Letter, Statement</p> <p>Media Type: All Media Types, Plain, Transparency, Rough, Vellum, Labels, Recycled, Preprinted, Bond, Cardstock, Color, Prepunched, Letterhead, Envelope, Thick, High Quality, Custom 1 to 8</p>

Counting the Number of Pages Printed

This counts the number of pages printed. Counts are classified into Total Job Accounting and Each Job Accounting. A new count can also be started after resetting the count data which was stored for a certain period of time.

Status/
System Menu/
Counter



Admin/Accounting



Job Account. Set.



Total Accounting
Each Job Account

Total Accounting

This counts the number of pages for all accounts and resets the counts for those accounts together at the same time.

Each Job Account

This counts the number of pages for each account and resets the counts by account. When checking Each Job Accounting, select the account for which you want to check the count.

Types of the counts are as follows.

Item	Descriptions
Printed Pages	Displays the number of pages copied and printed, and the total number of pages used. You can also use [FAX RX Pages] ^{*1} , [Duplex Pages] and [Combine Pages] to check the number of pages used.
Copy/Print Pages	Displays the number of pages copied and printed, and the total number of pages used. Press the [▶] key to view the next screen. Press the [◀] key to return to the previous screen.
FAX RX Pages	Displays the number of pages received.
Total Print Pages	Displays the total number of pages used for copying and printing.
Duplex Pages	Displays the number of pages printed in [1-Sided] mode, [2-Sided] mode, and the total pages in both modes. Press the [▶] key to view the next screen. Press the [◀] key to return to the previous screen.
Combine Pages	Displays the number of pages printed in [None] (no Combine) mode, [2 in 1] mode, [4 in 1] mode, and the total pages in both modes. Press the [▶] key to view the next screen. Press the [◀] key to return to the previous screen.
Cnt by PaperSize	Displays the number of pages used in the selected paper size as well as the number of pages used in other paper sizes. Press the [▶] key to view the next screen. Press the [◀] key to return to the previous screen.
Scanned Pages	Displays the number of pages scanned for copying, faxing and other functions, as well as the total number of pages scanned. Press the [▶] key to view the next screen. Press the [◀] key to return to the previous screen.
FAX TX Pages ^{*1}	Displays the number of pages faxed.
FAX TX Time ^{*1}	Displays the total duration of FAX transmissions.
Counter Reset	Resets the counter. Press [Yes] in the confirmation screen.


*1 Displayed only when the optional FAX Kit is installed.

To check other items, press the [OK] key to return to the screen one level higher.

Account. Report (Accounting Report)

The total pages counted of all relevant accounts can be printed as an accounting report. Reports have different formats depending on how the count of copiers and printers is administered.

When [Split] is selected for Managing the Copy/Printer Count

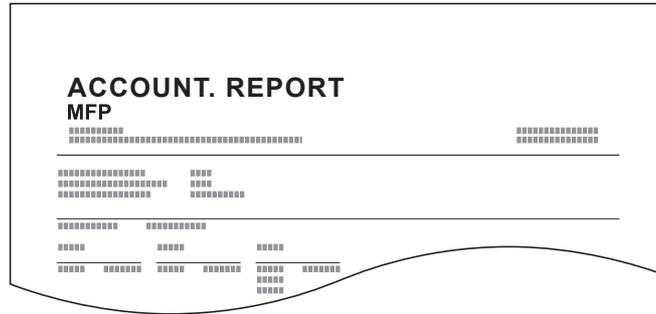

For the count by paper size, the report will be printed by size.

Use the procedure below to print a job accounting report.

1 Prepare paper.

Check that A4 or Letter paper is loaded in the cassette.


2 Display the screen.

1 Press the [Status/System Menu/Counter] key.

Status/
System Menu/
Counter



2 Press the [▲] or [▼] key to select [Admin/Accounting], and press the [OK] key.

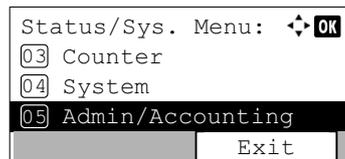

NOTE

If the login user name entry screen appears during operations, log in by referring to [Administrator User Name and Password on page 2-10](#).

The factory default login user name and login password are set as shown below.


Login User Name	Login Password
Admin*1	Admin*1

*1 Upper case and lower case letters are distinguished (case sensitive).

3 Press the [▲] or [▼] key to select [Job Account.Set.], and press the [OK] key.

3 Print the report.

- 1 Press the [▲] or [▼] key to select [Account. Report], and press the [OK] key.

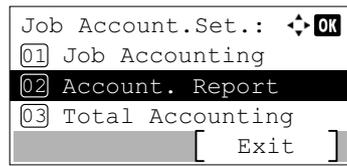

- 2 Press [Yes] in confirmation screen.

Accounting report is printed.

Using Job Accounting


This section explains procedures while setting job accounting.

Login/Logout

If job accounting is enabled, an account ID entry screen appears each time you use this machine. Use the procedure below to login and logout.

Login

- 1 In the screen below, enter the account ID using the numeric keys and press the **[OK]** key.

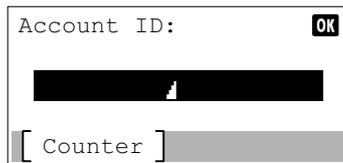

NOTE

- If you entered a wrong character, press the **[Clear]** key and enter the account ID again.
- If the entered account ID does not match the registered ID, a warning beep will sound and login will fail. Enter the correct account ID.

- 2 Proceed to complete the rest of the steps.

Logout


When the operations are complete, press the **[Logout]** key to return to the account ID entry screen.

Logout



Password Protect Administrator Settings

If the following account ID entry screen appears on your PC, enter the assigned Account ID and then click **[OK]**.

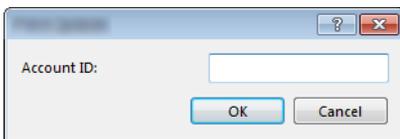

9 Troubleshooting

This chapter explains the following topics:

Regular Maintenance	9-2
Cleaning	9-2
Toner Container Replacement	9-3
Waste Toner Box Replacement	9-6
Troubleshooting	9-8
Solving Malfunctions	9-8
Responding to Messages	9-11
Clearing Paper Jams	9-16

Regular Maintenance

Cleaning

Clean the machine regularly to ensure optimum printing quality.



CAUTION

For safety, always unplug the power cord before cleaning the machine.



Original Cover/Glass Platen

Wipe the backside of the original cover, the inside of the document processor and the glass platen with a soft cloth dampened with alcohol or mild detergent.



IMPORTANT

Do not use thinner or other organic solvents.

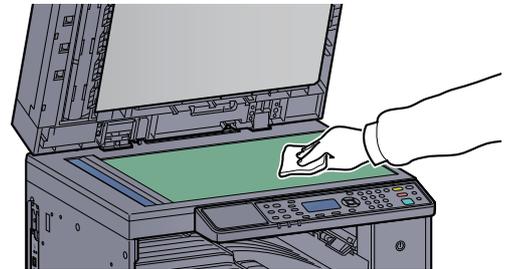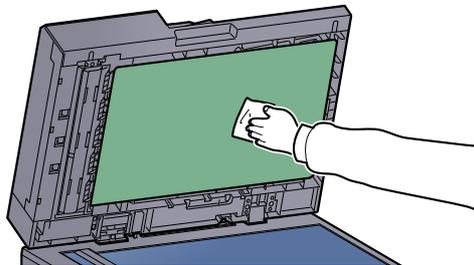

Slit Glass


When using the document processor, clean the slit glass surface and the reading guide with the dry accessory cloth. Dirt on the slit glass or the reading guide may cause black streaks to appear in the output.




IMPORTANT

Do not use water, soap or solvents for cleaning.

1

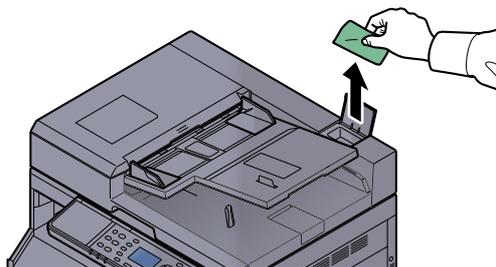

2

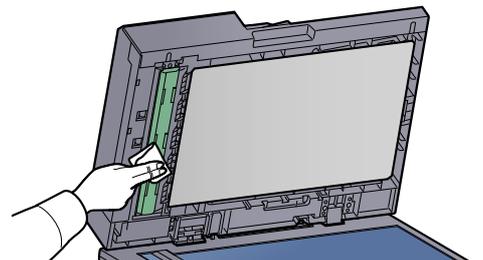

Toner Container Replacement

When toner runs low, [Toner is low.] appears in the message display. Make sure you have a new toner container available for replacement.

When the message display displays [Add toner.], replace the toner.



CAUTION


Do not attempt to incinerate parts which contain toner. Dangerous sparks may cause burns.




NOTE

- For the toner container, always use a genuine toner container. Using a toner container that is not genuine may cause image defects and product failure.
- The memory chip in the toner container of this product stores information necessary for improving customer convenience, operation of the recycling system for used toner containers, and planning and development of new products. The stored information does not include information that makes it possible to identify individuals, and is only used anonymously for the above purposes.


1

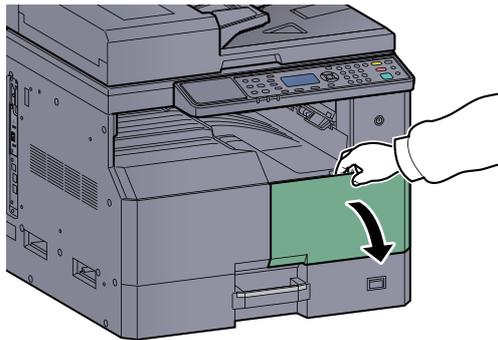


2

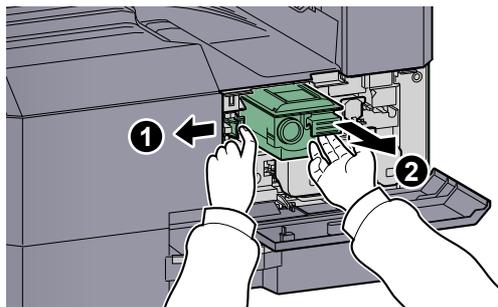

3

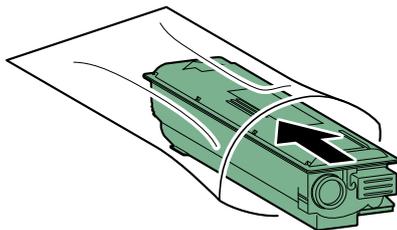


4

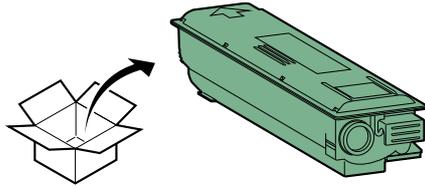


✔ IMPORTANT

Shake the toner container according to the procedure and place the container in position.


5

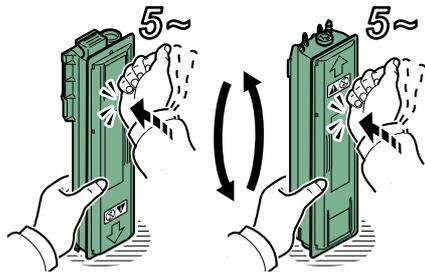


6

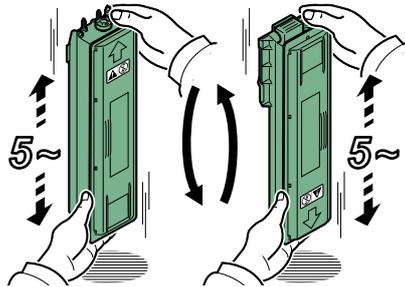


7

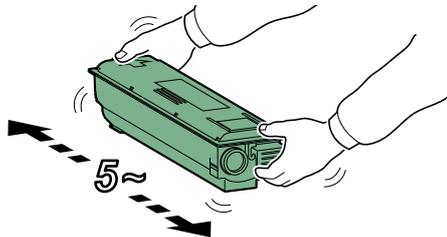


8

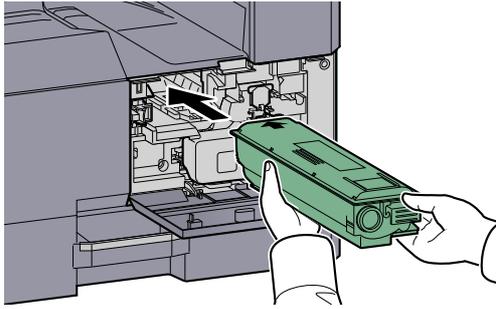

9

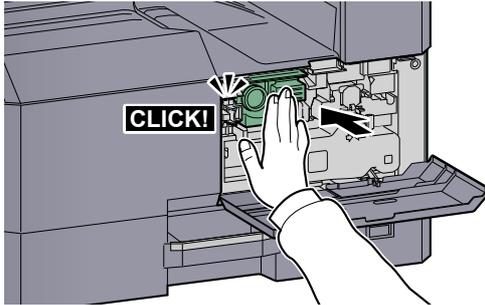

10

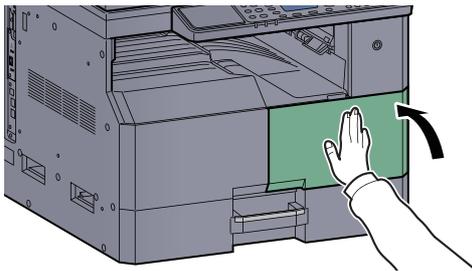

NOTE

Return the exhausted toner container and waste toner box to your dealer or service representative. The collected toner container and waste toner box will be recycled or disposed in accordance with the relevant regulations.

Waste Toner Box Replacement


When replacing the toner container, replace the waste toner box as well. You also need to replace the waste toner box when [WasteTonerBox is full or not installed. Check the box.] is displayed on the message display.




CAUTION

Do not attempt to incinerate parts which contain toner. Dangerous sparks may cause burns.


1

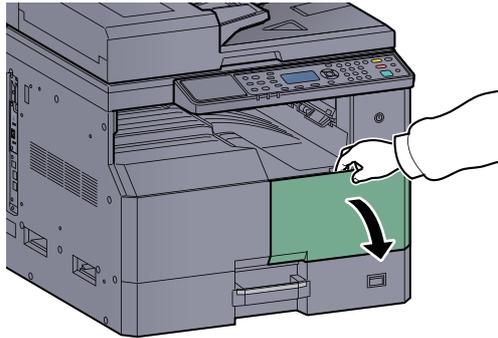


2

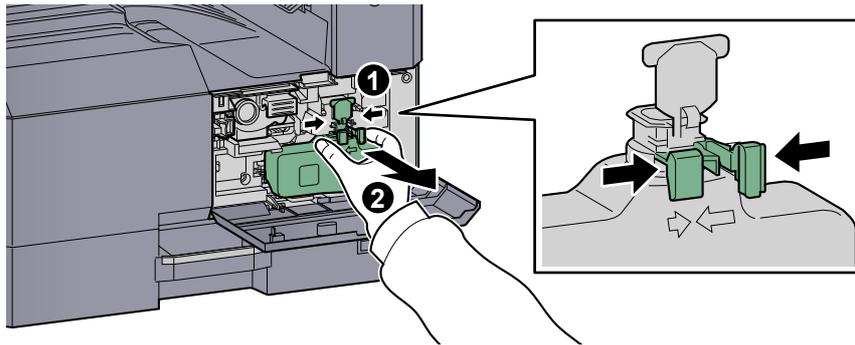


3

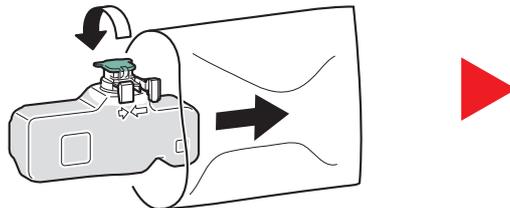


4

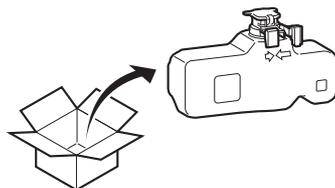


5

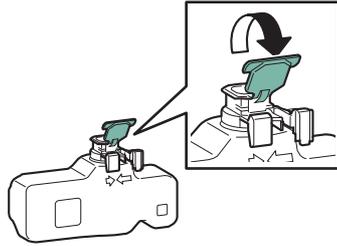


6

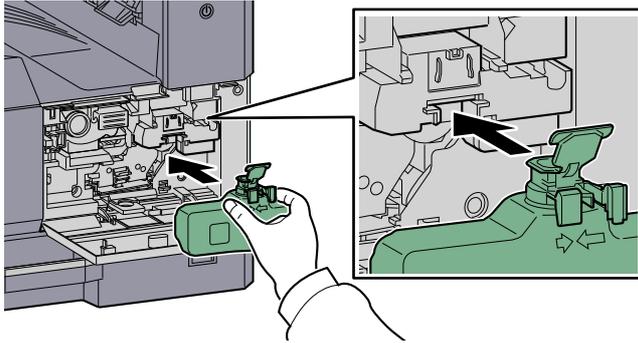

7

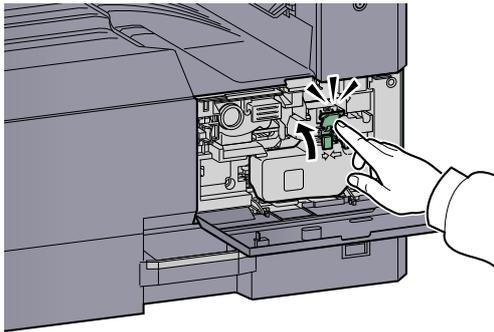

8

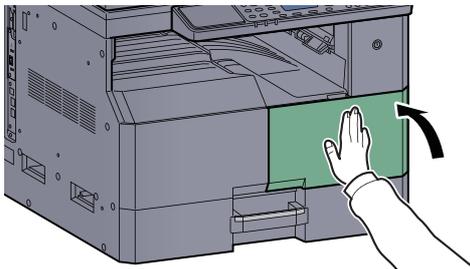

NOTE


 
Return the exhausted toner container and waste toner box to your dealer or service representative. The collected toner container and waste toner box will be recycled or disposed in accordance with the relevant regulations.




Troubleshooting



Solving Malfunctions

The table below provides general guidelines for problem solving.

If a problem occurs with your machine, look into the checkpoints and perform procedures indicated on the following pages. If the problem persists, contact your Service Representative.

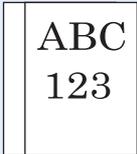Symptom	Checkpoints	Corrective Actions	Reference Page
The screen does not respond when the power switch is turned on.	Check the power cord.	Connect both ends of the power cord securely.	page 2-8
Pressing the [Start] key does not produce copies.	Is there a message on the screen, KYOCERA Client Tool, or the Status Monitor?	Determine the appropriate response to the message and respond accordingly.	page 9-11
	Is the machine in Sleep mode?	Press any key on the operation panel to recover the machine from Sleep mode.	page 2-20
Blank sheets are ejected. 	Are the originals loaded correctly?	When placing originals on the platen, place them face-down and align them with the original size indicator plates.	page 5-2
		When placing originals in the document processor, place them face-up.	page 5-3
Paper often jams.	Is the paper loaded correctly?	Load the paper correctly.	page 3-7 page 3-10
	Is the paper of the supported type? Is it in good condition?	Remove the paper, turn it over, and reload it.	page 3-7
	Is the paper curled, folded or wrinkled?	Replace the paper with new paper.	page 3-7
	Are there any loose scraps or jammed paper in the machine?	Remove any jammed paper.	page 9-16
2 or more sheets are overlaps when ejected. (multi feed) 	—	Load the paper correctly.	page 3-7 page 3-10
Printouts are wrinkled. 	Is the paper damp?	Replace the paper with new paper.	page 3-5

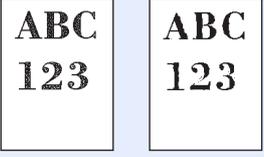  Symptom	Checkpoints	Corrective Actions	Reference Page
Printouts are curled. 	Is the paper damp?	Replace the paper with new paper.	page 3-7 page 3-10
Cannot print.	Is the machine plugged in?	Plug the power cord into an AC outlet.	—
	Is the machine powered on?	Turn on the power switch.	page 2-9
	Are the printer cable and network cable connected?	Connect the correct printer cable and network cable securely.	page 2-6
	Is the machine used as a shared printer?	Start up the Host PC.	—
	Was the machine powered on before the printer cable was connected?	Power on the machine after connecting the printer cable.	—
	Is the print job paused?	Resume printing.	page 6-9
Printouts are totally too light. 	Is the paper damp?	Replace the paper with new paper.	page 3-5
	Have you changed the density?	Select appropriate density level.	page 5-14 page 7-21
	Is the toner distributed evenly within the toner container?	Shake the toner container from side to side several times.	page 9-3
	Is EcoPrint mode enabled?	Disable EcoPrint mode.	page 5-23 page 7-19
	—	Make sure the paper type setting is correct for the paper being used.	page 7-12
Part of the image is periodically faint or shows white lines. 	—	Run [Drum Refresh].	page 7-21
Printouts are fuzzy. 	Is the machine being used in conditions of very humid, or humidity or temperature rapidly changes?	Use in an environment that has suitable humidity.	—
Texts are not clearly printed. 	Did you choose appropriate image quality for the original?	Select appropriate image quality.	page 5-14

  
Symptom	Checkpoints	Corrective Actions	Reference Page
<p>Printouts are too dark even though the background of the scanned original is white.</p> 	<p>Have you changed the density?</p>	<p>Select appropriate density level.</p>	<p>page 5-14 page 7-21</p>
<p>Copies have a moire pattern (dots grouped together in patterns and not aligned uniformly).</p> 	<p>Is the original a printed photograph?</p>	<p>Set the original image to [Photo].</p>	<p>page 5-14</p>
<p>Black dots appear on the white background when white original is scanned.</p> 	<p>Is the original cover or the glass platen dirty?</p>	<p>Clean the original cover or the glass platen.</p>	<p>page 9-2</p>
<p>Printouts have vertical lines.</p> 	<p>Is the slit glass dirty?</p>	<p>Clean the slit glass.</p>	<p>page 9-2</p>
<p>Images are skewed.</p> 	<p>Are the originals loaded correctly?</p>	<p>When placing originals on the platen, align them with the original size indicator plates.</p>	<p>page 5-2</p>
	<p>Is the paper loaded correctly?</p>	<p>When placing originals in the document processor, align the original width guides securely before placing the originals.</p>	<p>page 5-3</p>
		<p>Check the position of the paper width guides.</p>	<p>page 3-7 page 3-10</p>

Responding to Messages

If a problem has occurred in the machine, you will be notified by the following display.

- The [**Attention**] indicator on the operation panel is lit or flashing.
- An error message appears in the message display of the machine's operation panel.

If the [**Attention**] indicator is lit or flashing and an error message appears in the message display of the machine's operation panel, check the KYOCERA Client Tool or Status Monitor.

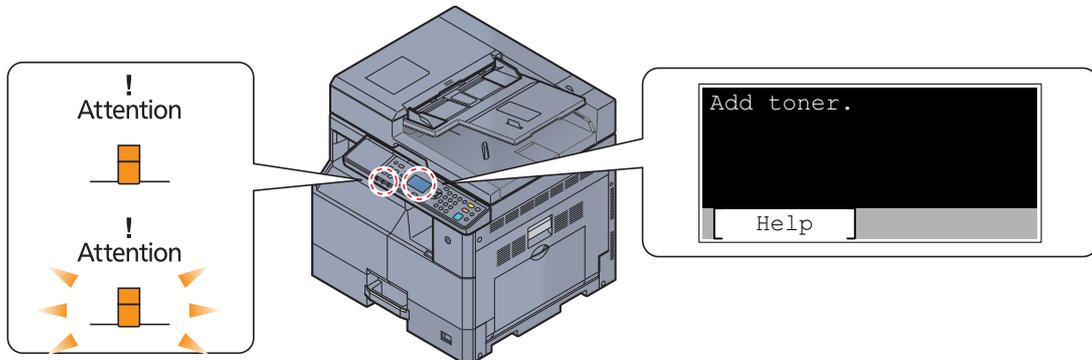

NOTE

If the indicators light or flash repeatedly in manners not described above, a service error has probably occurred. Turn off the power, unplug the power cord, and then plug the power cord back in and turn on the power. This may clear the error. Even if the error is not cleared, contact your service representative.

Problems that can be resolved by the user are described below.

A

Error Message	Checkpoints	Corrective Actions	Reference Page
Add toner.	Toner is empty.	Replace the toner container.	page 9-3

C

Error Message	Checkpoints	Corrective Actions	Reference Page
Cannot duplex print on this paper. ↑↓ (Displayed alternately) Press OK to continue using cassette 1.	Did you select a paper size/type that cannot be duplex printed?	Select [Paper] to select the available paper. Press the [OK] key to print without using Duplex function.	—
Cannot duplex print on this paper. ↑↓ (Displayed alternately) Press OK to continue using MP tray.			—
Close document processor cover.	Is the top cover of the document processor open?	Close the document processor cover.	—
Close document processor.	Is the document processor open?	Close the document processor.	—
Close front cover.	Is there any cover which is open?	Close the cover indicated on the screen.	—
Close right cover #.			—

E

Error Message	Checkpoints	Corrective Actions	Reference Page
Error occurred. Turn the power switch off and on.	—	System error has occurred. Turn the power switch OFF and then ON.	—

I

Error Message	Checkpoints	Corrective Actions	Reference Page
Incorrect account ID. Job is canceled.	—	The account ID was incorrect when processing the job externally. The job is canceled. Press the [OK] key.	—
Inner tray is full of paper. Remove the paper.	—	Remove paper from the inner tray. Press [Continue] to resume printing. Press [Cancel] to cancel the job.	—
Insufficient memory. Cannot start the job.	—	Job cannot be started. Try again later.	—

J

Error Message	Checkpoints	Corrective Actions	Reference Page
Job Accounting restriction exceeded. Job is canceled.	Is the acceptable printing count restricted by Job Accounting exceeded?	The printing count exceeded the acceptable count restricted by Job Accounting. Cannot print any more. This job is canceled. Press the [OK] key.	—

L

Error Message	Checkpoints	Corrective Actions	Reference Page
Load paper in cassette #.	Is the indicated cassette out of paper?	Load paper.	page 3-5
Load paper in cassette #. ↑↓ (Displayed alternately) Press OK to continue using cassette #.	Does the selected paper size matches the paper size loaded in the specified paper source?	Load paper. Select [Paper] to select the other paper source. Press the [OK] key to print on the paper in the currently selected paper source.	page 3-5
Load paper in MP tray.	Is the paper of the selected size loaded in the multi purpose tray?	Load paper.	page 3-5
Load paper in MP tray. ↑↓ (Displayed alternately) Press OK to continue using MP tray.	Does the selected paper size matches the paper size loaded in the specified paper source?	Load paper. Select [Paper] to select the other paper source. Press the [OK] key to print on the paper in the currently selected paper source.	page 3-5

M

Error Message	Checkpoints	Corrective Actions	Reference Page
Machine failure. Call service.	—	An error has occurred in the machine. Make a note of the error code displayed on the message display, and contact your Service Representative.	—
Maximum Number of scanned pages. Job is canceled.	—	Scanning cannot be performed any more due to insufficient memory of scanner. Press the [OK] key to cancel the job.	—
Memory is full. Job is canceled.	—	Unable to continue the job as the memory is used up. Change the print resolution from Fast 1200 to 600 dpi. Refer to Printer Driver User Guide .	—

N

Error Message	Checkpoints	Corrective Actions	Reference Page
Network was disconnected.	Is the network cable connected?	Press the [OK] key and connect the network cable.	page 2-8
	Is the PC powered on?	Press the [OK] key and turn the PC power on.	—
	Cannot find KYOCERA Client Tool.	Press the [OK] key and open KYOCERA Client Tool.	page 7-22
Non-genuine Toner. Press [Help].	Is the installed toner container our own brand?	The manufacturer assumes no responsibility for damage caused by a non-genuine toner. We recommend that you only use genuine toner containers. When you want to use the toner container currently installed, press the [OK] key and the [Stop] key simultaneously for 3 seconds or more.	—

P

Error Message	Checkpoints	Corrective Actions	Reference Page
Paper jammed at MP tray.	—	If a paper jam occurs, the machine will stop and the location of the jam will be indicated on the screen. Leave the machine on and follow the instruction to remove the jammed paper.	page 9-16
Paper jammed in cassette #.			
Paper jammed in document processor.			
Paper jammed in the right cover #.			
Print data error. Job is canceled.	—	The job is canceled. Press the [OK] key.	—
Print overrun. Job is canceled.	—	Warning. Low printer memory. The job is canceled. Press the [OK] key.	—

R

Error Message	Checkpoints	Corrective Actions	Reference Page
Remove original from document processor.	Are there any originals left in the document processor?	Remove originals from the document processor.	—
Replace all originals and press Start key.	—	Remove originals from the document processor, put them back in their original order, and place them again. Press [Cancel] to cancel the job.	—
Restricted by Job Accounting. Job is canceled.	—	This job is canceled because it is restricted by Job Accounting. Press the [OK] key.	—

S

Error Message	Checkpoints	Corrective Actions	Reference Page
Scanner memory is full. Job is canceled.	—	Scanning cannot be performed any more due to insufficient memory of scanner. The job is canceled. Press the [OK] key.	—
Shake the toner container.	—	Open the front cover of the machine and pull out the toner container. Shake the toner container well and reinstall it.	page 9-3

T

Error Message	Checkpoints	Corrective Actions	Reference Page
The slit glass requires cleaning.	—	Clean the slit glass using the cleaning cloth supplied with the document processor.	page 9-2
Toner is low. (Replace when empty.)	—	It is almost time to replace the toner container. Obtain a new toner container.	—

U


Error Message	Checkpoints	Corrective Actions	Reference Page
Unknown Toner Installed. PC	Does the installed toner container's regional specification match the machine's?	Install the specified toner container.	—
USB cable was disconnected.	Is the USB cable connected?	Press the [OK] key and connect the USB cable.	page 2-7
	Is the PC powered on?	Press the [OK] key and turn the PC power on.	—
	Cannot find KYOCERA Client Tool.	Press the [OK] key and open KYOCERA Client Tool.	page 7-22

W

Error Message	Checkpoints	Corrective Actions	Reference Page
WasteTonerBox is full or not installed. Check the box.	—	The waste toner box is not installed correctly. Set it correctly.	page 9-6
	Is the waste toner box full?	Replace the waste toner box.	page 9-6


Clearing Paper Jams

If a paper jam occurs, [Paper jammed] appears in the message display and the machine will stop. This section explains the procedures to remove the jammed paper.

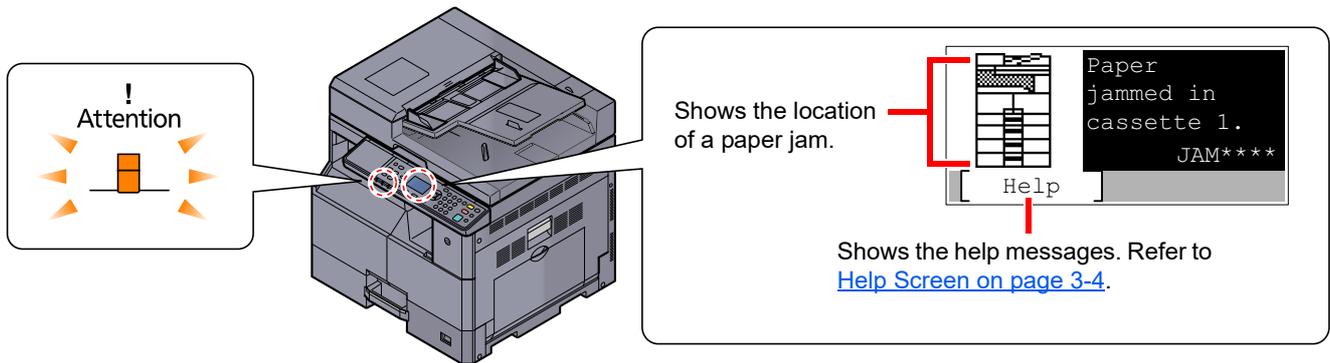

Jam Location

Detailed paper jam positions are as follows.

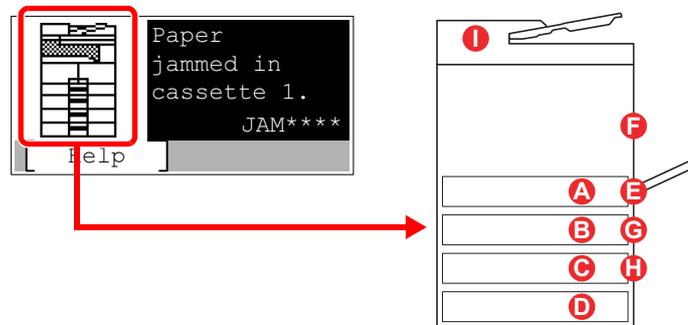

Error Message	Paper Jam Location	Reference Page
Paper jammed in cassette 1.	A Cassette 1	page 9-17
Paper jammed in cassette 2.	B Cassettes 2 to 4	page 9-17
Paper jammed in cassette 3.		
Paper jammed in cassette 4.		
Paper jammed at MP tray.	E Multi purpose tray	page 9-17
Paper jammed in the right cover 1.	F Inside right cover 1	page 9-18
Paper jammed in the right cover 2.	G Inside right covers 2 or 3	page 9-19
Paper jammed in the right cover 3.		
Paper jammed in document processor.	I Document processor	page 9-19

After you remove the jam, the machine will warm up again and the error message will be cleared. The machine resumes with the page that was printing when the jam occurred.

Precautions with Paper Jams


- Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.
- After clearing the paper jam, close the cassette and cover in the reverse procedure.



CAUTION


The fixing unit is extremely hot. Take sufficient care when working in this area, as there is a danger of getting burned.

Cassette 1

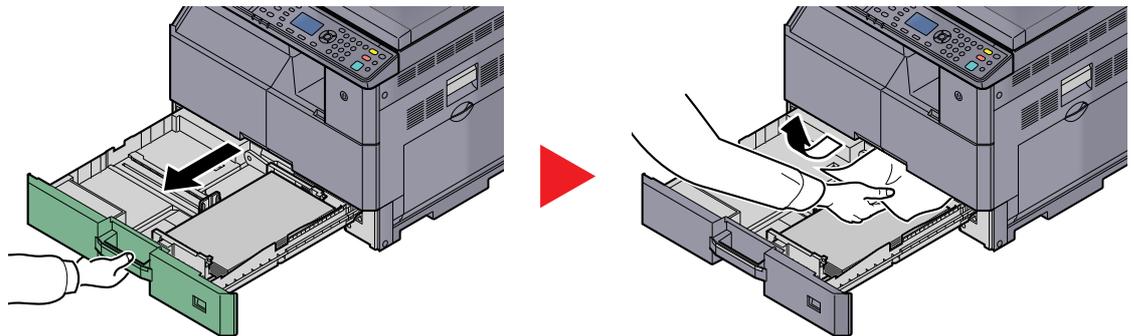


Cassettes 2 to 4

Procedures for handling a paper jam in Cassettes 2, 3, and 4 are all the same. This section explains procedures using Cassette 2 as an example.

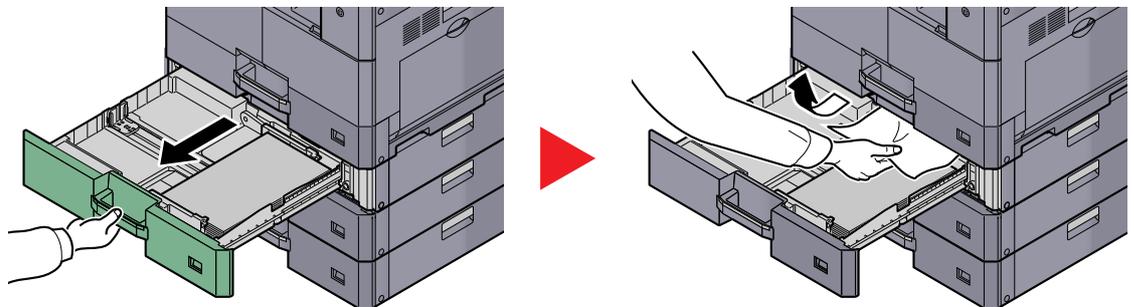


Multi purpose tray

1

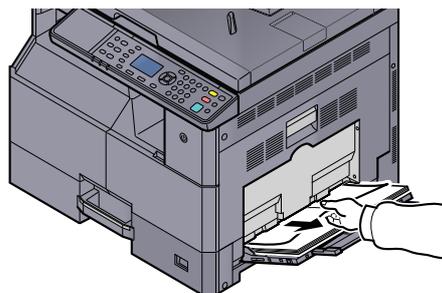

2

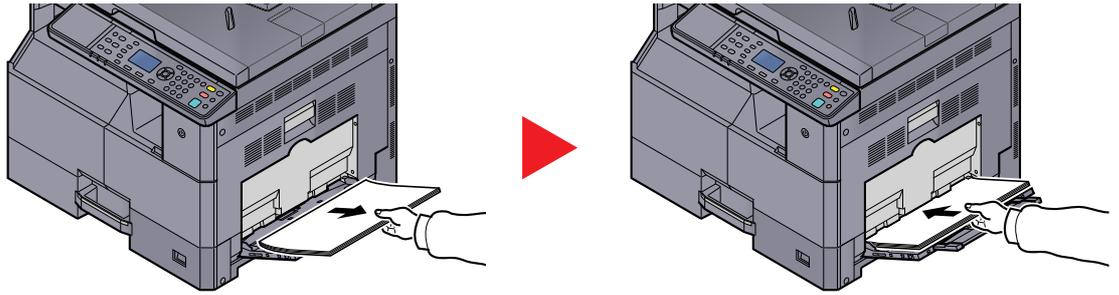


NOTE


If you cannot remove the paper, do not forcibly pull it out. Refer to [Inside Right Cover 1 on page 9-18](#).

Inside Right Cover 1


1

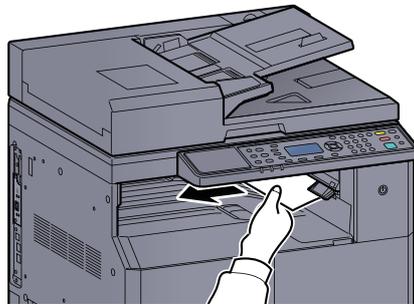


2

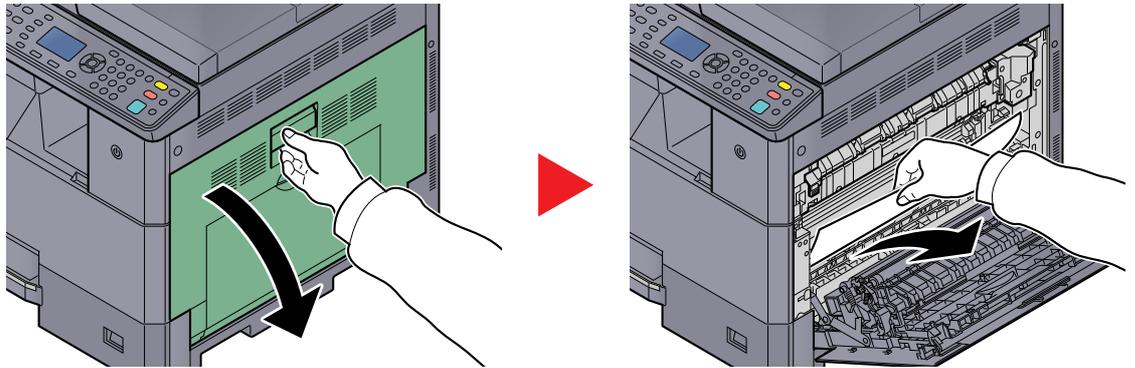

3

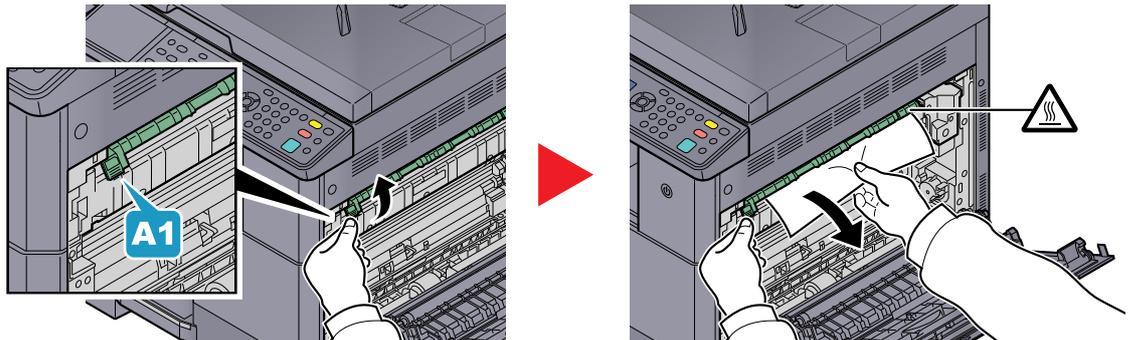


4

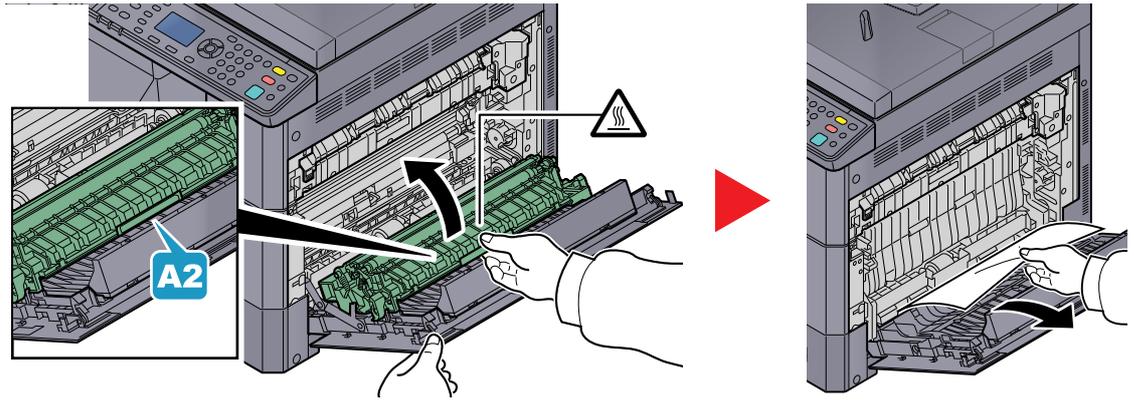


Inside Right Covers 2 or 3

Procedures for handling a paper jam in Right Covers 2 and 3 are all the same. This section explains procedures using Right Cover 2 as an example.

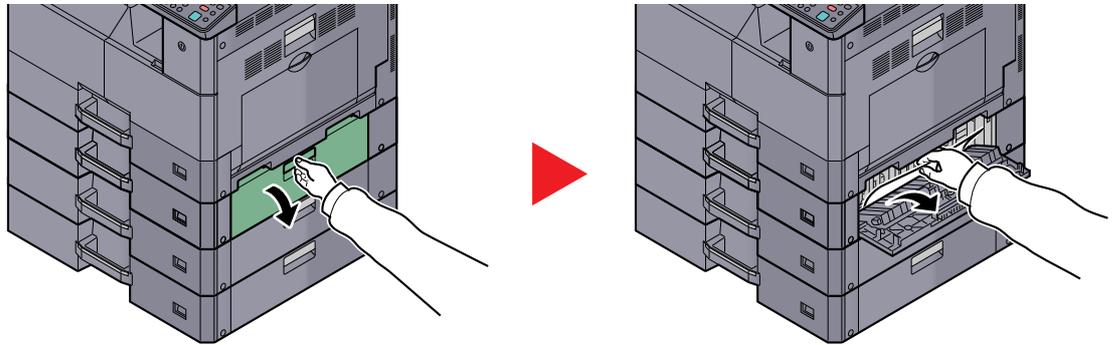


Document Processor


1

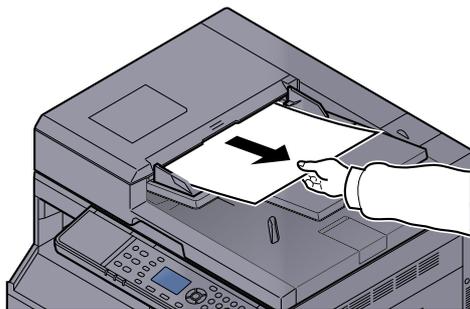

2

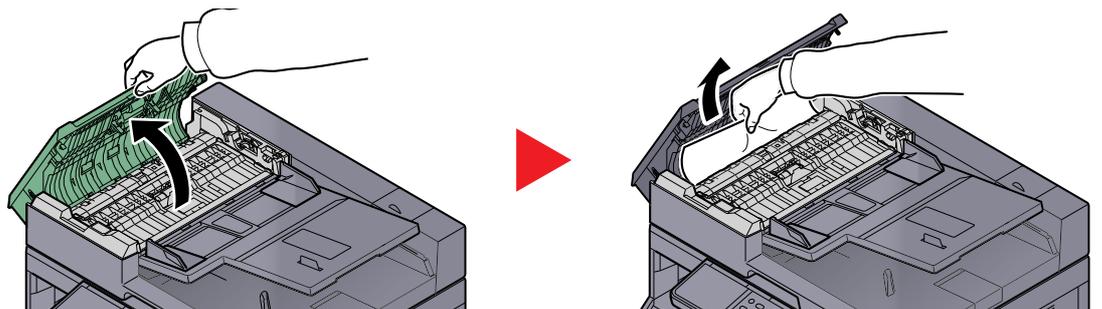

3

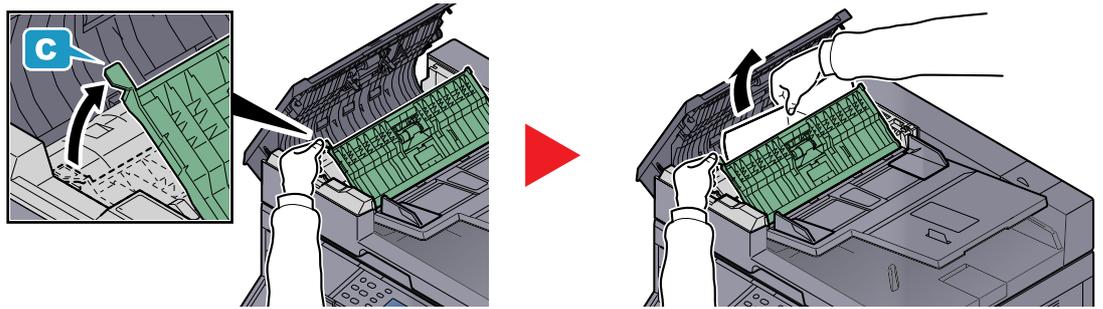

NOTE

If the original is difficult to remove, turn the dial (B). The original will scroll out to a position where it can be removed easily.

10 Appendix


This chapter explains the following topics:

Optional Equipment	10-2
Overview of Optional Equipment	10-2
Character Entry Method	10-4
Using the Keys	10-4
Characters That Can be Entered Using the Numeric Keys	10-5
Entering Characters	10-6
Paper	10-8
Basic Paper Specifications	10-8
Choosing the Appropriate Paper	10-9
Special Paper	10-12
Specifications	10-16
Common Functions	10-16
Copy Functions	10-17
Printer Functions	10-18
Scanner Functions	10-18
Document Processor (Reverse Automatic) (Option)	10-18
Paper Feeder (300-sheet) (Option)	10-19
Duplex Unit (Option)	10-19
Glossary	10-20

Optional Equipment

Overview of Optional Equipment

The following optional equipment is available for the machine.

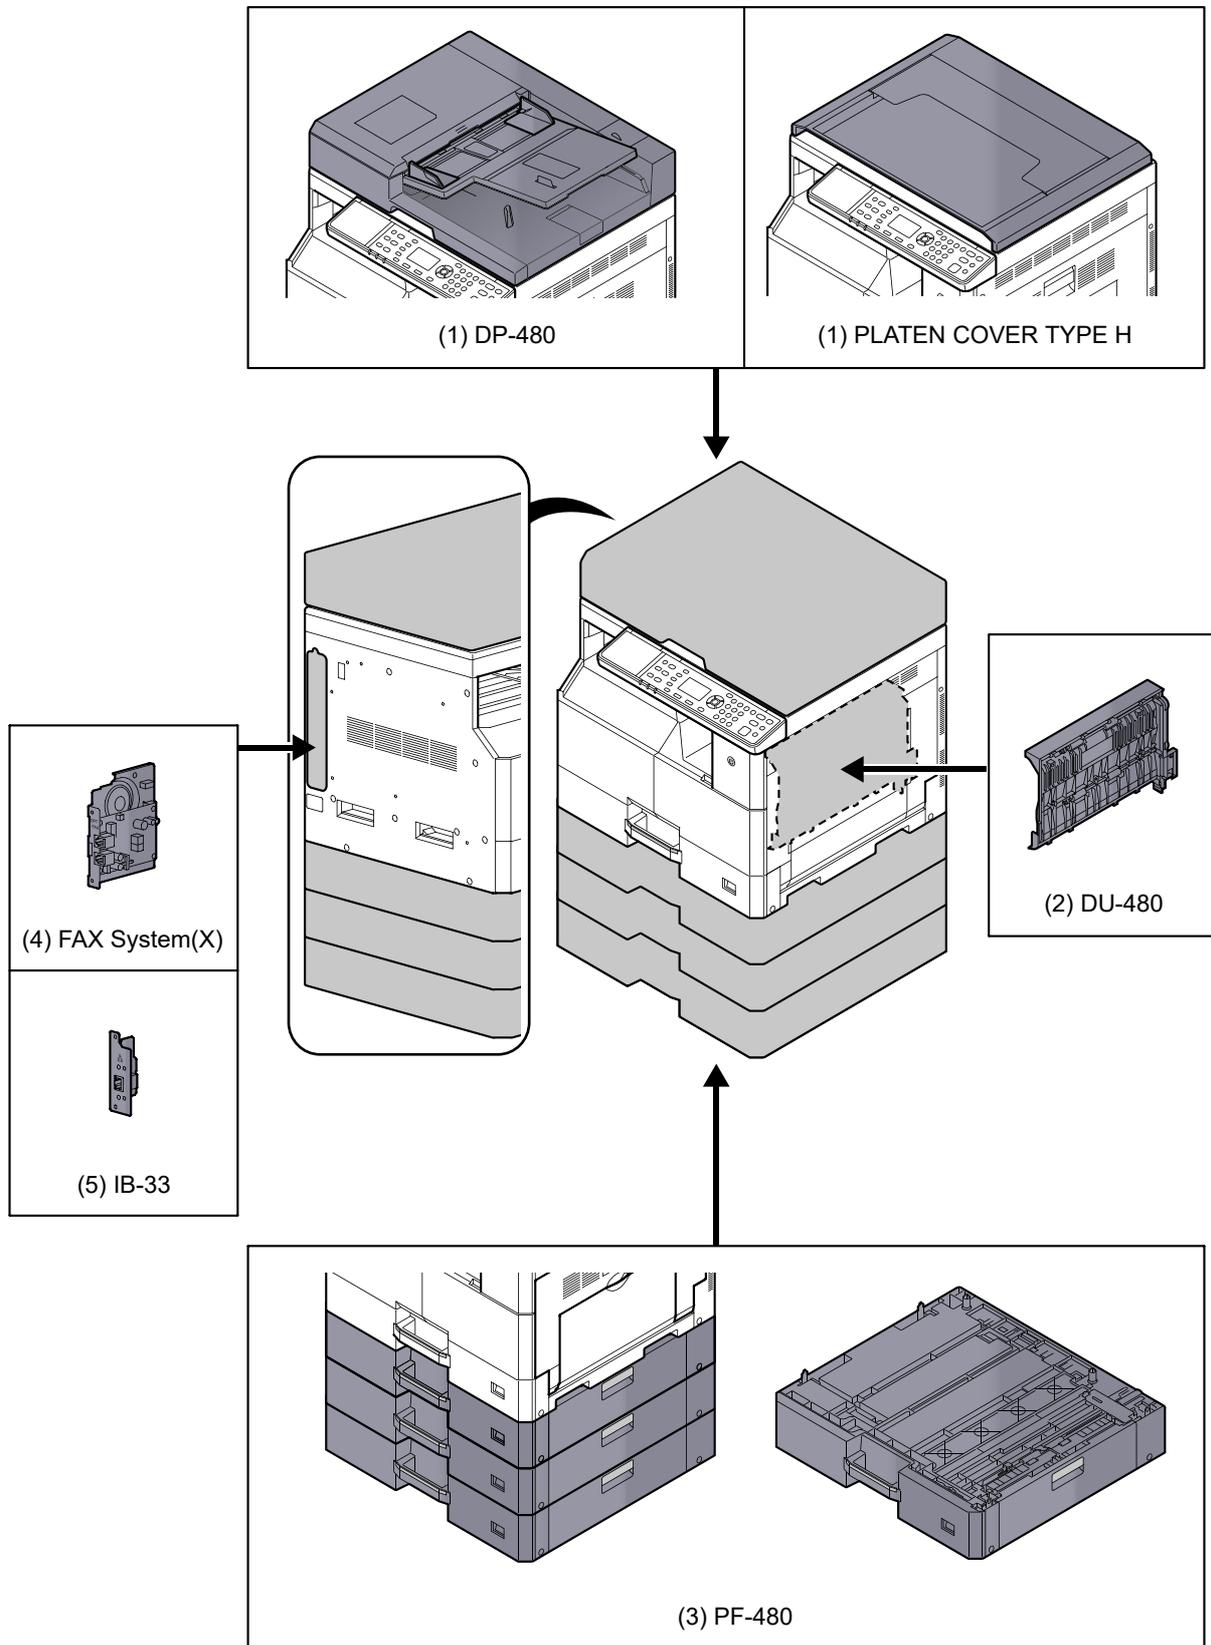

(1) DP-480 "Document Processor (Reverse Automatic)" PLATEN COVER TYPE H "Original Cover"

Automatically scans originals. Also you can perform duplex copying and split copying.
For document processor operation, refer to [Loading Originals in the Document Processor \(Option\) on page 5-3](#).
When the document processor is not used, please use the PLATEN COVER TYPE H.

(2) DU-480 "Duplex Unit" (Depends on regions, equipped as standard for TASKalfa 2321.)

Installing the duplex unit allows you to produce two-sided copies. Two-sided copies are available in sizes A3 to A5-R, Folio, Ledger to Statement-R, Executive, 216 x 340 mm (64 to 105 g/m²).

For two-sided copy settings, refer to [Duplex on page 5-14](#).

(3) PF-480 "Paper Feeder (300-sheet)"


Up to three additional cassettes identical to the machine's cassettes can be installed in the machine. Paper capacity and loading method are the same as the standard cassettes. Refer to [Loading in the Cassettes on page 3-7](#) for loading paper.

(4) FAX System(X) "FAX Kit"

By installing the FAX Kit, fax send/receive is enabled. Also, it is possible to use it as a FAX Driver, by using it with a computer. For further details, refer to **FAX Operation Guide**.

(5) IB-33 "Network Interface Kit" (Depends on regions, equipped as standard for TASKalfa 2321.)


Since the Network Interface Kit was designed to work with the TCP/IP protocol, in the same way as the main unit, it fulfills the network printing demands on Windows, Macintosh, and UNIX environments.

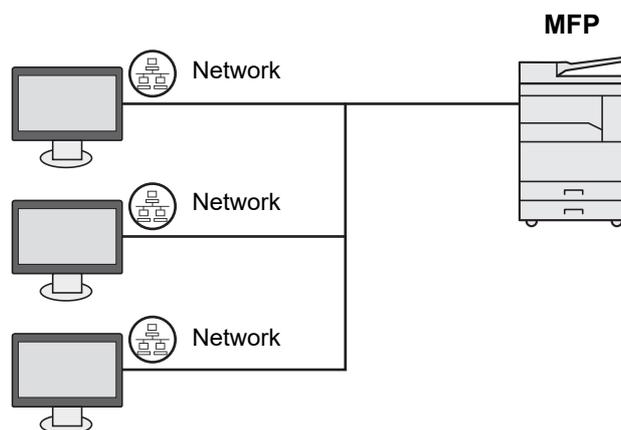

Character Entry Method

This section explains how to enter characters.

Using the Keys

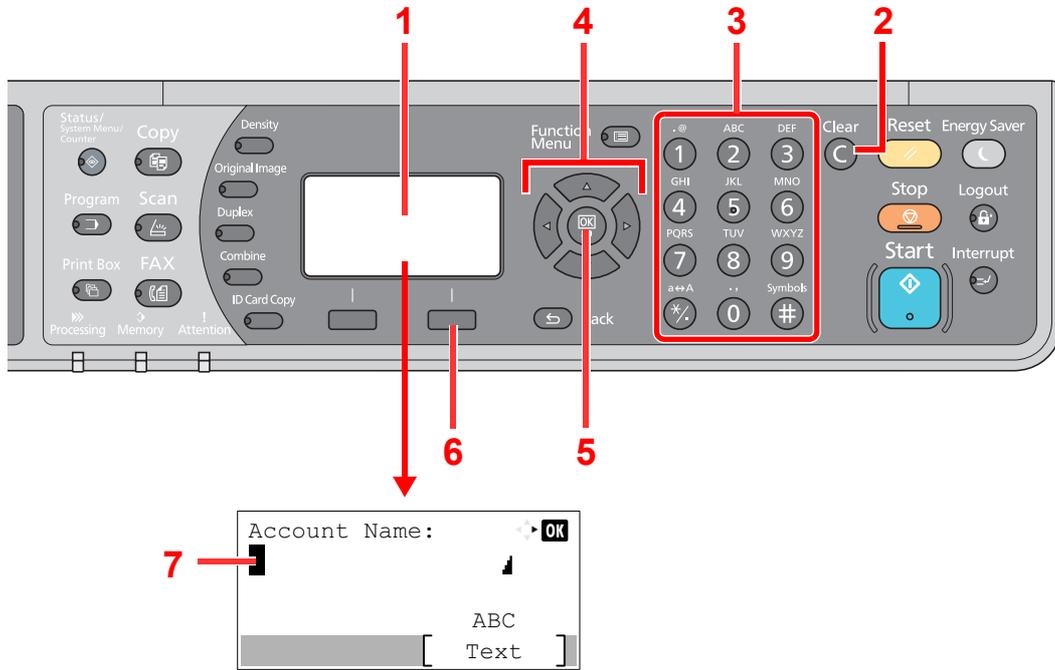


No.	Display/Key	Description
1	Message Display	Displays entered characters.
2	[Clear] key	Press to delete characters.
3	Numeric keys	Press to enter characters and symbols.
4	Arrow keys	Press to select the entry position, or select a character from the character list.
5	[OK] key	Press to finalize entry and return to the screen before the entry. To enter a symbol, press to confirm the selected symbol.
6	Right Select key	Press to select the type of characters you want to enter. (When [Text] is displayed)
7	Cursor	Characters are entered at the position of the cursor.

Selecting Type of Characters

To enter characters, the following three types are available:

Types	Description
ABC	To enter alphabets.
123	To enter numerals.
Symbols	To enter symbols.

In a character entry screen, press [Text] to select the type of characters you want to enter.

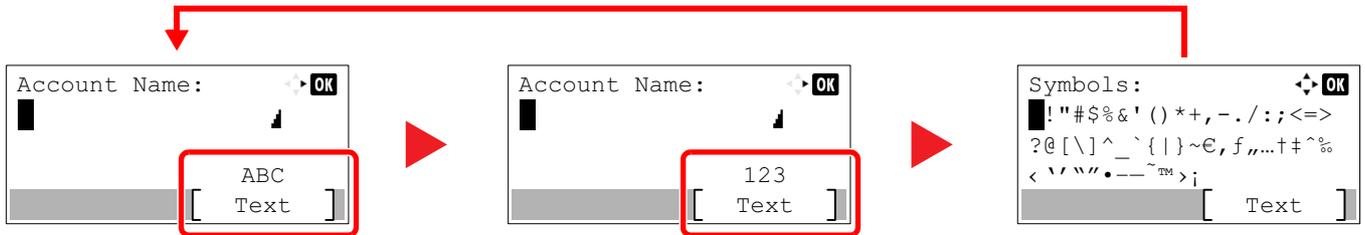

Each time you press [Text], the character type switches as follows: [ABC], [123], [Symbols], [ABC] ...

Characters That Can be Entered Using the Numeric Keys

The following table lists the characters that can be entered using the numeric keys.

Keys	Characters (Each press of a key changes the character in the order from left to right.)
.@ ①	. @ - _ / : ~ 1 (Repeats from the first character on the left) 1 (During number entry)
ABC ②	a b c A B C 2 (Repeats from the first character on the left) 2 (During number entry)
DEF ③	d e f D E F 3 (Repeats from the first character on the left) 3 (During number entry)
GHI ④	g h i G H I 4 (Repeats from the first character on the left) 4 (During number entry)
JKL ⑤	j k l J K L 5 (Repeats from the first character on the left) 5 (During number entry)
MNO ⑥	m n o M N O 6 (Repeats from the first character on the left) 6 (During number entry)
PQRS ⑦	p q r s P Q R S 7 (Repeats from the first character on the left) 7 (During number entry)
TUV ⑧	t u v T U V 8 (Repeats from the first character on the left) 8 (During number entry)

- 2 Press the [*/.] key. [r] changes to [R].

Account Name: [R] [OK]

ABC

Text

- 3 Press the [▶] key. The cursor moves to the right.

Account Name: [R] [OK]

ABC

Text

- 4 Press the [#] key. Displays the symbol list.

Symbols: [OK]

!"#\$%&'()*+,-./:;<=>

?@[\\]^_`{|}~€,f„…†‡^%&

< \\'\"\"•---™>;

Text

- 5 Press the [▲] or [▼] key to move the cursor and select [&].

Symbols: [OK]

!"#\$%&'()*+,-./:;<=>

?@[\\]^_`{|}~€,f„…†‡^%&

< \\'\"\"•---™>;

Text

- 6 Press the [OK] key. [&] is entered.

Account Name: [R&] [OK]

ABC

Text

- 7 Press the [3] key four times. [D] is entered.

Account Name: [R&D] [OK]

ABC

Text

- 8 Press the [▶] key.

Account Name: [R&D] [OK]

ABC

Text

Paper

This section explains the paper sizes and types that can be used in the paper source.

 For details on the sizes, types, and number of sheets of paper that can be loaded in each paper tray, refer to [Specifications on page 10-16](#).

Basic Paper Specifications

This machine is designed to print on standard copy paper as used in regular ('dry') copiers and page printers such as laser printers. It also supports a variety of other types of paper that conform to the specifications given in this appendix.

Be careful when choosing paper. Paper unsuitable for the machine may cause jams or may be wrinkled.

Supported Paper

Use standard copy paper for regular copiers or laser printers. The printing quality will be affected by the quality of paper. Poor quality paper may result in unsatisfactory output.

Basic Paper Specifications

The following table lists the specifications of paper that is supported with this machine. Refer to the subsequent sections for further details.

Criteria	Specifications
Weight	Cassettes: 64 to 105 g/m ²
	Multi purpose tray: 45 to 160 g/m ²
Dimensional accuracy	±0.7 mm
Squareness of corners	90° ±0.2°
Moisture content	4 to 6%
Pulp content	80% or more

 **NOTE**
Some recycled paper does not meet requirements for use with this machine as listed in the Basic Paper Specifications shown below, such as moisture or pulp content. For this reason, we recommend purchasing a small amount of recycled paper as a sample for testing prior to use. Choose recycled paper that gives the best printing results and contains low levels of paper dust.

We are not responsible for the problems occurred from the use of paper that does not conform to our specifications.

Choosing the Appropriate Paper

This section describes guidelines for choosing paper.

Condition

Avoid using paper with bent corners or that is curled, dirty, or torn. Do not use paper that has a rough surface or paper fiber lint, or that is especially delicate. Use of paper in any of these conditions will not only deliver poor copies but may also cause jams and shorten the useful life of the machine. Choose paper with a smooth and even surface; however, avoid coated paper or paper with a treated surface as it may damage the drum or fusing unit.

Ingredients

Do not use paper such as paper that has been coated or surface-treated or paper that contains plastic or carbon. Those types of paper may produce harmful fumes from the heat of printing and may damage the drum.

Be sure to use the standard paper that contains at least 80% pulp, i.e., not more than 20% of the total paper content consists of cotton or other fibers.

Supported Paper Sizes

Paper of the following sizes is supported by the machine.

Measurements in the table take into account a ± 0.7 mm dimensional accuracy for length and width. Corner angles must be $90^\circ \pm 0.2^\circ$.

Multi Purpose Tray	Cassette or Multi Purpose Tray
A6-R (105 × 148 mm)	A3 (297 × 420 mm)
B6-R (128 × 182 mm)	B4 (257 × 364 mm)
Hagaki (100 × 148 mm)	A4 (297 × 210 mm)
Oufukuhagaki (148 × 200 mm)	A4-R (210 × 297 mm)
Executive (7 1/4 × 10 1/2")	B5 (257 × 182 mm)
Envelope DL (110 × 220 mm)	B5-R (182 × 257 mm)
Envelope C5 (162 × 229 mm)	A5-R (148 × 210 mm)
Envelope C4 (229 × 324 mm)	Folio (210 × 330 mm)
ISO B5 (176 × 250 mm)	Ledger
Envelope #10 (4 1/8 × 9 1/2")	Legal
Envelope #9 (3 7/8 × 8 7/8")	Letter
Envelope #6 3/4 (3 5/8 × 6 1/2")	Letter-R
Envelope Monarch (3 7/8 × 7 1/2")	Statement-R
Youkei 2 (114 × 162 mm)	Oficio II
Youkei 4 (105 × 235 mm)	8K (273 × 394 mm)
Size Entry (98 × 148 to 297 × 432 mm)	16K (273 × 197 mm)
	16K-R (197 × 273 mm)
	216 × 340 mm

Smoothness

The paper surface should be smooth, but it must be uncoated. With paper that is too smooth and slippery, several sheets may accidentally be supplied at once, causing jams.

Basis Weight

In countries that use the metric system, basis weight is the weight in grams of one sheet of paper one square meter in area. In the United States, basis weight is the weight in pounds of one ream (500 sheets) of paper cut to the standard size (or trade size) for a specific grade of paper. Paper that is too heavy or too light may be supplied incorrectly or cause paper jams, which may cause excessive wear of the machine. Mixed paper weight (i.e., thickness) may cause several sheets to be supplied at once accidentally and may also cause blurring or other printing problems if the toner fails to adhere correctly.

Moisture Content

Paper moisture content is the ratio of moisture to dryness expressed as a percentage. Moisture affects how the paper is supplied, the electrostatic chargeability of the paper, and how the toner adheres.

Paper moisture content varies depending on the relative humidity in the room. High relative humidity causes paper to become damp, making the edges expand so it appears wavy. Low relative humidity causes paper to lose moisture, making the edges tighten and weakening print contrast.

Wavy or tight edges may cause the paper to slip when it is supplied. Try to keep the moisture content between 4 to 6%.

To maintain the right level of moisture content, bear in mind the following considerations.

- Store paper in a cool, well-ventilated place.
- Store paper flat and unopened in the package. Once the package is opened, reseal it if the paper is not to be used for a while.
- Store paper sealed in the original package and box. Put a pallet under the carton to keep it raised above the floor. Especially during rainy seasons keep the paper a sufficient distance away from wooden or concrete floors.
- Before using paper that has been stored, keep it at the proper moisture level for at least 48 hours.
- Do not store paper where it is exposed to heat, sunlight, or dampness.

Other Paper Specifications

Porosity: The density of the paper fibers

Stiffness: Paper must be stiff enough or it may buckle in the machine, causing jams.

Curl: Most paper naturally tends to curl after the package is opened. When paper passes through the fixing unit, it curls upward slightly. To deliver flat printouts, load the paper so that the curl faces towards the bottom of the paper tray.

Static electricity: During printing, paper is electrostatically charged so that the toner adheres. Choose paper that can be discharged quickly so that copies do not cling together.

Whiteness: Paper whiteness affects print contrast. Use whiter paper for sharper, brighter copies.

Quality: Machine problems may occur if sheet sizes are not uniform or if corners are not square, edges are rough, sheets are uncut, or edges or corners are crushed. In order to prevent these problems, be especially careful when you cut the paper yourself.

Packaging: Choose paper that is properly packaged and stacked in boxes. Ideally, the packaging itself should have been treated with a coating to inhibit moisture.

Specially treated paper: We do not recommend printing onto the following types of paper, even if it conforms to the basic specifications. When you use these kinds of paper, purchase a small amount first as a sample to test.

- Glossy paper
- Watermarked paper
- Paper with an uneven surface
- Perforated paper

Special Paper

This section describes printing onto special paper and print media.

The following paper and media can be used.

- Transparencies
- Preprinted paper
- Bond paper
- Recycled paper
- Thin paper (from 52 g/m² to 105 g/m² or less)
- Letterhead
- Colored paper
- Prepunched paper
- Envelopes
- Cardstocks (Hagaki)
- Thick paper (from 106 g/m² to 163 g/m² or less)
- Labels
- High-quality paper

When using these paper and media, choose those that are designed specifically for copiers or page printers (such as laser printers). Use the multi purpose tray for transparencies, envelopes, cardstocks, and label paper.

Choosing Special Paper

Although special paper that meets the following requirements can be used with the machine, print quality will vary considerably due to differences in the construction and quality of special paper. Thus, special paper is more likely than regular paper to cause printing problems. Before purchasing special paper in volume, try testing a sample to ensure the print quality is satisfactory. General precautions when printing onto special paper are given below. Note that we are not responsible for any harm to the user or damage to the machine caused by moisture or specifications of special paper.

Select a cassette or multi purpose tray for special paper.

Transparencies

Transparencies must be able to withstand the heat of printing. Transparencies must meet the following conditions.

Heat resistance	Must withstand at least 190°C
Thickness	0.100 to 0.110 mm
Material	Polyester
Dimensional accuracy	±0.7 mm
Squareness of corners	90° ±0.2°

To avoid problems, use the multi purpose tray for transparencies and load transparencies with the long side facing the machine.


If transparencies jam frequently at output, try pulling the leading edge of sheets gently as they are ejected.

Label

Be sure to feed labels from the multi purpose tray.

For selecting labels, use extreme care so that the adhesive may not come in direct contact with any part of the machine and that the labels are not easily peeled from the carrier sheet. Adhesives that stick to the drum or rollers and peeled labels remaining in the machine may cause a failure.


When printing onto labels, you must be liable for the print quality and possible trouble.

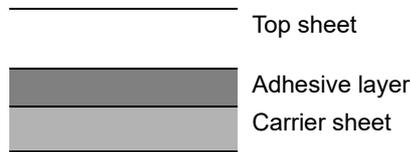

Labels consist of three layers as shown in the illustration. The adhesive layer contains materials that are easily affected by the force applied in the machine. The carrier sheet bears the top sheet until the label is used. This composition of labels may cause more problems.

The label surface must be covered completely with the top sheet. Gaps between labels may cause peeling of labels, resulting in a serious failure.


Some label paper has large margins on the top sheet. When using such paper, do not peel these margins from the carrier sheet before completing output.

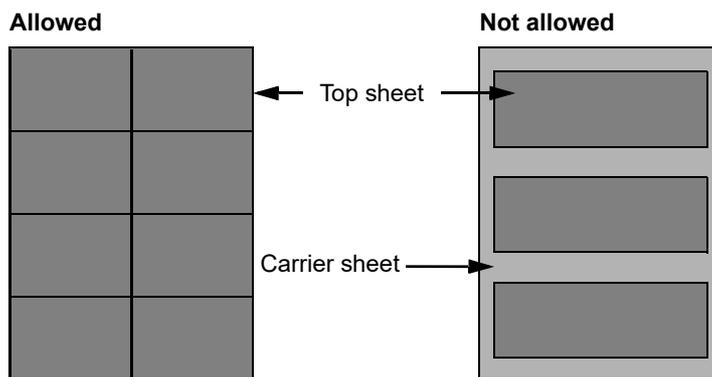

Use label paper that conforms to the following specifications.

Top sheet weight	44 to 74 g/m ²
Basis weight (overall paper weight)	104 to 151 g/m ²
Top sheet thickness	0.086 to 0.107 mm
Overall paper thickness	0.115 to 0.145 mm
Moisture content	4 to 6 % (composite)

Hagaki

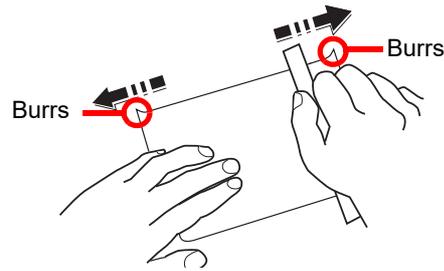

Before loading Hagaki into the multi purpose tray, fan them and align the edges. If the Hagaki paper is curled, straighten it before loading. Printing onto curled Hagaki may cause jams.

Use unfolded Oufukuhagaki (available at post offices). Some Hagaki may still have rough edges developed by a paper cutter on the back side. Remove any such rough edges by placing the Hagaki on a flat surface and rubbing the edges gently a few times with a ruler.

Envelopes

Use the multi purpose tray for envelopes.

Due to the structure of envelopes, printing evenly over the entire surface may not be possible in some cases. Thin envelopes in particular may be wrinkled by the machine in some cases as they pass through. Before purchasing envelopes in volume, try testing a sample to ensure the print quality.

Storing envelopes for a long period may cause them to become wrinkled. Thus, keep the package sealed until you are ready to use them.

Keep the following points in mind.

- Do not use envelopes with exposed adhesive. In addition, do not use the type of envelope in which the adhesive is exposed after the top layer is peeled off. Serious damage may be caused if the paper covering the adhesive comes off in the machine.
- Do not use envelopes with certain special features. For example, do not use envelopes with a grommet for winding a string to close the flap or envelopes with an open or film-covered window.
- If paper jams occur, load fewer envelopes at once.
- To prevent paper jams when printing onto multiple envelopes, do not allow more than ten envelopes to remain in the Inner tray at once.

Thick Paper

Before loading thick paper in the multi purpose tray, fan it and align the edges. Some thick paper may still have rough edges developed by a paper cutter on the back side. Remove any such rough edges just as with Hagaki by placing the paper on a flat surface and rubbing the edges gently a few times with a ruler. Printing onto paper with rough edges may cause jams.



NOTE

If the paper is not supplied correctly even after it is smoothed, load the paper in the multi purpose tray with the leading edge raised a few millimeters.

Colored Paper

Colored paper must conform to the specifications listed on [page 10-8](#). In addition, the pigments in the paper must be able to withstand the heat of printing (up to 200°C or 392°F).

Preprinted Paper

Preprinted paper must conform to the specifications listed on [page 10-8](#). The colored ink must be able to withstand the heat of printing. It must be resistant to silicone oil as well. Do not use paper with a treated surface such as glossy paper used for calendars.

Recycled Paper

Recycled paper must conform to the specifications listed on [page 10-8](#); however, its whiteness may be considered separately.



NOTE

Before purchasing recycled paper in volume, try testing a sample to ensure satisfactory print quality.

Specifications

✔ IMPORTANT

Specifications are subject to change without notice.

Common Functions

Item		Description
Type		Desktop
Printing Method		Electrophotography by semiconductor laser, single drum system
Paper Weight	Cassette	64 to 105 g/m ²
	Multi Purpose Tray	45 to 160 g/m ² , 230 g/m ² (Cardstock)
Paper Type	Cassette	Plain, Rough, Vellum, Recycled, Preprinted, Bond, Color (Colour), Prepunched, Letterhead, Thick, High Quality, Custom 1 to 8
	Multi Purpose Tray	Plain, Transparency (OHP film), Rough, Vellum, Labels, Recycled, Preprinted, Bond, Cardstock, Color (Colour), Prepunched, Letterhead, Envelope, Thick, High Quality, Custom 1 to 8
Paper Size	Cassette	A3, B4, A4, A4-R, B5, B5-R, A5-R, Ledger, Legal, Oficio II, Letter-R, Letter, Statement-R, Folio, 8K, 16K, 16K-R, 216 × 340 mm
	Multi Purpose Tray	A3, B4, A4, A4-R, B5, B5 (ISO), B5-R, A5-R, B6-R, A6-R, Envelope DL, Envelope C5, Envelope C4, Envelope #10, Envelope #9, Envelope #6 3/4, Envelope Monarch, Ledger, Legal, Oficio II, Letter, Letter-R, Statement-R, Executive, Folio, 216 × 340 mm, 8K, 16K, 16K-R, Size Entry (Metric: X; 148 to 432 mm (in 1 mm increments), Y; 98 to 297 mm (in 1 mm increments), Inch: X; 5.83 to 17.00" (in 0.01" increments), Y; 3.86 to 11.69" (in 0.01" increments))
Warm-up Time (22°C/71.6°F, 60%)	Power on	18.8 seconds or less
	Sleep	11 seconds or less
Paper Capacity	Cassette	300 sheets (80 g/m ²)
	Multi Purpose Tray	A4/Letter or less: 100 sheets (80 g/m ²) More than A4/Letter: 25 sheets (80 g/m ²)
Output Tray Capacity		250 sheets (80 g/m ²)
Image Write System		Semiconductor laser and electrophotography
Main Memory		256 MB
Interface	Standard	USB Interface Connector: 1 (USB Hi-Speed)
	Option	Fax: 1 Network interface: 1 (10 BASE-T/100 BASE-TX) Depends on regions, equipped as standard.
Operating Environment	Temperature	10 to 32.5°C/50 to 90.5°F
	Humidity	10 to 80 %
	Altitude	3,500 m/11,482.8 ft maximum
	Brightness	1,500 lux maximum
Dimension (W × D × H) (with original cover)		22 1/4 × 20 3/4 × 19 1/8" 565 × 527 × 485 mm
Weight (with toner container)		57.2 lb/26 kg

Item	Description
Space Required (W × D) (Using multi purpose tray)	32 5/8 × 20 3/4" 829 × 527 mm
Power Source	220-240 V ~ 50/60 Hz 6.3 A
The power consumption of the product in networked standby (If all network ports are connected.)	The information is available at the website below. https://www.kyoceradocumentsolutions.eu/en/about-us/our-brand/environmental-policy.html
Options	Refer to Optional Equipment on page 10-2 .

Copy Functions

Item	Description
Copy Speed	TASKalfa 2321 TASKalfa 2021
	feed from Cassette
	A4 23 sheets/min 20 sheets/min
	Letter 22 sheets/min 20 sheets/min
	A4-R/Letter-R 13 sheets/min 13 sheets/min
	A3/Ledger 10 sheets/min 10 sheets/min
	B4/Legal 11 sheets/min 11 sheets/min
	B5 23 sheets/min 20 sheets/min
	B5-R 13 sheets/min 13 sheets/min
	A5-R 10 sheets/min 10 sheets/min
	feed from Multi Purpose Tray
	A4 16 sheets/min 16 sheets/min
	Letter 16 sheets/min 16 sheets/min
	A4-R/Letter-R 11 sheets/min 11 sheets/min
	A3/Ledger 9 sheets/min 9 sheets/min
	B4/Legal 10 sheets/min 10 sheets/min
B5 16 sheets/min 16 sheets/min	
B5-R 11 sheets/min 11 sheets/min	
A5-R 9 sheets/min 9 sheets/min	
A6-R 9 sheets/min 9 sheets/min	
First Copy Time (A4, feed from Cassette)	5.7 seconds or less
Zoom Level	Manual mode: 25 to 400%, 1% increments Auto mode: Preset Zoom
Continuous Copying	1 to 999 sheets
Resolution	600 × 600 dpi
Supported Original Types	Sheet, Book, 3-dimensional objects (maximum original size: Ledger/A3)
Original Feed System	Fixed

Printer Functions

Item	Description
Printing Speed	Same as Copying Speed.
First Print Time (A4, feed from Cassette)	5.7 seconds or less
Resolution	600 × 600 dpi, Fast 1200 dpi
Operating System	Windows 8.1, Windows 10, Windows Server 2012/R2, Windows Server 2016, Windows Server 2019, Mac OS 10.5 or later
Interface	USB Interface Connector: 1 (USB Hi-Speed) Network interface: 1 (10 BASE-T/100 BASE-TX) Depends on regions, it is optional.
Page Description Language	Hostbased (GDI)

Scanner Functions

Item	Description
Resolution	B/W: 600 dpi, 400 dpi, 300 dpi, 200 dpi Color, Grayscale: 300 dpi, 200 dpi
File Format	TIFF (MMR/JPEG compression), PDF (MMR/JPEG compression/high compression), JPEG, BMP, PNG
Scanning Speed	1-sided 14 Images/min 2-sided B/W 8 Images/min Color 6 Images/min (A4 landscape, Image quality: Text/Photo original)
Interface	USB Interface Connector: 1 (USB Hi-Speed) Network interface: 1 (10 BASE-T/100 BASE-TX)

Document Processor (Reverse Automatic) (Option)

Item	Description
Original Feed Method	Automatic feed
Supported Original Types	Sheet originals
Paper Size	Maximum: Ledger/A3 Minimum: Statement-R/A5-R
Paper Weight	1-sided: 45 to 120 g/m ² 2-sided: 50 to 120 g/m ²
Loading Capacity	50 sheets (50 to 80 g/m ²) maximum When originals have different widths: 30 sheets (50 to 80 g/m ²) maximum
Dimensions (W) × (D) × (H)	22 3/16 × 17 1/4 × 5" 563 × 439 × 128 mm
Weight	13.2 lbs. or less /6 kg or less

Paper Feeder (300-sheet) (Option)

Item	Description
Paper Supply Method	Automatic Feeding (No. Sheets: 300, 80 g/m ²)
Paper Size	A3, B4, A4, A4-R, B5, B5-R, A5-R, Ledger, Legal, Oficio II, Letter-R, Letter, Statement-R, Folio, 8K, 16K, 16K-R, 216 × 340 mm
Supported Paper	Paper weight: 64 to 105 g/m ² Media types: Plain, Rough, Vellum, Recycled, Preprinted, Bond, Color (Colour), Prepunched, Letterhead, Thick, High Quality, Custom 1 to 8
Dimensions (W) × (D) × (H)	22 1/4 × 20 1/2 × 5 7/8" 565 × 520 × 148.5 mm
Weight	13.2 lbs. / 6 kg

Duplex Unit (Option)

Item	Description
Paper Size	A3, B4, A4, A4-R, B5, B5-R, A5-R, Ledger, Legal, Oficio II, Letter-R, Letter, Statement-R, Executive, Folio, 216 × 340 mm
Supported Paper	Paper weight: 64 to 105 g/m ² Media types: Plain, Rough, Recycled, Preprinted, Bond, Color (Colour), Prepunched, Letterhead, Thick, High Quality, Custom 1 to 8
Dimensions (W) × (D) × (H)	14 3/4 × 2 3/8 × 8 5/8" 375 × 60 × 220 mm
Weight	Approx. 2.2 lbs. / Approx. 1 kg

Network Interface Kit (Option)

Item	Description
Connectors	10Base-T/100Base-TX
Printer Interface	RMII (3.3V)
Operating Conditions	-10 to 35°C, 15 to 80 % RH, no condensation
Storage Conditions	-20 to 55°C, 10 to 90 % RH, no condensation
EMI Conformity	CE (EU)



NOTE

Consult your dealer or service representative for recommended paper types.

Glossary

Auto Form Feed Timeout

During data transmission, the machine may sometimes have to wait until receiving the next data. This is the auto form feed timeout. When the preset timeout passes, the machine automatically prints output. However, no output is performed if the last page has no data to be printed.

Auto Paper Selection

A function to automatically select paper in the same size as originals when printing

Bonjour

Bonjour, also known as zero-configuration networking, is a service that automatically detects computers, devices and services on an IP network. Bonjour, because an industry-standard IP protocol is used, allows devices to automatically recognize each other without an IP address being specified or DNS server being set. Bonjour also sends and receives network packets by UDP port 5353. If a firewall is enabled, the user must check that UDP port 5353 is left open so that Bonjour will run correctly. Some firewalls are set up so as to reject only certain Bonjour packets. If Bonjour does not run stably, check the firewall settings and ensure that Bonjour is registered on the exceptions list and that Bonjour packets are accepted. If you install Bonjour, the Windows firewall will be set up correctly for Bonjour.

Default Gateway

This indicates the device, such as a computer or router, that serves as the entrance/exit (gateway) for accessing computers outside the network that you are on. When no specific gateway is designated for a destination IP address, data is sent to the host designated as the Default Gateway.

DHCP (Dynamic Host Configuration Protocol)

Dynamic Host Configuration Protocol (DHCP) that automatically resolves IP addresses, subnet masks, and gateway addresses on a TCP/IP network. DHCP minimizes the load of network management employing a large number of client computers because it relieves individual clients including printers from the IP address being assigned.

DHCP (IPv6)

DHCP (IPv6) is the next-generation of the Internet's Dynamic Host Configuration Protocol and supports IPv6. It extends the BOOTP startup protocol that defines the protocols used for transferring configuration information to hosts on the network. DHCP (IPv6) permits the DHCP server to use its expanded functionality to send configuration parameters to an IPv6 node. Because the network addresses that can be used are allocated automatically, the IPv6 node management workload is reduced in systems where the administrator has to exercise close control over IP address allocation.

dpi (dots per inch)

A unit for resolution, representing the number of dots printed per inch (25.4 mm).

EcoPrint Mode

A printing mode that helps save toner. Copies made in this mode are thus lighter than normal.

Grayscale

A computer color expression. Displayed images of this sort are typically composed of shades of gray, varying from black at the weakest intensity to white at the strongest, without any other colors. Gray levels are displayed in numerical levels: that is, white and black only for 1 bit; 256 gray levels (including white and black) for 8 bits; and 65,536 gray levels for 16 bits.

IP Address

An Internet protocol address is a unique number that represents a specific computer or related device on the network. The format of an IP address is four sets of numbers separated by dots, e.g. 192.168.110.171. Each number should be between 0 and 255.

Multi Purpose (MP) Tray

The paper supply tray on the right side of the machine. Use this tray instead of the cassettes when printing onto envelopes, Hagaki, transparencies, or labels.

PDF/A

This is "ISO 19005-1. Document management - Electronic document file format for long-term preservation - Part 1: Use of PDF (PDF/A)", and is a file format based on PDF 1.4. It has been standardized as ISO 19005-1, and is a specialization of PDF, which has been mainly used for printing, for long-term storage. A new part, ISO 19005-2 (PDF/A-2), is currently being prepared.

PPM (prints per minute)

This indicates the number of A4 size printouts made in one minute.

Printer Driver

The software to enable you to print data created on any application software. The printer driver for the machine is contained in the Product Library disk enclosed in the package. Install the printer driver on the computer connected to the machine.

RA (Stateless)

The IPv6 router communicates (transmits) information such as the global address prefix using ICMPv6. This information is the Router Advertisement (RA). ICMPv6 stands for Internet Control Message Protocol, and is a IPv6 standard defined in the RFC 2463 "Internet Control Message Protocol (ICMPv6) for the Internet Protocol Version 6 (IPv6) Specification".

Sleep Timer

A mode designed for electrical power saving, activated when the machine is left unused or there is no data transfer for a specific period. In Sleep mode, power consumption is kept to a minimum.

Status Page

The page lists machine conditions, such as the memory capacity, total number of prints and scans, and paper source settings.

Subnet Mask

The subnet mask is a way of augmenting the network address section of an IP address. A subnet mask represents all network address sections as 1 and all host address sections as 0. The number of bits in the prefix indicates the length of the network address. The term "prefix" refers to something added to the beginning and, in this context, indicates the first section of the IP address. When an IP address is written, the length of the network address is indicated by the prefix length after a forward slash (/). For example, "24" in the address "133.210.2.0/24". In this way, "133.210.2.0/24" denotes the IP address "133.210.2.0" with a 24-bit prefix (network section). This new network address section (originally part of the host address) made possible by the subnet mask is referred to as the subnet address. When you enter the subnet mask, be sure to set the "DHCP" setting to "Off".

TCP/IP (Transmission Control Protocol/Internet Protocol)

TCP/IP is a suite of protocols designed to define the way computers and other devices communicate with each other over a network.

TCP/IP (IPv6)

TCP/IP (IPv6) is based on the current Internet protocol, TCP/IP (IPv4). IPv6 is the next-generation Internet protocol and expands the available address space, which resolves the problem of the lack of addresses under IPv4, while also introducing other improvements such as additional security functionality and the capacity to prioritize data transmission.

TWAIN (Technology Without An Interesting Name)

A technical specification for connecting scanners, digital cameras, and other image equipment to computers. The TWAIN compatible devices enable you to process image data on any relevant application software. TWAIN is adopted on a large amount of graphic software (e.g. Adobe Photoshop) and OCR software.

USB (Universal Serial Bus) 2.0

A USB interface standard for Hi-Speed USB 2.0. The maximum transfer rate is 480 Mbps. This machine is equipped with USB 2.0 for high-speed data transfer.

WIA (Windows Imaging Acquisition)

A function to import images from digital cameras and other peripheral devices. This function replaces what TWAIN used to do. The feature is provided as a part of Windows functions and improves ease of operation, so that you import images directly to My Computer without using any application.

Index

Numerics

- 2 in 1 Layout 5-18
 - Default 7-19
- 4 in 1 Layout 5-18
 - Default 7-19

A

- Adjustment/Maintenance 7-21
- Admin/Accounting
 - Administrator Setting 2-11
 - Job Accounting 8-1
 - Unknown ID Job 8-16
- Administrator Setting 2-11
- Auto % Priority 7-20
- Auto Detect Original Size 7-13
- Auto Error Clear 7-18
- Auto Form Feed Timeout 10-20
- Auto Panel Reset 7-18
- Auto Paper Selection 7-20, 10-20
- Auto Rotation 5-26
 - Default 7-19
- Auto-IP
 - Settings 7-6
- Automatic 2-Sided Copy Function 1-7

B

- Background Density 5-23, 7-21
 - Default 7-19
- Bonjour 10-20
 - Settings 2-18, 7-7
- Book Original Binding 5-16
 - Default 7-19
- Border Erase 5-25
 - Default 7-19
- Border Line 5-17
 - Default 7-19
- Buzzer 7-11

C

- Canceling Jobs 6-10
 - Copy 5-31
 - Printer 4-6
 - Scan 5-43
- Cassette
 - Loading Paper 3-7
 - Paper Size and Media Type 3-13
- Cassette 1 2-2
 - Paper Jams 9-17
- Cassette 1 (to 4) Settings 7-12, 7-14
 - Cassette 1 (to 4) Size 7-14
 - Cassette 1 (to 4) Type 7-14
- Cassette 1 (to 4) Size 7-14
- Cassette 1 (to 4) Type 7-14
- Cassette Settings 3-13
- Cassettes 2 to 4 2-5
 - Paper Jams 9-17

- Character Entry Method 10-4
- Checking the Counter 2-44
- Checking the Remaining Amount of Toner 6-13
- Cleaning
 - Original Cover/Glass Platen 9-2
 - Slit Glass 9-2
- Cleaning Cloth Compartment 2-3
- Collate/Offset 5-20
 - Default 7-18
- Colored Paper 10-14
- Combine 5-17
- Common Settings 7-10
 - Date Setting 7-17
 - Default Screen 7-10
 - Display Brightness 7-11
 - Error Handling 7-16
 - Function Defaults 7-18
 - Language 7-10
 - Measurement 7-16
 - Original/Paper Settings 7-12
 - Preset Limit 7-16
 - Quiet Mode 7-11
 - Sound 7-11
 - Timer Setting 7-17
- Configuration 7-25
- Connecting
 - LAN Cable 2-8
 - Power Cable 2-8
 - USB Cable 2-7
- Connection Method 2-6
- Continuous Scan 5-26
 - Default 7-19
- Conventions Used in This Guide xiii
- Copy 5-6
- Copy Speed 10-17
- Copying Settings 7-20
 - Auto % Priority 7-20
 - Auto Paper Selection 7-20
 - Paper Selection 7-20
 - Select Key Setting 7-20
- Correcting Black Line 7-21
- Counting the Number of Pages Printed
 - Counter 2-44
 - Each Job Accounting 8-19
 - Print Accounting Report 8-20
 - Total Job Accounting 8-19
 - Unknown ID Job 8-16
- Custom Original Size 7-12
- Custom Paper Size 7-12

D

- Date Format 7-17
- Date Setting 2-13, 7-17
 - Date Format 7-17
 - Date/Time 7-17
 - Summer Time 7-17
 - Time Zone 7-17
- Date/Time 7-17
- Default Gateway 10-20
 - Settings 7-6

- Default Paper Source [7-13](#)
- Default Screen [7-10](#)
- Defaults [7-18](#)
- Density [5-14](#)
- Density Adjustment [7-21](#)
- Device [6-12](#)
- DHCP [10-20](#)
 - Settings [7-6](#)
- DHCP (IPv6) [10-20](#)
 - Settings [7-7](#)
- Display Brightness [7-11](#)
- Document Processor [2-2](#), [2-5](#), [10-3](#)
 - How to Load Originals [5-3](#)
 - Loading Originals [5-3](#)
 - Originals Not Supported by the Document Processor [5-3](#)
 - Originals Supported by the Document Processor [5-3](#)
 - Part Names [2-2](#)
- dpi [10-20](#)
- Drum Refresh [7-21](#)
- Duplex [5-14](#)
- Duplex Paper Error [7-16](#)
- Duplex Unit [2-5](#), [10-3](#)

E

- EcoPrint [5-23](#), [10-20](#)
 - Default [7-19](#)
- Energy Saving Control Function [1-7](#)
- Enhanced WSD
 - Protocol Settings [7-8](#)
- EnhancedWSD (SSL)
 - Protocol Settings [7-8](#)
- Entry
 - File Name [5-26](#)
- Envelopes [10-14](#)
- Environment [1-3](#)
- Error Clear Timer [7-17](#)
- Error Handling [7-16](#)
 - Duplex Paper Error [7-16](#)
 - Paper Mismatch Error [7-16](#)

F

- FAX Kit [10-3](#)
- File Name Entry [5-26](#)
 - Default [7-19](#)
- Finishing Binding [5-15](#), [5-16](#)
 - Default [7-19](#)
- First Copy Time [10-17](#)
- First Print Time [10-18](#)
- Form Feed Timeout [7-20](#)
- Front Cover [2-2](#)

G

- Glossary [10-20](#)
- Grayscale [10-21](#)
- Guides Provided with the Machine [xi](#)

H

- Hagaki [10-14](#)
- Handles [2-2](#)
- HTTP
 - Protocol Settings [7-8](#)
- HTTPS
 - Protocol Settings [7-8](#)

I

- ID Card Copy [5-9](#)
- Inner Tray [2-2](#)
- Install
 - Mac [2-34](#)
 - Software [2-26](#)
 - Windows [2-27](#)
- Interface Block Setting [7-9](#)
- Interrupt Clear [7-17](#)
- Interrupt Copy [5-8](#)
- IP Address [10-21](#)
 - Settings [7-6](#)
- IPP
 - Protocol Settings [7-8](#)
- IPP over SSL
 - Protocol Settings [7-8](#)

J

- Job
 - Available Status [6-2](#)
 - Canceling [6-10](#)
 - Checking History [6-6](#)
 - Checking Status [6-2](#)
 - Displaying History Screen [6-6](#)
 - Displaying Status Screens [6-2](#)
 - Pause and Resumption [6-9](#)
- Job Accounting
 - Adding an Account [8-5](#)
 - Copy/Print Count [8-17](#)
 - Counting the Number of Pages Printed [8-19](#)
 - Default Setting [8-17](#)
 - Deleting an Account [8-9](#)
 - Editing an Account [8-8](#)
 - Enabling Job Accounting [8-4](#)
 - FAX Driver [8-15](#)
 - Login [8-22](#)
 - Logout [8-22](#)
 - Overview of Job Accounting [8-2](#)
 - Password Protect Administrator Settings [8-22](#)
 - Print Accounting Report [8-20](#)
 - Printer Driver [8-12](#)
 - Restricting the Use of the Machine [8-7](#)
 - Settings when Sharing the Printer [8-10](#)
 - TWAIN [8-13](#)
 - Unknown ID Job [8-16](#)
 - WIA [8-14](#)

K

- KYOCERA Client Tool [7-22](#)

-
- L**
 - Label [10-13](#)
 - LAN Cable
 - Connecting [2-8](#)
 - LAN Interface [7-9](#)
 - Language [7-10](#)
 - Legal Information [1-6](#)
 - Legal Restriction on Copying [1-5](#)
 - Legal Restriction on Scanning [1-5](#)
 - Loading Originals
 - Loading Originals in the Document Processor [5-3](#)
 - Placing Originals on the Platen [5-2](#)
 - Login Password [2-10](#)
 - Login User Name [2-10](#)
 - LPD
 - Protocol Settings [7-8](#)
 - M**
 - Manual Settings (IPv6)
 - Settings [7-7](#)
 - Margin [5-24](#)
 - Default [7-19](#)
 - Measurement [7-16](#)
 - Media for Auto [7-13](#)
 - Media Type Setting [7-12](#), [7-15](#)
 - Mixed Size Originals [5-23](#)
 - MP Tray Settings [7-12](#), [7-14](#)
 - MP Tray Size [7-14](#)
 - MP Tray Type [7-14](#)
 - MP Tray Size [7-14](#)
 - MP Tray Type [7-14](#)
 - Multi Purpose Tray [2-3](#), [10-21](#)
 - Loading Paper [3-10](#)
 - Paper Size and Media Type [3-15](#)
 - N**
 - Network
 - Preparation [2-15](#)
 - Setting [7-6](#)
 - Network Interface [2-6](#)
 - Network Interface Kit [10-3](#)
 - O**
 - Operation Panel [2-2](#), [3-2](#)
 - Option
 - Document Processor [10-3](#)
 - Duplex Unit [10-3](#)
 - FAX Kit [10-3](#)
 - Network Interface Kit [10-3](#)
 - Original Cover [10-3](#)
 - Overview [10-2](#)
 - Paper Feeder (300-sheet) [10-3](#)
 - Option Interface Slot 1 [2-4](#)
 - Original
 - Auto Detect Original Size [7-13](#)
 - Custom [7-12](#)
 - Settings [7-12](#)
 - Size [xv](#)
 - Original Binding [5-16](#)
 - Default [7-19](#)
 - Original Cover [2-5](#), [10-3](#)
 - Original Eject Table [2-2](#)
 - Original Image [5-14](#)
 - Default [7-18](#)
 - Original Orientation [5-22](#)
 - Default [7-18](#)
 - Original Size [5-22](#)
 - Original Size Indicator Plates [2-2](#)
 - Original Stopper [2-3](#)
 - Original Table [2-2](#)
 - Original Width Guides [2-2](#)
 - Original/Paper Settings
 - Auto Detect Original Size [7-13](#)
 - Cassette 1 (to 4) Settings [7-12](#)
 - Custom Original Size [7-12](#)
 - Custom Paper Size [7-12](#)
 - Default Paper Source [7-13](#)
 - Media for Auto [7-13](#)
 - Media Type Settings [7-12](#)
 - MP Tray Settings [7-12](#)
 - Special Paper Action [7-13](#)
 - P**
 - Panel Reset Timer [7-17](#)
 - Paper
 - Appropriate Paper [10-9](#)
 - Cassette [7-14](#)
 - Checking the Remaining Amount of Paper [6-13](#)
 - Custom Paper Size [7-12](#)
 - Default Paper Source [7-13](#)
 - Loading Envelopes [3-12](#)
 - Loading Paper [3-5](#)
 - Loading Paper in the Cassettes [3-7](#)
 - Loading Paper in the Multi Purpose Tray [3-10](#)
 - Media Type Setting [7-15](#)
 - MP Tray [7-14](#)
 - Precaution for Loading Paper [3-6](#)
 - Size and Media Type [3-13](#), [7-12](#), [10-8](#)
 - Special Paper [10-12](#)
 - Special Paper Action [7-13](#)
 - Specifications [10-8](#)
 - Weight [7-15](#)
 - Paper Feeder (300-sheet) [10-3](#)
 - Paper Jams [9-16](#)
 - Cassette 1 [9-17](#)
 - Cassettes 2 to 4 [9-17](#)
 - Document Processor [9-19](#)
 - Inside Right Cover 1 [9-18](#)
 - Inside Right Covers 2 or 3 [9-19](#)
 - Jam Location [9-16](#)
 - Multi Purpose Tray [9-17](#)
 - Paper Length Guide [2-3](#), [3-8](#)
 - Paper Mismatch Error [7-16](#)
 - Paper Selection [7-20](#)
 - Paper Width Adjusting Tab [2-3](#), [3-8](#)
 - Paper Width Guide [2-3](#), [3-8](#)
 - Part Names [2-2](#)
 - PDF/A [10-21](#)

- Platen [2-2](#)
- Power Cable
 - Connecting [2-8](#)
- Power Management [1-7](#)
- Power Off [2-9](#)
- Power Off Mode [1-7](#)
- Power Off Rule [2-22](#), [7-18](#)
- Power Off Timer [2-22](#), [2-23](#), [7-18](#)
- Power On [2-9](#)
- Power Switch [2-2](#)
- PPM [10-21](#)
- Precautions for Use [1-3](#)
- Preprinted Paper [10-15](#)
- Preset Limit [7-16](#)
- Print Box [4-8](#)
 - Flow of Operations of Print Box [4-8](#)
 - Printing Document from Print Box [4-13](#)
 - Saving Document to a Print Box [4-12](#)
 - Settings [7-32](#)
- Print Density [7-21](#)
- Print Settings [4-5](#)
- Printer [7-20](#)
 - Form Feed Timeout [7-20](#)
- Printer Driver [10-21](#)
 - Help [4-6](#)
- Printing
 - Print Settings [4-5](#)
 - Printing from PC [4-2](#)
- Printing from PC [4-2](#)
- Printing Speed [10-18](#)
- Product Library [xi](#)
- Program [5-27](#)
 - Changing the Program Name [5-29](#)
 - Confirming [5-28](#)
 - Deleting [5-30](#)
 - Overwriting [5-29](#)
 - Recalling [5-28](#)
 - Registering [5-27](#)

Q

- Quick Scan [5-41](#)
 - Settings [7-29](#)
- Quiet Mode [7-11](#)

R

- RA (Stateless) [10-21](#)
 - Settings [7-7](#)
- RAW Port
 - Protocol Settings [7-8](#)
- Recycled Paper [10-15](#)
- Regarding Trade Names [1-6](#)
- Regular Maintenance [9-2](#)
 - Cleaning [9-2](#)
 - Toner Container Replacement [9-3](#)
 - Waste Toner Box Replacement [9-6](#)
- Report
 - Accounting Report [8-20](#)
 - Report Print [7-5](#)

- Report Print
 - Menu Map [7-5](#)
 - Network Status [7-5](#)
 - Service Status [7-5](#)
 - Status Page [7-5](#)
- Resolution [10-17](#), [10-18](#)
- Resource Saving - Paper [1-7](#)
- Responding to Messages [9-11](#)
- Restart Network [7-9](#)
- Right Cover 1 [2-3](#)
- Right Cover 1 Lever [2-3](#)
- Right Covers 2 to 4 [2-5](#)

S

- Safety Conventions in This Guide [1-2](#)
- Scan Color [7-26](#), [7-29](#)
- Scan Destination Settings [7-26](#)
- Scan Resolution [7-27](#), [7-29](#)
- Scanning [5-33](#)
 - Flow of Scan Operations [5-33](#)
 - Scan the Image by Selecting the Destination (Quick Scan) [5-41](#)
 - Scan the Image to the Specified Destination [5-38](#)
 - TWAIN [5-42](#)
- Select Key Setting [7-20](#)
- Serial Number [5-5](#)
- Service Setting [7-21](#)
 - Drum Refresh [7-21](#)
- Setting the Shared Printer [2-33](#)
- Sleep [1-7](#), [2-20](#)
- Sleep Timer [2-20](#), [7-17](#), [10-21](#)
- Slit Glass [2-2](#)
- SMTP
 - Protocol Settings [7-8](#)
- SNMP
 - Protocol Settings [7-8](#)
- SNMPv3
 - Protocol Settings [7-8](#)
- Solving Malfunctions [9-8](#)
- Sound [7-11](#)
 - Buzzer [7-11](#)
- Special Paper Action [7-13](#)
- Specifications [10-16](#)
 - Common Functions [10-16](#)
 - Copy Functions [10-17](#)
 - Document Processor [10-18](#)
 - Duplex Unit [10-19](#)
 - Network Interface Kit [10-19](#)
 - Paper Feeder (300-sheet) [10-19](#)
 - Printer Functions [10-18](#)
 - Scanner Functions [10-18](#)
- SSL
 - Settings [7-8](#)

Status
 KYOCERA Client Tool [6-14](#)
 Paper Status [6-13](#)
 Print Job Log [6-6](#)
 Print Job Status [6-2](#)
 Printer [6-12](#)
 Scanner [6-12](#)
 Send Job Log [6-6](#)
 Toner Status [6-13](#)
Status Page [10-21](#)
Subnet Mask [10-22](#)
 Settings [7-6](#)
Summer Time [7-17](#)
Supplies
 Checking the Remaining Amount [6-13](#)
Support Tray Section of the Multi Purpose Tray [2-3](#)
Symbols [1-2](#)
System [7-6](#)
 Interface Block Setting [7-9](#)
 Network Setting [7-6](#)
System Menu [7-2](#)

Waste Toner Box Replacement [9-6](#)
WIA [10-22](#)
 Setting WIA Driver [2-43](#)
WSD-PRINT
 Protocol Settings [7-8](#)

Z
Zoom [5-21](#)
 Default [7-18](#)

T

TCP/IP [10-22](#)
 Settings [7-6](#)
TCP/IP (IPv4)
 Settings [7-6](#)
 Setup [2-15](#)
TCP/IP (IPv6) [10-22](#)
 Settings [7-7](#)
Thick Paper [10-14](#)
Time Zone [7-17](#)
Timer Setting [7-17](#)
 Auto Error Clear [7-18](#)
 Auto Panel Reset [7-18](#)
 Error Clear Timer [7-17](#)
 Interrupt Clear [7-17](#)
 Panel Reset Timer [7-17](#)
 Power Off Rule [7-18](#)
 Power Off Timer [7-18](#)
 Sleep Timer [7-17](#)
Toner Container [2-4](#)
Toner Container Lever [2-4](#)
Toner Container Replacement [9-3](#)
Transparencies [10-12](#)
TWAIN [10-22](#)
 Scanning using TWAIN [5-42](#)
 Settings [7-29](#)

U

Unknown ID Job [8-16](#)
USB [10-22](#)
USB Cable
 Connecting [2-7](#)
USB Interface [2-6](#)
USB Interface Connector [2-4](#)

W

Waste Toner Box [2-4](#)

**QUALITY
CERTIFICATE**

This machine has passed
all quality controls and
final inspection

KYOCERA Document Solutions America, Inc.**Headquarters**

225 Sand Road,
Fairfield, New Jersey 07004-0008, USA
Phone: +1-973-808-8444
Fax: +1-973-882-6000

Latin America

8240 NW 52nd Terrace, Suite 301
Miami, Florida 33166, USA
Phone: +1-305-421-6640
Fax: +1-305-421-6666

KYOCERA Document Solutions Canada, Ltd.

6120 Kestrel Rd., Mississauga, ON L5T 1S8,
Canada
Phone: +1-905-670-4425
Fax: +1-905-670-8116

KYOCERA Document Solutions**Mexico, S.A. de C.V.**

Calle Arquimedes No. 130, 4 Piso, Colonia Polanco
Chapultepec, Delegacion Miguel Hidalgo,
Ciudad de Mexico, C.P. 11560
Phone: +52-555-383-2741
Fax: +52-555-383-7804

KYOCERA Document Solutions Brazil, Ltda.

Alameda África, 545, Pólo Empresarial Consbrás,
Tamboré, Santana de Parnaíba, State of São Paulo, CEP
06543-306, Brazil
Phone: +55-11-2424-5353
Fax: +55-11-2424-5304

KYOCERA Document Solutions Chile SpA

Jose Ananias 505, Macul. Santiago, Chile
Phone: +56-2-2670-1900
Fax: +56-2-2350-7150

KYOCERA Document Solutions**Australia Pty. Ltd.**

Level 3, 6-10 Talavera Road North Ryde N.S.W, 2113,
Australia
Phone: +61-2-9888-9999
Fax: +61-2-9888-9588

KYOCERA Document Solutions**New Zealand Ltd.**

Ground Floor, 19 Byron Avenue, Takapuna, Auckland,
New Zealand
Phone: +64-9-415-4517
Fax: +64-9-415-4597

KYOCERA Document Solutions Asia Limited

13/F., Mita Centre, 552-566, Castle Peak Road Tsuen Wan,
New Territories, Hong Kong
Phone: +852-2496-5678
Fax: +852-2610-2063

KYOCERA Document Solutions**(China) Corporation**

8F, No. 288 Nanjing Road West, Huangpu District,
Shanghai, 200003, China
Phone: +86-21-5301-1777
Fax: +86-21-5302-8300

KYOCERA Document Solutions**(Thailand) Corp., Ltd.**

335 Ratchadapisek Road, Wongsawang, Bangsue,
Bangkok 10800,
Thailand
Phone: +66-2-586-0333
Fax: +66-2-586-0278

KYOCERA Document Solutions**Singapore Pte. Ltd.**

12 Tai Seng Street #04-01A,
Luxasia Building, Singapore 534118
Phone: +65-6741-8733
Fax: +65-6748-3788

KYOCERA Document Solutions**Hong Kong Limited**

16/F., Mita Centre, 552-566, Castle Peak Road Tsuen Wan,
New Territories, Hong Kong
Phone: +852-3582-4000
Fax: +852-3185-1399

KYOCERA Document Solutions**Taiwan Corporation**

6F., No.37, Sec. 3, Minquan E. Rd.,
Zhongshan Dist., Taipei 104, Taiwan R.O.C.
Phone: +886-2-2507-6709
Fax: +886-2-2507-8432

KYOCERA Document Solutions Korea Co., Ltd.

#10F Daewoo Foundation Bldg 18, Toegye-ro, Jung-gu,
Seoul, Korea
Phone: +822-6933-4050
Fax: +822-747-0084

KYOCERA Document Solutions**India Private Limited**

Second Floor, Centrum Plaza, Golf Course Road,
Sector-53, Gurugram, Haryana 122002, India
Phone: +91-0124-4671000
Fax: +91-0124-4671001

KYOCERA Document Solutions Europe B.V.

Bloemlaan 4, 2132 NP Hoofddorp,
The Netherlands
Phone: +31(0)20-654-0000
Fax: +31(0)20-653-1256

KYOCERA Document Solutions Nederland B.V.

Beechavenue 25, 1119 RA Schiphol-Rijk,
The Netherlands
Phone: +31-20-5877200
Fax: +31-20-5877260

KYOCERA Document Solutions (U.K.) Limited

Eldon Court, 75-77 London Road,
Reading, Berkshire RG1 5BS,
United Kingdom
Phone: +44-118-931-1500
Fax: +44-118-931-1108

KYOCERA Document Solutions Italia S.p.A.

Via Monfalcone 15, 20132, Milano, Italy,
Phone: +39-02-921791
Fax: +39-02-92179-600

KYOCERA Document Solutions Belgium N.V.

Sint-Martinusweg 199-201 1930 Zaventem,
Belgium
Phone: +32-2-7209270
Fax: +32-2-7208748

KYOCERA Document Solutions France S.A.S.

Espace Technologique de St Aubin
Route de l'Orme 91195 Gif-sur-Yvette CEDEX,
France
Phone: +33-1-69852600
Fax: +33-1-69853409

KYOCERA Document Solutions Espana, S.A.

Edificio Kyocera, Avda. de Manacor No.2,
28290 Las Matas (Madrid), Spain
Phone: +34-91-6318392
Fax: +34-91-6318219

KYOCERA Document Solutions Finland Oy

Atomitie 5C, 00370 Helsinki,
Finland
Phone: +358-9-47805200
Fax: +358-9-47805212

KYOCERA Document Solutions**Europe B.V., Amsterdam (NL) Zürich Branch**

Hohlstrasse 614, 8048 Zürich,
Switzerland
Phone: +41-44-9084949
Fax: +41-44-9084950

**KYOCERA Bilgitas Document Solutions
Turkey A.S.**

Altunizade Mah. Prof. Fahrettin Kerim Gökay Cad. No:45
34662 ÜSKÜDAR İSTANBUL, TURKEY
Phone: +90-216-339-0020
Fax: +90-216-339-0070

**KYOCERA Document Solutions
Deutschland GmbH**

Otto-Hahn-Strasse 12, 40670 Meerbusch,
Germany
Phone: +49-2159-9180
Fax: +49-2159-918100

KYOCERA Document Solutions Austria GmbH

Wienerbergstraße 11, Turm A, 18. OG, 1100 Wien,
Austria
Phone: +43-1-863380
Fax: +43-1-86338-400

KYOCERA Document Solutions Nordic AB

Borgarfjordsgatan 11, 164 40 Kista, Sweden
Phone: +46-8-546-550-00
Fax: +46-8-546-550-10

KYOCERA Document Solutions Norge Nuf

Olaf Helsetsv. 6, 0619 Oslo, Norway
Phone: +47-22-62-73-00
Fax: +47-22-62-72-00

KYOCERA Document Solutions Danmark A/S

Ejby Industrivej 60, DK-2600 Glostrup,
Denmark
Phone: +45-70223880
Fax: +45-45765850

KYOCERA Document Solutions Portugal Lda.

Rua do Centro Cultural, 41 (Alvalade) 1700-106 Lisboa,
Portugal
Phone: +351-21-843-6780
Fax: +351-21-849-3312

KYOCERA Document Solutions**South Africa (Pty) Ltd.**

KYOCERA House, Hertford Office Park,
90 Bekker Road (Cnr. Allandale), Midrand, South Africa
Phone: +27-11-540-2600
Fax: +27-11-466-3050

KYOCERA Document Solutions Russia LLC.

Building 2, 51/4, Schepkina St., 129110, Moscow,
Russia
Phone: +7(495)741-0004
Fax: +7(495)741-0018

KYOCERA Document Solutions Middle East

Dubai Internet City, Bldg. 17,
Office 157 P.O. Box 500817, Dubai,
United Arab Emirates
Phone: +971-04-433-0412

KYOCERA Document Solutions Czech, s.r.o.

Harfa Office Park, Českomoravská 2420/15, Praha 9
Phone: +420-222-562-246

KYOCERA Document Solutions Inc.

2-28, 1-chome, Tamatsukuri, Chuo-ku
Osaka 540-8585, Japan
Phone: +81-6-6764-3555
<https://www.kyoceradocumentsolutions.com>

