 




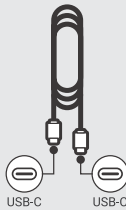
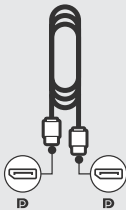
 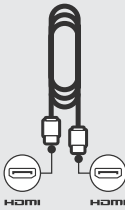
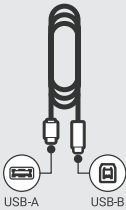
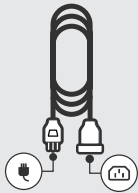
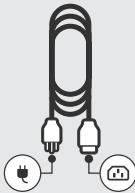






Dell Pro 75 Plus 4K Touch Monitor  
P7525QT

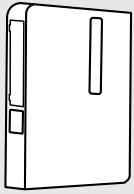


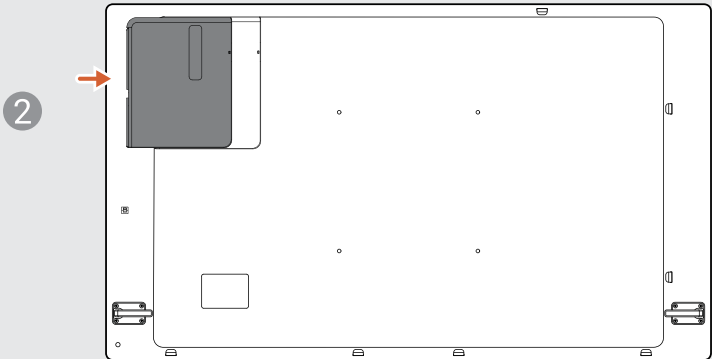


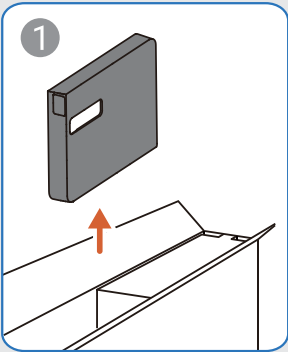

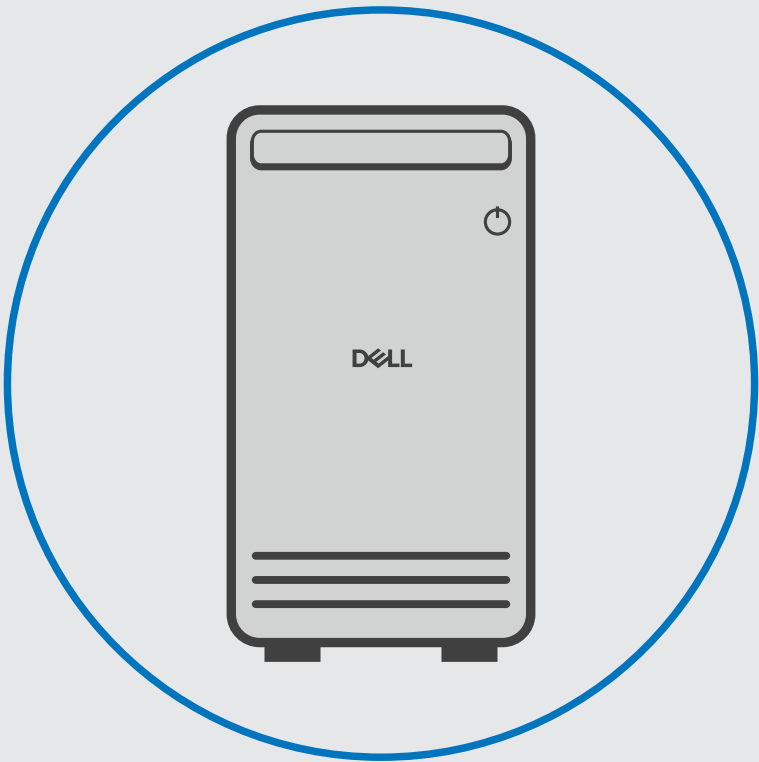



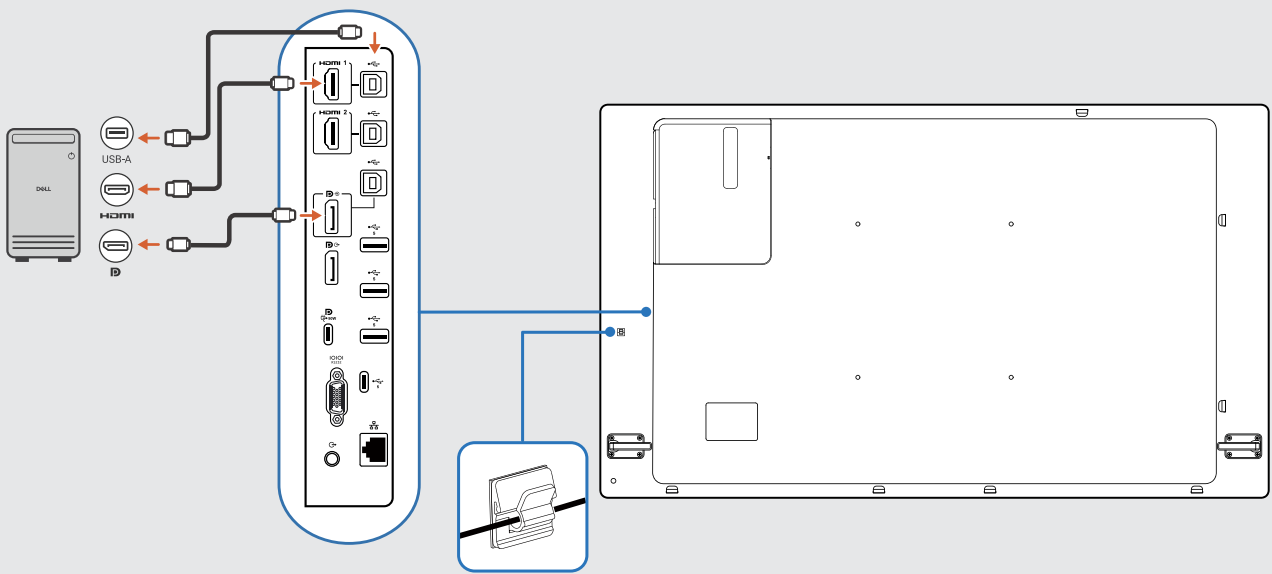



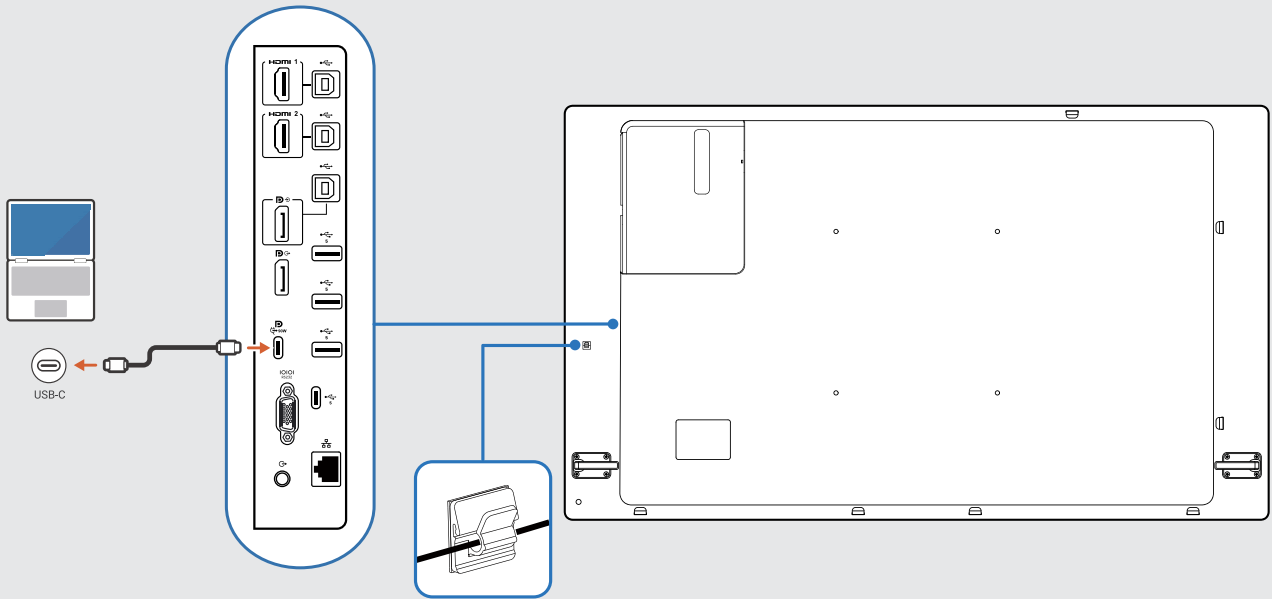



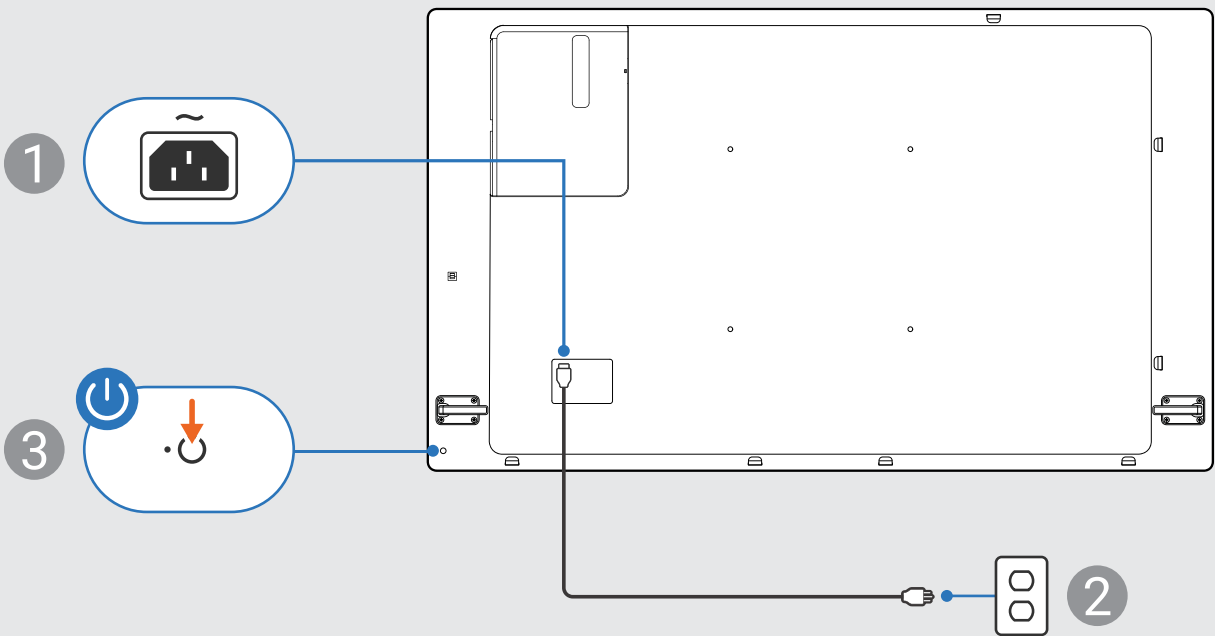




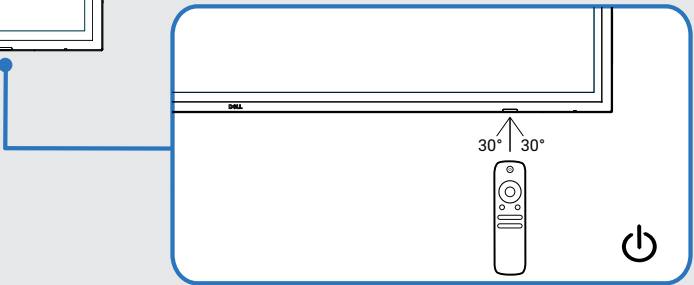


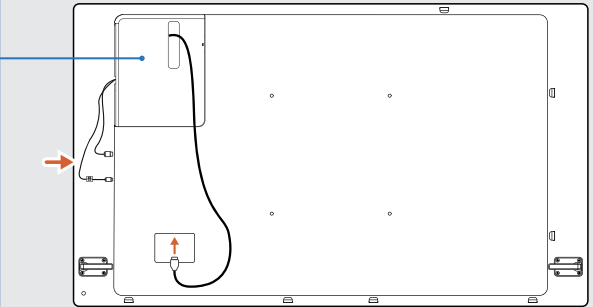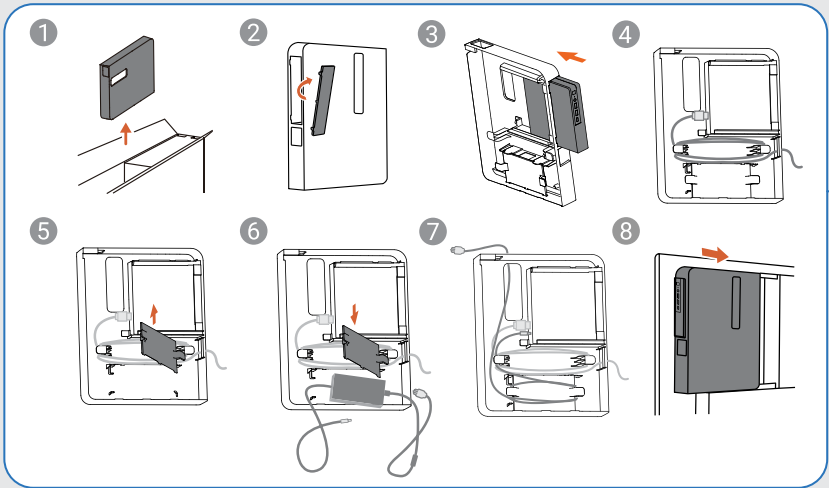

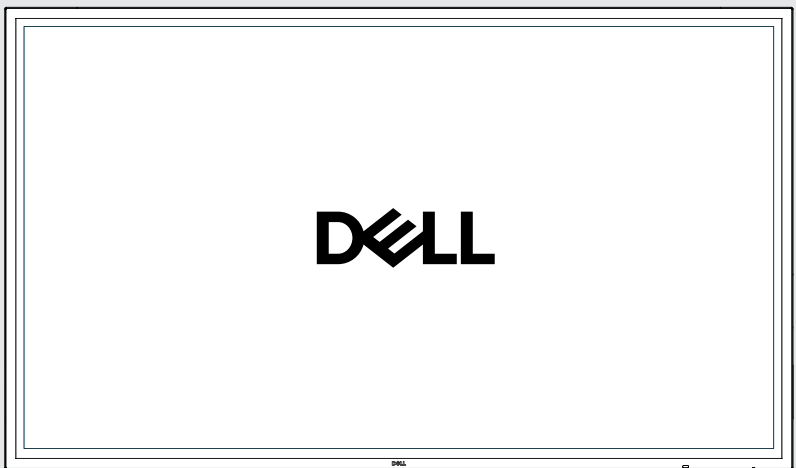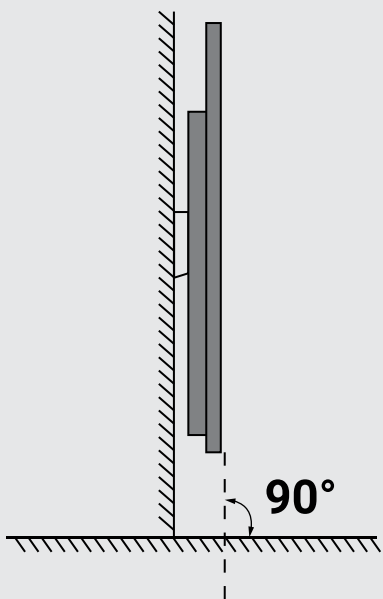


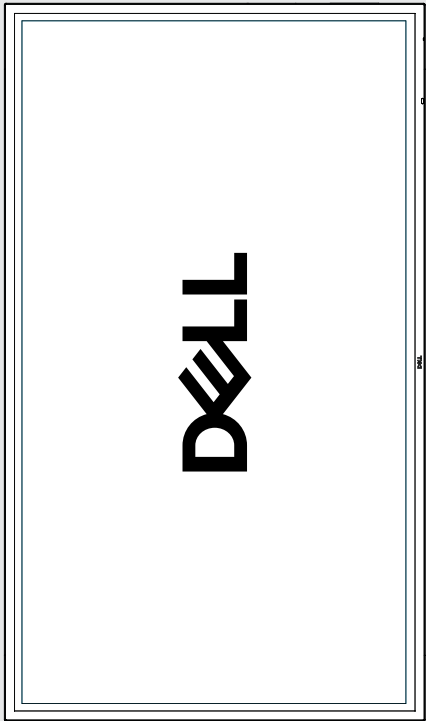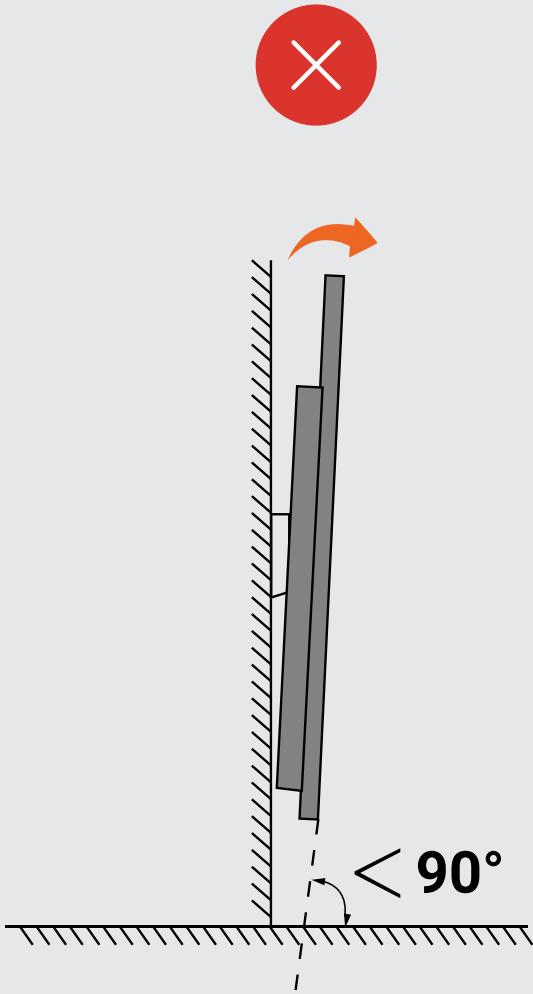




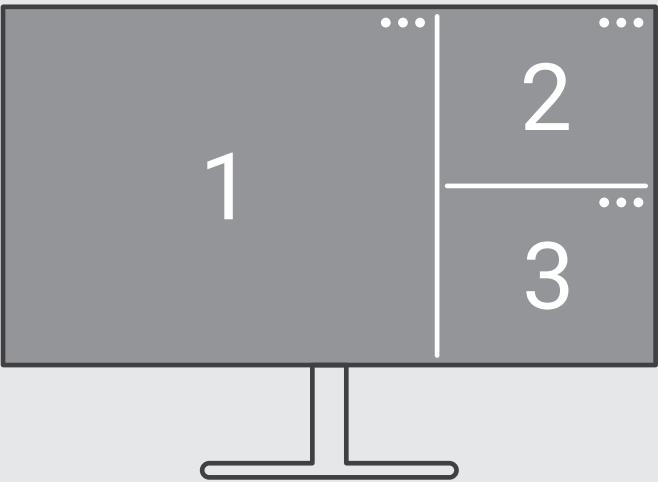

Dell Display and Peripheral Manager  
[Dell.com/support/ddpm](https://Dell.com/support/ddpm)

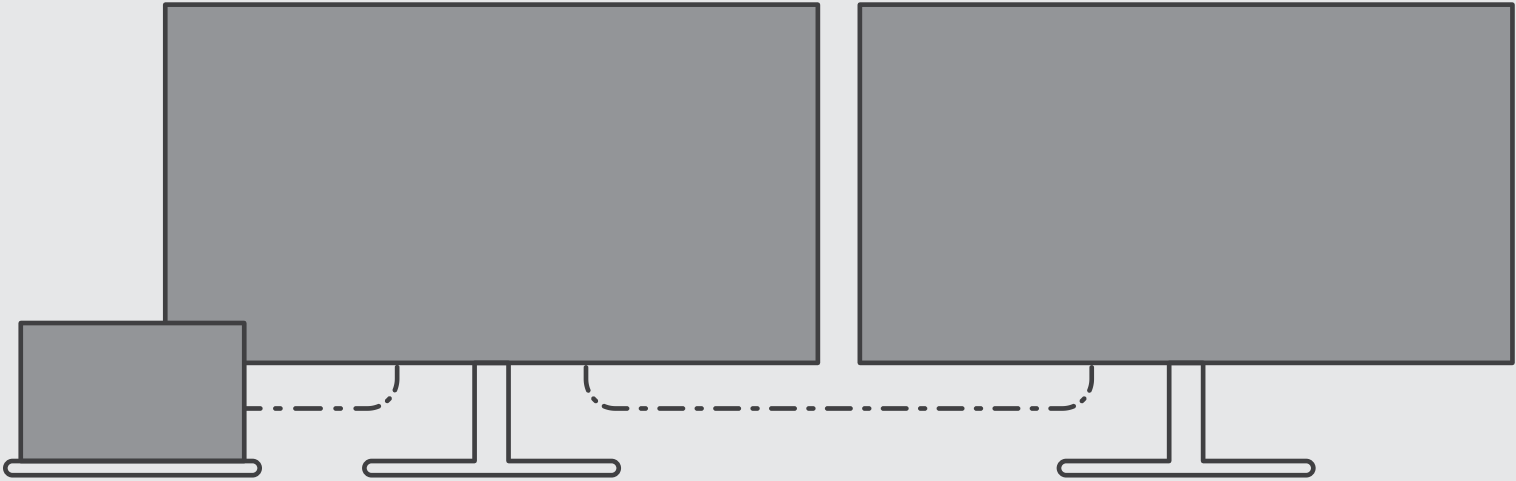

Daisy Chain

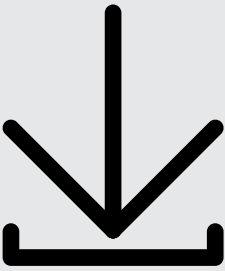

[Dell.com/support/P7525QT](https://Dell.com/support/P7525QT)